

Software Manual

weldMARK™ 3



This manual has been created by RAYLASE for their customers and employees.

RAYLASE reserves the right to modify the product described in this manual, as well as the information contained herein without notice.

The software contained in the product and the manual itself are copyrighted. All rights are reserved. The duplication of this manual, especially photocopying, scanning or imaging, even in part, and any other reproduction is permitted only with prior written approval of RAYLASE.

CONTENTS

1	INTRODUCTION	7
1.1	The weldMARK™ Software Package	7
1.1.1	Function overview	7
1.1.2	COM Automation Server API	7
1.1.3	TCP/IP test client	7
1.1.4	weldMARK™ COM Sample Program	8
1.2	Laser Safety	8
1.3	Manufacturer	8
1.4	Customer Service	8
2	REQUIREMENTS AND INSTALLATION	9
2.1	Hardware requirements	9
2.2	Software installation	9
2.3	Dongle Variations	9
3	INTRODUCTION TO THE SOFTWARE PACKAGE	11
3.1	Starting and Exiting weldMARK™	11
3.2	Basic Concepts	11
3.3	Access levels	12
3.3.1	"All Editing Functions" Access Levels	12
3.3.2	"Operator interface only" Access Level	22
3.3.3	"Touchscreen interface" Access Level	23
3.3.4	Changing the Access Level	24
4	WORKING WITH OBJECTS	25
4.1	Basic Principles	25
4.1.1	Selecting and deselecting Objects	25
4.1.2	Moving Objects	26
4.1.3	Locking and unlocking Objects	26
4.1.4	Object Types	26
4.1.5	Object Defaults	27
4.1.6	Object Properties	27
4.2	Importing and editing Vector Graphic Objects	29
4.2.1	Importing Vector Graphic Files	29
4.2.2	Defaults for Vector Graphic Objects	30
4.2.3	Vector Graphic Designer (VGD)	32
4.2.4	Properties of a Vector Graphic Object	36
4.2.5	Exporting Vector Graphics	40
4.3	Importing and editing Bitmap Objects	41
4.3.1	Importing Bitmap Files	41
4.3.2	Properties of a Bitmap Object	42
4.3.3	Defaults for Bitmap Objects	46
4.4	Adding and editing Marking Objects	47
4.4.1	Line Objects	47
4.4.2	Rectangle Objects	49
4.4.3	Polygon Objects	51
4.4.4	Polyline Objects	53
4.4.5	Bezier Objects	56
4.4.6	Text Objects	59
4.4.7	1D Barcode Objects	69
4.4.8	2D Barcode Objects	73
4.4.9	Drill objects	82
4.5	Object Fill	84
4.6	String rules	88
4.6.1	"Use TextMerge" string rule (one line objects)	89

4.6.2	"Use TextMerge" string rule (multi-line objects)	90
4.6.3	"Use AutoDate" string rule	91
4.6.4	String rule „AutoDate“, Format „Shift code“	92
4.6.5	"Supply string at start" string rule	93
4.6.6	"Supply string every mark" string rule	94
4.6.7	"Serialize w/current start value" string rule	95
4.6.8	"Get string from memory buffer" string rule	96
4.6.9	"Get string from memory buffer" string rule	97
4.6.10	"Custom string" string rule	98
5	TOOLS FOR EDITING MARKING OBJECTS	100
5.1	Aligning Objects	100
5.2	The "Dimensions" Toolbox	101
5.2.1	Positioning objects	101
5.2.2	Scaling and mirroring Objects	102
5.2.3	Changing the Object Size	103
5.2.4	Rotating Objects	106
5.2.5	Nudging Objects	106
5.2.6	Skewing Objects	107
5.3	Tiling	108
5.3.1	Tiling before Marking	109
5.3.2	Tiling while marking	111
5.4	Grid/Guidelines	114
5.4.1	Grid Lines	114
5.4.2	Guidelines	114
5.5	Appliance of the Zoom tools	117
6	TEMPLATES	118
7	USING AUTOMATION OBJECTS	119
7.1	"Wait for External Signal" Automation Object	120
7.2	"Set I/O Port" Automation Object	122
7.3	"Insert Time Delay" Automation Object	124
7.4	"Show MessageBox" Automation Object	125
7.5	"XY Table" Automation Object	127
7.6	"Rotary Indexer" Automation Object	129
7.7	"Custom Axis" Automation Object	131
7.8	Automation Object „Serial Output“	133
8	USING PROFILES	135
8.1	Marking Object Profile	136
8.2	Skywriting	138
8.2.1	Skywriting Parameter	139
8.2.2	Preview	140
8.3	Showing and hiding the Profile Manager	141
8.4	Creating and managing Profiles	141
8.4.1	Creating Profiles	141
8.4.2	Organizing Profiles	142
8.5	Applying Profiles	143
8.5.1	Applying a Profile from the Profile Manager to an Object	143
8.5.2	Applying a Profile from the Profile Manager to multiple Objects	143
8.5.3	Applying a Profile from the Profile Manager to all Objects	143
8.5.4	Copying a Profile from Object to Object	143
8.5.5	Saving Object Profile to the Profile Manager	143
8.6	Modifying a saved Profile	144
8.7	The Default Profile	145
8.7.1	Assigning the Parameters of a Marking Object to the Default Profile	145
8.7.2	Applying the Parameters of a different Profile to the Default Profile	145

8.7.3	Modifying the Default Profile	145
8.8	Importing and exporting profiles	146
8.8.1	Importing profiles	146
8.8.2	Exporting profiles	147
9	DEEP PROCESSING APPLICATIONS	148
9.1	Deep Cutting	148
9.1.1	Cutting Parameters	148
9.1.2	Profile Parameter	150
9.2	Trepanning	151
9.2.1	Trepanning Parameters	151
9.3	Deep Engraving	153
9.3.1	Import STL file	153
9.3.2	Positioning of a STL object	153
9.3.3	STL-Object settings	153
9.3.4	Adjust Layer parameters of a STL object	154
9.3.5	Saving options of a STL file in the job file	155
10	3D APPLICATIONS	156
10.1	Preparation for 3D Applications	156
10.1.1	Selecting a Scan Head for 3D Surfaces	156
10.1.2	Add a new Correction	156
10.2	Importing 3D Vector-Objects	158
10.3	Projection of a 2D-layout onto a 3D-surface	158
10.4	Marking with modified Correction Files	158
10.4.1	Correction File Generator	158
10.4.2	Creating correction files for different surfaces	159
10.4.3	Create a correction file for spheres	160
10.4.4	Create a correction file for cylinders	161
10.4.5	Create a correction file for inclined planes	161
11	EXECUTING MARKING OBJECTS (QUICKMARK)	162
11.1	PreviewMark	163
12	JOB SETTINGS, RUN JOB	164
12.1	The Job Manager	164
12.2	Editing the Job Settings	164
12.2.1	Job Settings - "Page Setup"	165
12.2.2	Job Settings „Repeat Process“	166
12.2.3	Job settings - "Step & Repeat"	167
12.2.4	Job Settings „Job Initialize“	168
12.2.5	Job Settings - "External Start"	169
12.2.6	Job Settings - "Stop Mark"	171
12.2.7	Job Settings - "Scan Head Offsets"	172
12.2.8	Job Settings - "Notes"	173
12.2.9	Job Settings - "Interlocks"	174
12.3	Executing a Job	175
12.3.1	Displays during a Job	176
12.3.2	Events during a Job	176
12.3.3	Run from Hardware	176
12.3.4	Stand Alone Operation	179
12.4	The "Mark on the Fly" Option	180
12.4.1	Mark-on-the-Fly extended (2. channel)	181
12.5	Master-Slave-Operating	181
12.6	Importing a Job	182

12.7	Printing a Job	183
13	SYSTEM TOOLS	184
13.1	Configure Tools	184
13.2	Configure I/O Cards	186
13.3	Laser Diagnostics Tool	187
13.4	"I/O Card Diagnostics" Tool	188
14	SYSTEM SETTINGS	190
14.1	Preferences	190
14.1.1	Settings for Marking Field	191
14.1.2	Workspace Settings	191
14.1.3	Hardware Configuration (without Control Card)	192
14.1.4	Hardware configuration (with control card)	194
14.1.5	Settings for the Job File	198
14.1.6	Editing the Host Interface Settings	199
14.1.7	Language Settings	199
14.1.8	Setting the LaserSaver	200
14.1.9	Setting up the Beam Home Position	201
14.2	System Properties Displays	202
14.3	Global Settings	203
14.4	System Security Settings	204
14.4.1	Password Protection	204
14.4.2	Job Files for restricted Access Levels	204
14.5	Backing up System Settings	205
14.5.1	Backing up System Settings	205
14.5.2	Restoring System Settings	205
15	CALIBRATING THE MARKING FIELD	206
15.1	Correction of Mechanical Tolerances~	206
15.2	The Correction-File Calibration Wizard	207
15.3	Multipoint Correction	208
15.3.1	Creating a new Correction File	208
15.3.2	Performing the Multipoint Correction	209
15.4	Adding a new Correction File	210
16	CONNECTING THE LASER	213
16.1	Configuring a Laser Driver	213
16.2	Adding a new Laser Driver	216
16.3	Calibrating the Visible Pointer	217
17	CONNECTING DEFLECTION UNITS	219
17.1	Connecting multiple Control Cards	219
17.2	Connecting multiple Deflection Units to a Control Card	219
18	CONNECTING TO EXTERNAL DEVICES	220
18.1	Standard I/O Card / Interlock Card	220
18.2	Operating Stepper Motors	222
18.2.1	Installing the Plug&Play Drivers in Windows	222
18.2.2	Configuring the Motor Control Settings	222
19	PROGRAMMABLE INTERFACES	228
19.1	Remote Interface	228
19.1.1	TCP/IP Test Client	228
19.2	COMserver Interface	229
	INDEX	231

1 INTRODUCTION

weldMARK™ is a powerful and flexible laser processing software suite. The software package sets new standards with its flexible, powerful and easy to learn user interface. It is easy for the user to create or import text, barcode or graphic elements and to use them to create a complete marking job. Objects and laser-specific parameters can be edited with simple entries.

The weldMARK™ software package supports the following RAYLASE control cards: SP-ICE, SP-ICE-1 PCI PRO and RLC-USB.

1.1 The weldMARK™ Software Package

The weldMARK™ software package consists of the following modules:

- weldMARK™ graphical user interface
- COMServer (ActiveX) interface
- TCP/IP Test Client
- weldMARK™ COM-Tester

The sections below provide a brief description of these modules.

1.1.1 Function overview

The following weldMARK™ functions are particularly important:

- Opening up to ten jobs simultaneously, easy selection of opened jobs with just one mouse click
- Support for various laser types, precise control of laser parameters
- Creation of linear, rectangular, polygonal, drill and bezier objects
- Output of drill objects as single points or grid points
- Scaling, moving and rotation of objects on screen
- Use of objects as templates in the background for easy positioning of marking objects
- Import of wide types of vector and bitmap files
- Support for all TrueType™ fonts installed on the computer (displayed filled or as contour)
- Serialization functions for text and barcode objects
- Easy creation of automation scripts
- Programming of alarms, warnings, user entries for job numbers and batch numbers
- Control of rotary tables, XY tables or one-dimensional movements using the integrated 4-axis motor control
- Detection of object movements with an optional encoder
- Password protection: Restriction of users for performing pre-prepared jobs
- weldMARK™ includes all the elements and tools required for the integration into an automated process environment. Most procedures can efficiently be operated from within the program itself.
- Support of 2-axis standard scan heads and 3-axis subsystems (AXIALSCAN, AXIALSCAN motorized, FOCUSHIFTER)

1.1.2 COM Automation Server API

weldMARK™ provides a COM automation server interface. This enables external programs to access the library functions in weldMARK™. For more detailed information, refer to the COM-Server manual, which is available from RAYLASE.

1.1.3 TCP/IP test client

The TCP/IP test client allows the weldMARK™ software's server interface to be tested by a remote computer. Any errors detected can be corrected over the network using the TCP/IP test client.

The Appendix includes instructions for starting and using the TCP/IP test client.

1.1.4 weldMARK™ COM Sample Program

The weldMARK™ software is supplied with a COM sample program with source text. Use this simple COM automation server program as a template for programming your own application programs.

1.2 Laser Safety

The user is responsible for safe operation and for safeguarding the surrounding area against hazards that can be caused by laser radiation. OEM customers must ensure compliance with all local and national regulations.

WARNING:

Turn on the PC before turning on the laser system. This prevents the laser from behaving in an uncontrolled manner when the PC is turned on.

Check your application carefully before using the laser system. Defective software can block the entire system and lead to uncontrolled operation of laser or scan head.

1.3 Manufacturer

RAYLASE AG
Argelsrieder Feld 2-4
82234 Wessling
Germany
Tel.: +49 (0) 81 53 - 88 98 - 0
Fax: +49 (0) 81 53 - 88 98 - 10
<http://www.raylase.de>
E-mail: info@raylase.de

1.4 Customer Service

RAYLASE Customer Service can assist you with any queries or problems with the subsystem or this manual. Before contacting Customer Service, assure whether your question can be resolved with the provided instructions on CD.

If you need further assistance, you can contact RAYLASE Customer Service from Monday to Friday between 08:00 and 17:00.

Germany (Wessling)
Tel.: +49 (0) 81 53 - 88 98 – 0
E-Mail: support@raylase.de

...simply request the Customer Service

2 REQUIREMENTS AND INSTALLATION

This chapter provides you with an overview of the system requirements and the necessary steps to be taken to install weldMARK™.

2.1 Hardware requirements

The following hardware configuration is required at the least:

- Intel Pentium or compatible computer with operating system Windows Vista or Windows 7 (32bit).
- CD-ROM drive for installing the software
- 1024 MB RAM or more is recommended
- 150 MB free disk space on the local drive

2.2 Software installation

To install weldMARK™ proceed with the following steps:

- Start your computer and log in as administrator.
- Insert the weldMARK™ installation CD in the CD-ROM drive.
The installation routine starts automatically.
- Click on the [Software installation](#) button and after that click on the [Installation weldMARK](#) button.
- Follow the instructions on the screen.

2.3 Dongle Variations

The weldMARK™ software runs with the supplied hardware key (dongle) only. The dongle is plugged into a free USB port on the computer. Every computer having weldMARK™ installed requires a separate dongle. The following table shows different dongle variations and the activated functional range.

Feature	Standard	Premium	3D
MARK	+	+	+
RUN	+	+	+
RUN FROM HARDWARE	+	+	+
AUTOMATION	+	+	+
CALIBRATION	+	+	+
MOTF		+	+
PREVIEW MARK	+	+	+
HOST-INTERFACE	+	+	+
MULTIPLE CARDS	+	+	+
SAVE TO CONTROLLER (Download to HW)	+	+	+
MOTORCONTROL	+	+	+
TILING	+	+	+
POLYLINE, PREVIEW Outline, WS Rotation	+	+	+
FOCUS SHIFTER		+	+
AXIALSCAN motorized		+	+
IPG LASER	+	+	+
SPI LASER	+	+	+
SERIAL LASER	+	+	+

Feature	Standard	Premium	3D
BEZIER OBJECT	+	+	+
NEW BITMAP ALGORITHMS	+	+	+
NEW IMPORT FILTER	+	+	+
LAYERS	+	+	+
ANCHOR POINT	+	+	+
MIRROR GROUP	+	+	+
JOB DEPENDANT OFFSETS	+	+	+
JOB WORKSPACE ROTATION	+	+	+
FONT COMPILER (Tools)	+	+	+
CORRECTION EDITOR (Tools)	+	+	+
F-THETA COR (Tools)	+	+	+
MASTER-SLAVE		+	+
VECTOR GRAPHIC DESIGNER	+	+	+
SKY WRITING	+	+	+
GENERATE CORRECTION (3D)			+
3D MARKING			+
SP-ICE 2 (MONITOR)	+	+	+
MARK & PREVIEW	+	+	+
FINE FOCAL POINT ADJUSTMENT		+	+
IMPORT TXT AS POLYLINE			+
SPOT OFFSET	+	+	+
TREPANNING			+
DEEP CUTTING		+	+
DEEP ENGRAVING			+
MULTIPOINT CORRECTION EDITOR	+	+	+
IN LINE PARAMETER SWITCHING		+	+

3 INTRODUCTION TO THE SOFTWARE PACKAGE

3.1 Starting and Exiting weldMARK™

Starting weldMARK™

Select *Start >All Programs >RAYLASE >weldMARK*. The program starts with the set access level (→ page 24, Changing the Access Level).

When you start weldMARK™ a new job is created automatically. You can disable this and specify that weldMARK™ should start with a particular existing job. (→ page 198, Settings for the Job File)

Exiting weldMARK™

- Select *File >Exit*.

3.2 Basic Concepts


<i>Marking objects</i>	Marking objects represent the graphical elements and texts to be marked by the laser. The following object types are available in weldMARK™: <ul style="list-style-type: none"> ■ Graphic objects, i.e. imported vector or bitmap graphics ■ Line ■ Rectangle ■ Polygon ■ Polyline ■ Bezier ■ Text ■ Barcode... ■ Drill... ■ Vector-Object → page 25, Working with Objects
<i>Template</i>	A template is an object that won't be marked. For example, it can be used to align objects. → page 118, Templates
<i>Automation-Objects</i>	Automation objects allow communication with the user via dialogue windows and allow control of external components. → page 25, Working with Objects
<i>Profile</i>	Every marking object is assigned a profile, which specifies the parameters for the laser marking. → page 135, Using Profiles
<i>Job</i>	A job is a collection of objects and settings. The settings determine the actions of the scan head, the laser and the additional equipment. → page 164, Job Settings, run Job

3.3 Access levels

weldMARK™ has three access levels that allow different types of access to the software's functions. The program starts with the preset access level (→ page 24, Changing the Access Level). When changing access levels, password protection can be applied (→ page 204, System Security Settings).

Access levels	Description
<i>All editing functions</i>	All software functions can be used without restrictions. → page 12, "All Editing Functions" Access Levels
<i>Operator interface only</i>	Only saved jobs can be opened and executed. These jobs cannot be modified. → page 22, "Operator interface only" Access Level
<i>Touchscreen interface</i>	Only saved jobs can be opened and executed. These jobs cannot be modified. The design of this access level is optimized for touchscreens. Mouse control is also possible. → page 23, "Touchscreen interface" Access Level

3.3.1 "All Editing Functions" Access Levels

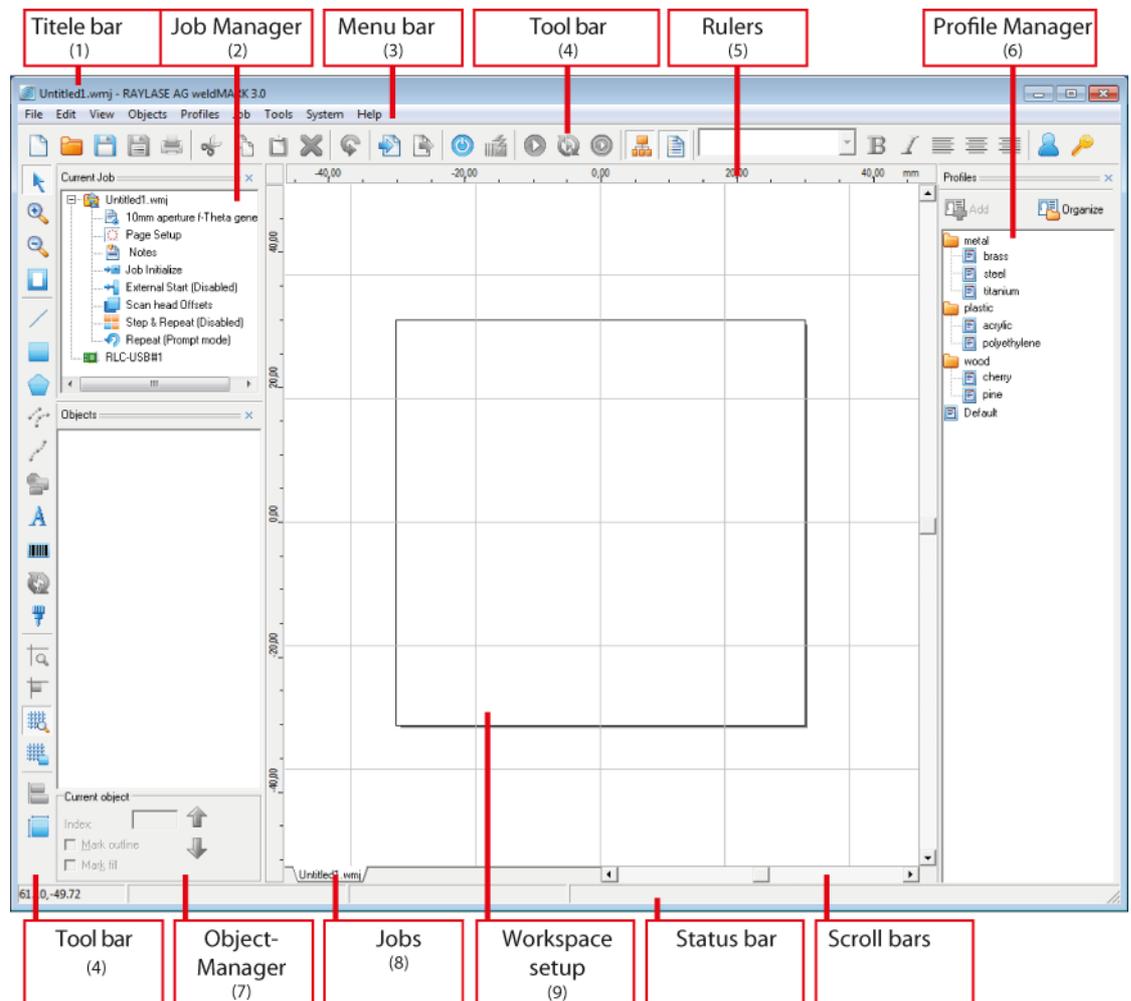

(1) Title bar


The title bar shows the name of the current job, the company name, the dongle type and the name of the program.

(2) Job-Manager

The Job Manager shows the name of the current job with the elements of the job settings below. Additionally the installed control cards are listed.

To view or edit a job setting, double click on the corresponding element. Right clicking on the element will display a pop-up menu containing element-specific options.

→ page 164, Editing the Job Settings

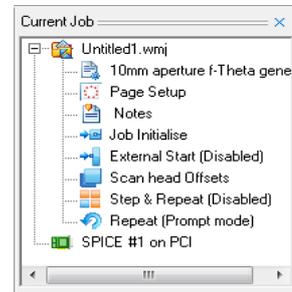**(3) Menu bar**

The menu bar contains the following menus (some menu commands are only available after setting the corresponding function or setting up the corresponding hardware drivers):

File menu		
<i>New</i>	Opens a new job with a blank workspace.	Up to ten jobs can be opened simultaneously.
<i>Open Job...</i>	A previously saved job can be opened.	
<i>Close Jobs</i>	Closes the current job.	
<i>Close All Jobs</i>	Closes all open jobs.	
<i>Import...</i>	Allows you to select and import objects in different file formats.	
<i>Export...</i>	Allows you to export the currently selected weldMARK™ objects in various file formats.	
<i>Import and Export Profiles...</i>	Opens the Import/Export Wizard for profiles. Profiles can be exported from or imported to the Profile Manager.	
<i>Save Job</i>	Saves the current job. The first time you save a new job, the <i>Save Job as</i> window will be opened. File name and storage location have to be specified.	
<i>Save Job as...</i>	Allows you to save an open job under a new name.	
<i>Save Job to Embedded Controller</i>	Jobs can be saved to a stand alone control card and executed from there without the need for a PC (→ page 179, Enabling "Save to stand alone control card" Mode).	
<i>Print Setup...</i>	Allows you to enter settings for the printer you want to use.	
<i>Print</i>	Allows you to enter print settings, change printer settings and start printing the current job.	
<i>Exit</i>	Exits the weldMARK™ program.	

Menu Edit	
<i>Undo</i>	Reverses the last action performed. You can undo the last ten actions.
<i>Cut</i>	Removes all selected objects from the job and sends them to the clipboard.
<i>Copy</i>	Copies all selected objects to the clipboard.
<i>Insert Point</i>	Pastes objects copied or cut in weldMARK™ into the current job.
<i>Paste Special</i>	Allows objects on the clipboard to be pasted into the current job as image or text objects. This command enables you to paste objects from other applications.
<i>Delete Element</i>	Deletes all selected objects.
<i>Select All</i>	Selects all objects contained in the current job.
<i>Snap To Guidelines</i>	If this function is enabled, objects that are moved get aligned with the guidelines.
<i>Snap To Grid</i>	If this function is enabled, objects that are moved get aligned with the grid lines.

View menu	
<i>Host-Monitor</i>	This command shows and hides the Job-Manager. The host monitor allows you to observe the communication between a host and weldMARK™ (→ page 199, Editing the Host Interface Settings). This option is only available if the remote interface is activated.
<i>Job Manager</i>	This command shows and hides the Job-Manager.
<i>Object-Manager</i>	This command shows and hides the Object-Manager.
<i>Profile-Manager</i>	This command shows and hides the Profile-Manager.
<i>Motor-Manager</i>	Only available if a motor control card is installed. Opens the window for operating the optional stepper motor control card.
<i>Guidelines</i>	Shows or hides guidelines.
<i>Grid</i>	Shows or hides gridlines.
<i>Rulers</i>	Shows or hides rulers.
<i>Millimeters</i>	Selects the unit for the ruler display and for the input dialogue boxes.
<i>Inches</i>	
<i>Bits</i>	

Objects menu													
<i>Add</i>	The following submenus are available: <table border="1"> <tr> <td><i>Automation...</i></td> <td>Opens a window for selecting an automation object.</td> </tr> <tr> <td><i>Barcode...</i></td> <td rowspan="9">Inserts the selected object in the center of the work-space.</td> </tr> <tr> <td><i>Automation</i></td> </tr> <tr> <td><i>Line</i></td> </tr> <tr> <td><i>Polygon</i></td> </tr> <tr> <td><i>Rectangle</i></td> </tr> <tr> <td><i>Text</i></td> </tr> <tr> <td><i>Polyline</i></td> </tr> <tr> <td><i>Bezier</i></td> </tr> <tr> <td><i>Vector</i></td> </tr> </table>	<i>Automation...</i>	Opens a window for selecting an automation object.	<i>Barcode...</i>	Inserts the selected object in the center of the work-space.	<i>Automation</i>	<i>Line</i>	<i>Polygon</i>	<i>Rectangle</i>	<i>Text</i>	<i>Polyline</i>	<i>Bezier</i>	<i>Vector</i>
<i>Automation...</i>	Opens a window for selecting an automation object.												
<i>Barcode...</i>	Inserts the selected object in the center of the work-space.												
<i>Automation</i>													
<i>Line</i>													
<i>Polygon</i>													
<i>Rectangle</i>													
<i>Text</i>													
<i>Polyline</i>													
<i>Bezier</i>													
<i>Vector</i>													
<i>Convert To Template</i>	Converts the selected object into a template. The template is automatically added to the Job Manager.												
<i>Lock Object/ Unlock Object</i>	Locks or releases the selected object for editing.												
<i>Lock All/ Unlock All</i>	Locks or releases all objects in the job for editing.												
<i>Defaults...</i>	Allows you to make default settings for various object types (→ page 27, Object Defaults).												
<i>Dimensions...</i>	Allows you to change the size, shape and position of the selected objects.												
<i>Properties...</i>	Allows you to edit various parameters of the selected objects.												
<i>Vector Design</i>	Opens the Vector Graphic Designer (→ page 32, Vector Graphic Designer (VGD)).												
Profiles menu													
<i>Add to Profiles...</i>	The parameters of the selected object can be combined under a profile name and added to the Profile Manager under that name.												
<i>Organize Profiles...</i>	Allows you to specify the folder structure for the profiles.												

Job Menu	
<i>Preview</i>	Creates a frame representing the rectangular boundaries of the selected objects using the visible pointer and opens the "Preview" window. This window allows you to adjust the boundaries of the objects to the target object. (To activate the visible pointer → page 213, Configuring a Laser Driver).
<i>QuickMark</i>	Allows you to start execution of either the selected objects or all objects included in the job. Automation objects are skipped.
<i>Run...</i>	Allows you to start execution of the current job including all marking and automation objects.
<i>Run from Hardware...</i>	To ensure that jobs are executed without interruption, they are first sent to the control card and then started. This function is particularly useful when using a slow PC. (→ page 176, Run from Hardware)
<i>Convert Template to Object</i>	Converts the selected template into a marking object.
<i>Jobs</i>	View of open jobs.
<i>Settings...</i>	Allows you to make job-specific settings.

Tools Menu	
<i>Configure Tools</i>	Allows you to add external programs to the Tools menu.
<i>Align...</i>	Allows you to align selected objects with one another based on particular settings.
<i>Open App.Data Folder</i>	Opens the directory where weldMARK™ automatically saves specific files for windows.
<i>Grid/Guidelines...</i>	Allows you to set parameters for the grid and for guidelines.
<i>Configure I/O Cards...</i>	Starts the Configuration Wizard for the I/O card.
<i>I/O Card&Diagnostics...</i>	Allows you to check the ports of the standard I/O board.
<i>Laser Diagnostics Tool</i>	Allows you to set parameters for laser radiation and to test the position and effect of the laser beam.
<i>Reduce power to minimum</i>	Using this menu item, the laser power can be set to the registered minimum laser power [minbits] in the Config file. This function is not available for CO ₂ lasers.
<i>Generate Correction...</i>	Opens a menu for creating 3D correction files via STL files.

System Menu		
Preferences...	You can set various preferences in weldMARK™.	
Properties...	Displays the properties of the operating system and relevant hardware for weldMARK™.	
Globals...	Allows you to enter general settings for laser power, marking speed and marking offset. weldMARK™ can be adjusted for changing external parameters, for example, diminishing laser power.	
Run from Host...	Sets weldMARK™ to host mode, enabling it to accept commands from external host programs. The menu item is only available if the remote interface is enabled.	
Security	Access level	Allows you to change the access level. Any changes take effect immediately.
	Change Password	You can set a password for changing the access level, changing the password or cancelling password protection.
	Startup Options	Sets the access level used to start the program.
Backup...	Opens the Browse for Folder window. In the tree structure of this window, you can select a storage location for the backup file containing the weldMARK™ system settings.	
Restore...	Opens the Restore Application Settings window. In this window, you can select a backup file. Opening the file restores the saved system settings for weldMARK™.	

Help Menu	
Content & Index	Opens the weldMARK™ online help.
Online Updates...	Displays information about the current program version. Clicking on Check for Updates calls up the RAYLASE homepage, provided you are connected to the Internet.
About...	Displays the currently installed weldMARK™ version number. The Info button can be used to obtain additional copyright information.

(4) Toolbars

The toolbars provide fast access to frequently used functions.

The toolbar below the menu bar contains the following standard commands:

	New		Mark on the Fly
	Open Job...		QuickMark
	Save in		Starting execution
	Save as		Monitor Mode (For SP-ICE-2 only)
	Print		Show/Hide Job Manager
	Cut		Show/Hide Profile Manager
	Copy		Text attribute bold
	Insert Point		Text attribute italics
	Delete Element		Align text left
	Undo		Center text
	Import...		Align text right
	Export...		Change Access Level
	Nd:YAG only Reduce laser power to minimum		Change Password

The toolbar on the left-hand side of the screen contains functions for adding, selecting and manipulating objects:

	Select objects		Insert text object
	Zoom in		Insert barcode object
	Zoom out		Insert automation object
	Full view		Insert drill object
	Insert line object		Show/Hide guidelines
	Insert rectangle object		Snap To Guidelines
	Insert polygon object		Show/Hide grid
	New polyline		Snap To Grid
	Insert bezier object		Align...
	New vector object		Dimensions

(5) Rulers


The rulers can be displayed with the following units: "Millimeters", "Inches" or "Bits". The rulers are scaled automatically based on the correction file for the deflection unit lens.

(6) Profile-Manager

The Profile Manager displays a hierarchical overview of the profile folders and profiles created by the user. Profiles can be applied to selected objects or to all objects in a job. To do this, right click on the corresponding profile and select the required option in the pop-up menu. Double clicking on the profile allows you to modify its parameters.

Related Sections:

→ page 135, Using Profiles

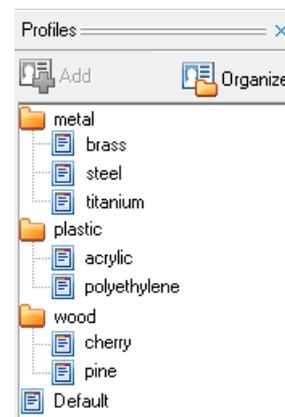

(7) Object-Manager

The Object Manager lists all marking and automation objects in the job. The objects appear in the order in which they were created and in which they will be executed. You can change the order of the objects using the blue arrow buttons in the Object Manager screen.

You can select a contiguous list of objects using the Shift key, or a non-contiguous list using the Ctrl key. To select a contiguous list, hold down the Shift key and click on the first object in the list and then the last object in the list. To select a non-contiguous list, click the first object, then hold down the Ctrl key and select the other objects you want to add. A selected contiguous list can be changed to a non-selected list.

The number of objects within a job is given in the title line of the Object Manager. You can select an object by clicking the Object Manager or by entering the appropriate index in the *Index* field.

Using the option *Mark outline* certain objects can be tagged to be contour marked or not. Select this option for when an object that has no contour (such as a Bitmap object) is to be marked.

Select the option *Mark fill* to mark the content of objects that have the fill feature.

(→ page 25, Working with Objects)


(8) The “Jobs” Tab

The tabs at the bottom of the screen provide an overview of the currently open jobs and allow you to select these jobs directly.



(9) Workspace

The size of the workspace can be set individually or automatically adjusted to the size of the operating field of the deflection unit(→ page 165, Job Settings - "Page Setup"). The maximum size of the workspace is determined by the size of the deflection unit's operating field. Objects that are partly located outside the workspace are not marked.

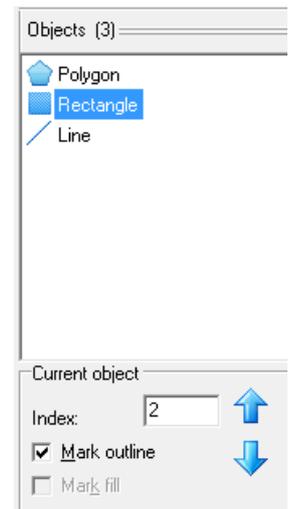

Popup Menu

The pop-up menu provides fast access to frequently used functions for editing objects.

- Right click on an object to open the pop-up menu.




The following functions are available:

<i>QuickMark...</i>	Allows you to start execution of either the selected objects or all objects included in the job. Automation objects are skipped.
<i>PreviewMark...</i>	Creates a frame representing the rectangular boundaries of the selected objects using the visible pointer and opens the "Preview" window. This window allows you to adjust the boundaries of the objects to the target object. (To activate the visible pointer → page 213, Configuring a Laser Driver).
<i>Cut</i>	Removes all selected objects from the job and sends them to the clipboard.
<i>Copy</i>	Copies all selected objects to the clipboard.
<i>Convert To Template</i>	Converts the selected object into a template. The template is automatically added to the Job Manager.
<i>Lock Object/ Unlock Object</i>	Locks or releases the selected object for editing.
<i>Delete Element</i>	Deletes all selected objects.
<i>Add to Profiles...</i>	The parameters of the selected object can be combined under a profile name and added to the Profile Manager under that name.
<i>Copy Profile</i>	Copies the profile for the selected object to the clipboard.
<i>Paste Profile</i>	Applies the profile saved to the clipboard to the selected object.
<i>Dimensions</i>	Allows you to change the size, shape and position of the selected objects.
<i>Properties</i>	Allows you to edit various parameters of the selected objects.
<i>Design...</i>	Only for bezier and vector graphic objects. The shape of selected objects can be changed. → page 32, Vector Graphic Designer (VGD)
<i>Teach-In...</i>	Only available for polyline and bezier objects. The shape of selected objects can be changed. → page 55, Setup of a Polyline object → page 58, Modifying a Bezier Object
<i>Tiling before Marking</i>	Used to mark oversized objects that are bigger than the marking area. → page 109, Tiling before Marking
<i>Set Anchor</i>	Specifies the point of reference of the object.
<i>Tile</i>	Used to divide oversized objects that are bigger than the marking area. → page 109, Tiling before Marking

3.3.2 "Operator interface only" Access Level

This access level allows the user to open and execute prepared jobs. The jobs to be executed must be located in the pre-set folder (→ page 198, Settings for the Job File).

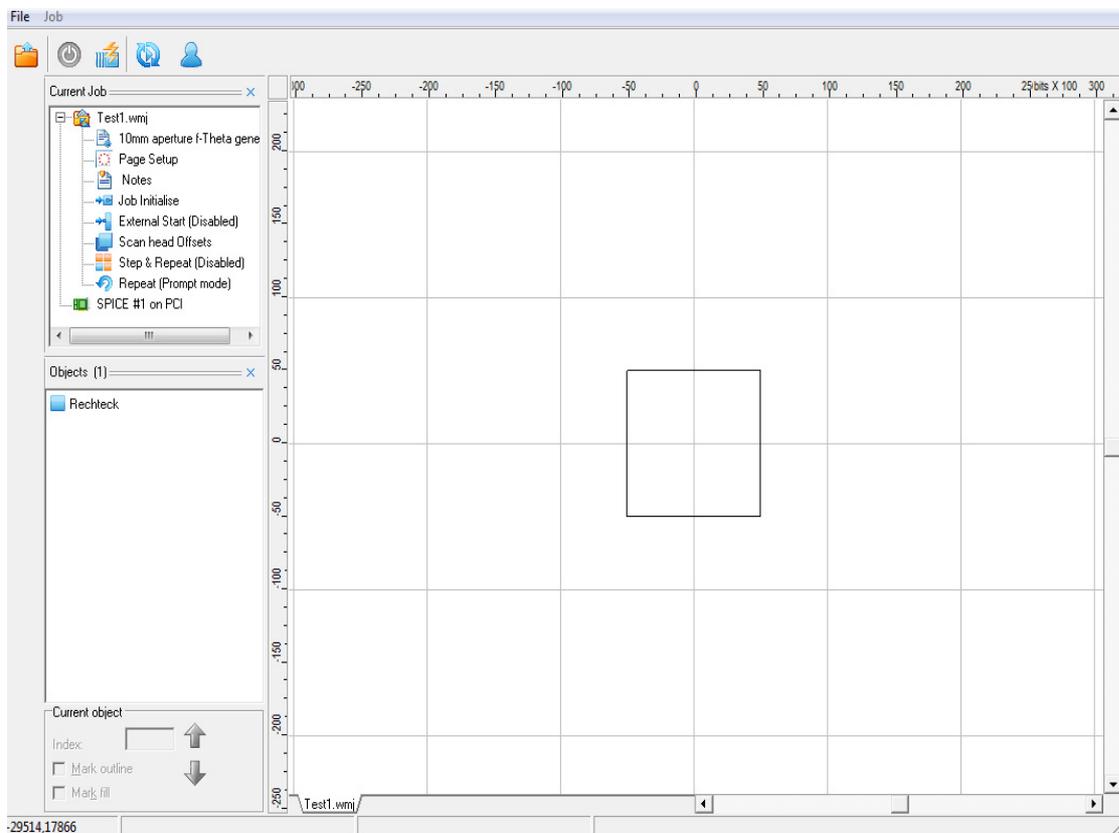


The following functions are available:

<i>File >Open Job...</i>		A previously saved job can be opened.
<i>File >Exit</i>		Exits the weldMARK™ program.
<i>Reduce laser power to minimum</i>		Nd:YAG only Reduce laser power to minimum
<i>Mark on the Fly</i>		Mark on the Fly
<i>Job >Run...</i>		Allows you to start execution of the current job including all marking and automation objects.
<i>Change Access Level</i>		If password protection is activated, you need to enter the password to change access level.

3.3.3 "Touchscreen interface" Access Level

This access level allows the user to open and execute prepared jobs. The jobs to be executed must be located in the pre-set folder (→ page 198, Settings for the Job File).

The design of the user interface is optimized for touch screens. Mouse control is also possible.

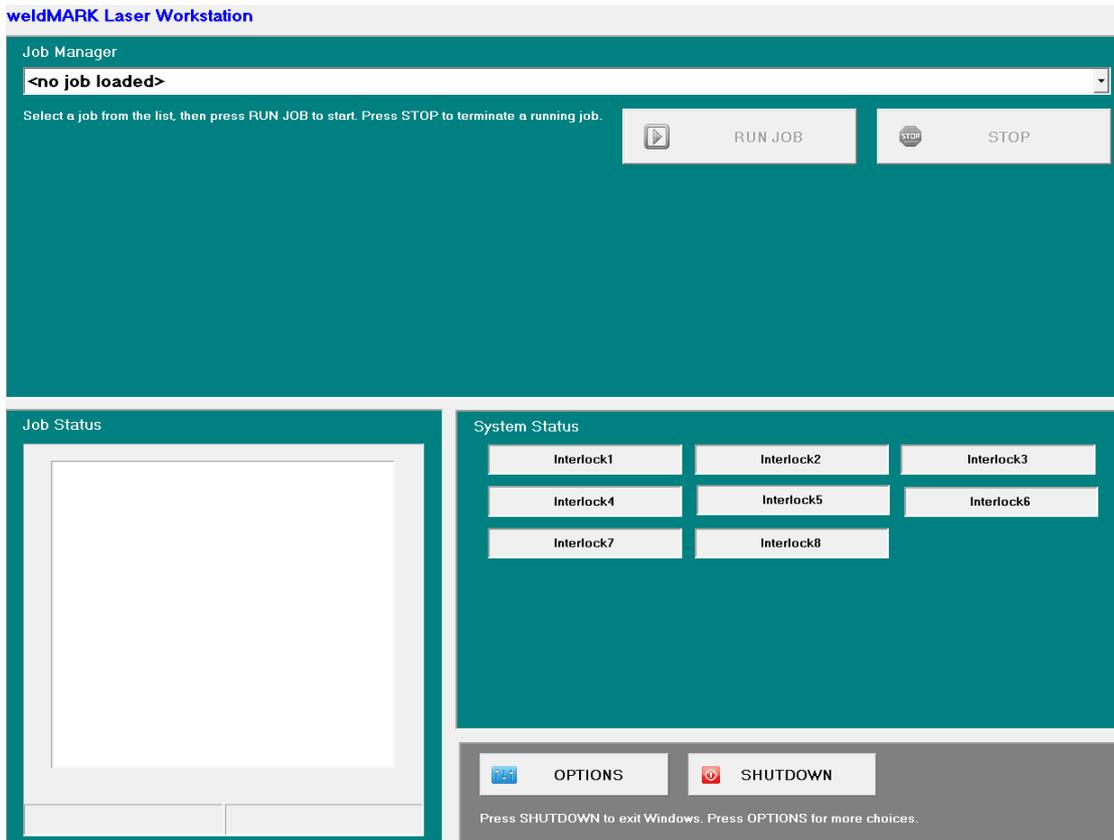

The following functions are available:


<i>Job Manager</i>	A previously saved job can be opened. Only one job at a time can be opened.
<i>Run Job</i>	Executes the open job.
<i>Stop</i>	Stops execution of the job.
<i>Job Status</i>	Shows the workspace and the marking objects positioned on it.
<i>System Status</i>	The fields show the status of interlocks 1 to 8. Depending on the setting, a particular status can be a prerequisite for marking individual or all objects. The names of the interlock fields can be changed.
<i>Options</i>	Allows you to adjust the job for changed external conditions (→ page 203, Global Settings) or to change the access level (→ page 24, Changing the Access Level).
<i>Shutdown</i>	The weldMARK™ program will end and Windows will close.

3.3.4 Changing the Access Level

"All editing functions" or "Operator interface only" Access Level



- Select the Menu Item *System >Security >User Access* or click on the *Change Access* icon. If password protection is activated, you will be prompted to enter the password. The dialogue on the right opens.
- Choose the desired access level.

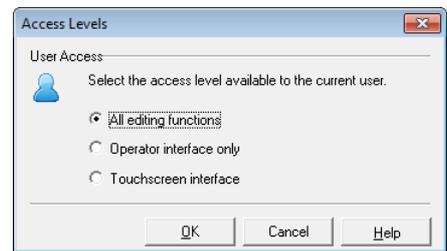

"Touchscreen interface" Access Level

- Touch the *OPTIONS* button. The dialogue on the right opens.
- Touch the *FULL ACCESS* button. If password protection is activated, you will be prompted to enter the password.



4 WORKING WITH OBJECTS

This chapter provides an overview of the objects available in weldMARK™ and describes how to use them.

4.1 Basic Principles

4.1.1 Selecting and deselecting Objects

Objects must be selected in order to edit them or display their properties. You can select multiple objects at the same time. Selected objects are identified by squares (resizing handles) around them and by emphasis in the Object Manager.



Selection tool



Arrow cursor

Selecting Objects with the Selection Tool

- Select the *Selection tool* icon in the toolbar.
- Click on the desired object with the arrow cursor.
- To select multiple objects drag the cursor with pressed down right mouse button over all objects that need to be selected. Alternatively hold down the shift button and select each object with the cursor that needs to be selected.

Selecting Objects using the Object Manager

- Click on the desired object in the Object Manager.
- To select multiple objects, click on the first object in the Object Manager. Hold down the Ctrl key and then click on all of the other objects you want to select.

Selecting all Objects

- Select *Edit >Select All* option from the menu.

Deselecting Objects

- Select the *Selection tool* icon in the toolbar.
- With the arrow cursor, click on a point outside the object or object group, or click on a free space in the Object Manager.



Selection tool

4.1.2 Moving Objects

- Select the desired objects.
- Click on the objects and, with the mouse button held down, drag them to the desired position or use the *Nudge* tool (→ page 106, Nudging Objects).


4.1.3 Locking and unlocking Objects

Locked objects cannot be edited or deleted. This prevents the object or its properties from being inadvertently modified.



- Click on the object to be locked.
- Select *Objects >Lock Object* option from the menu. The resizing handles of locked objects appear as unshaded squares.
- You can use the *Objects >Unlock Object* command to release the object for editing.

The resizing handles for unlocked objects appear as shaded squares.

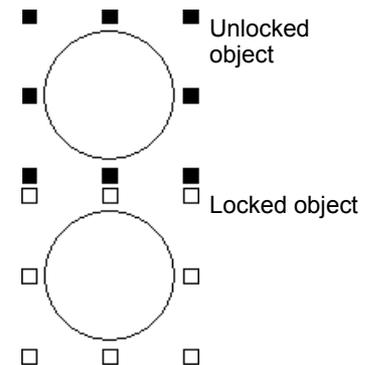

4.1.4 Object Types


The following object types are available in weldMARK™:

Marking objects	<i>Graphic objects</i>		The adjacent marking object types can be selected.
		<i>Line</i>	
		<i>Rectangle</i>	
		<i>Polygon</i>	
		<i>Polyline</i>	
		<i>Bezier</i>	
		<i>Text</i>	
		<i>Barcode...</i>	
		<i>Drill...</i>	
		<i>Vector</i>	
Automation-Objects		<i>Automation...</i>	Automation objects allow communication with the user and allow control of external components.

4.1.5 Object Defaults

Object defaults are set for some objects. For example, when creating new polygons the number of corners is preset. You can change these object defaults as follows:

- Select [Objects > Defaults](#).
The dialogue on the right opens.
The table below lists all object types for which object defaults exist.

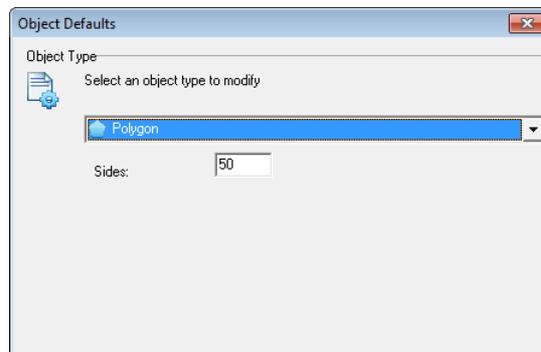

Polygon	→ page 51, Defaults for Polygon Objects
Text	→ page 59, Defaults for Text Objects
1D Barcode	→ page 69, Defaults for 1D Barcode Objects
2D Barcode	→ page 73, Defaults for 2D Barcode Objects
Bitmap Graphic	→ page 42, Properties of a Bitmap Object
Wait for External Signal	→ page 120, Defaults for "Wait for External Signal"
Set I/O Port	→ page 122, Defaults for "Set I/O Port"
Show Messagebox	→ page 125, Defaults for "Show Messagebox"
Vector Graphic	→ page 30, Defaults for Vector Graphic Objects

4.1.6 Object Properties

You can change the properties of objects as follows:


- Right click on a object.
- Select [Properties...](#)
- Carry out the required changes. Refer to the following sections to see which properties are possible for which object types.

The following properties can be set for all object types:

Notes

Notes can be added to objects as follows:

- Right click on the object to which you want to add a note.
- Select [Properties...](#)
- Select [Notes](#) tab.
- The dialogue on the right opens.
- Enter the desired text.
- Confirm your entry with the [OK](#) button.

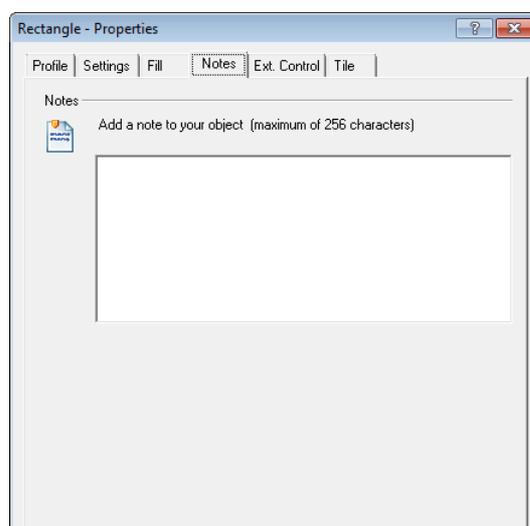


External Control

During execution of the job, each individual marking object can be marked or skipped depending on external signals. The settings for this can be called up as follows:

- Right click on the object to which you want to add an external marking control.
- Select *Properties...*
- Select *Ext. Control* tab.

The dialogue on the right opens.
Refer to the table below for explanations.

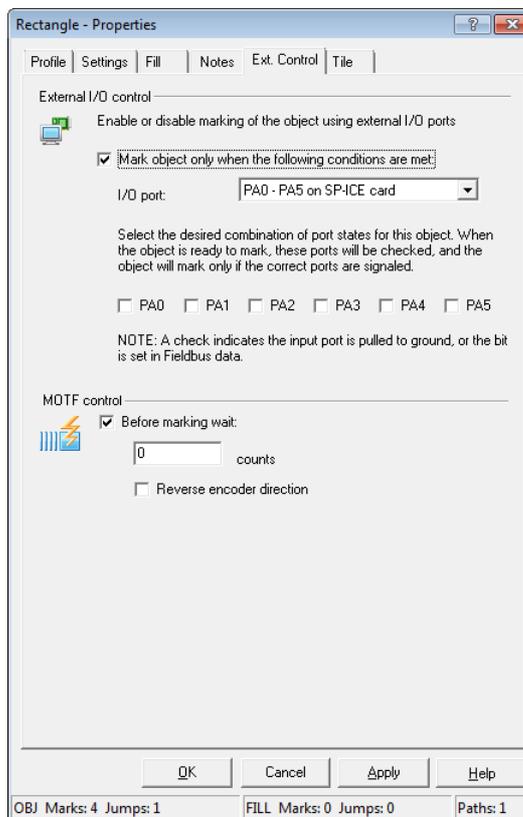

<i>External control activated</i>	If this function is enabled, the I/O ports are checked before marking the selected object. If they accord with the setting in IN1-IN6, the object is marked, otherwise it is skipped.
<i>I/O Port</i>	Selection of the input ports on either the control card or the standard I/O card, that need to be checked.
<i>IN1-IN6 PA0-PA5</i>	Specification for port status (high / low). If the specification is met, the object is marked. If the specification is not met, the object is skipped. The port status values can either be read from the standard I/O card or from the control card (SP-ICE or RLC-USB).
<i>MOTF control</i>	The marking process of an object can be started with a definable amount of units (impulses, mm or Inch) which are read from a pulse transmitter. → page 110, Tiling and the „Mark-on-the-Fly“ function


(→ page 220, Standard I/O Card / Interlock Card)

4.2 Importing and editing Vector Graphic Objects

4.2.1 Importing Vector Graphic Files

Mathematically, vector graphics are defined as a sequence of points connected by lines to each other. Vector-graphics can be scaled as required without loss of quality. They are ideally suited for use with laser processing systems as the deflection unit is a vector output device.

- Select **File > Import Job**.
The dialogue on the right opens.

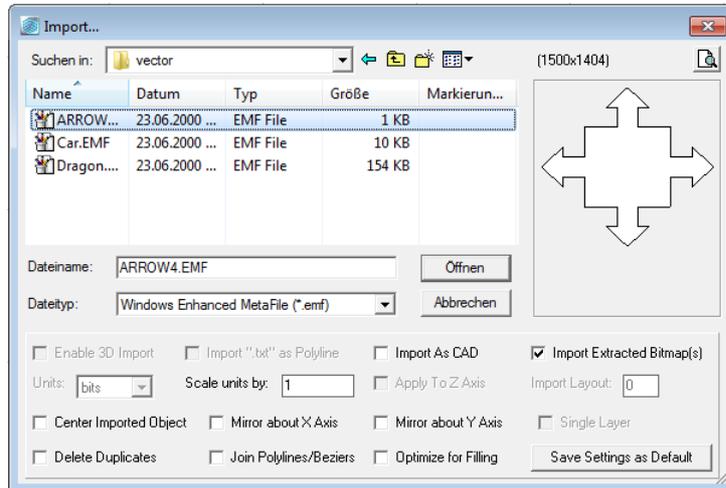

The table below contains explanations to the vector graphic formats that can be imported.


Since import parameter can be defined as default setting, they are described with the default settings. (→ page 30, Defaults for Vector Graphic Objects).

File types	CAD Drawings	File formats and export formats of different CAD programs (*.dgn; *.dxf; *.plt; *.hgl; *.hg; *.hpg; *.plo; *.hp; *.hp1; *.hp2; *.hpgl; *.hpgl2; *.gl2; *.pm; *.spl; *.rtl; *.cgm; *.svg) Editing with the vector graphic designer is not possible, with only these file formats.
	weldMARK 3 Object	weldMARK™ format for objects (*.wlo).
	HPGL Plotter File	The industry standard (*.plt); this format is primarily used for output to a pen plotter. Note that the resolution of the plotter file to be imported must match to the resolution set in weldMARK™ so that the output size will be displayed in weldMARK™ correctly. The resolution in weldMARK™ depends on the F-Theta lens used. It is referred to as the calibration factor and can be seen under System > Preferences in Hardware tab.
	Windows Enhanced Meta File	A format developed by Microsoft (*.emf). It can be used to store both vector graphic information and bitmaps embedded in the file. When vector graphic objects are copied to the clipboard, EMF format is used.
	Windows MetaFile	A format developed by Microsoft (*.wmf), the precursor of the EMF format.
	AutoCAD	An export format (*.dxf), normally from AutoCAD.
	Encapsulated PostScript	A graphic format, optimized for importing into other documents (*.eps).
	further	→ page 41, Importing Bitmap Files
	additional import options	→ page 30, Defaults for Vector Graphic Objects

4.2.2 Defaults for Vector Graphic Objects

This section describes how you can call up and modify the defaults for vector graphic objects. The defaults apply to all new vector graphic objects.

- Select *Objects > Defaults*.
- Select the *Vector Graphic* Default option. The dialogue on the right opens. Refer to the table below for explanations.

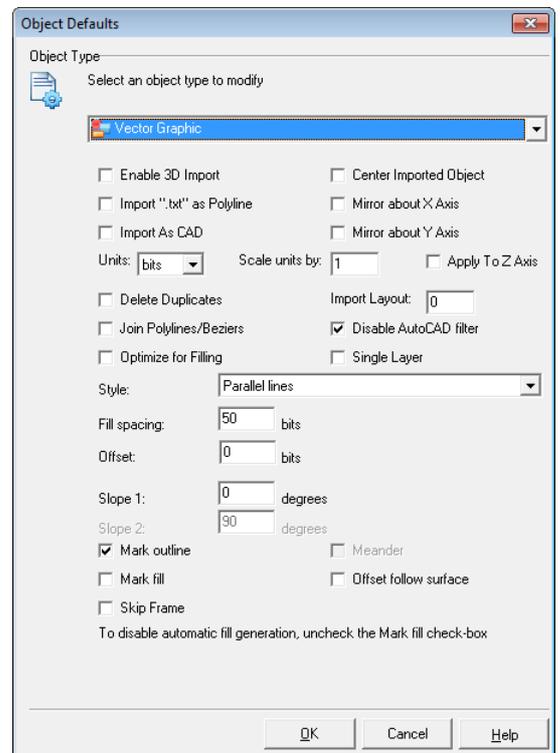

<i>Enable 3D Import</i>	This option has to be checked, to import 3D vector graphic objects.
<i>Center</i>	Positions the object in the center of the workspace.
<i>Import ".txt" as Polyline</i>	3D coordinates within a txt-file are imported as polyline.
<i>Mirror about X Axis</i>	The object is automatically mirrored upon importing. The options are summable.
<i>Mirror about Y Axis</i>	
<i>Import As CAD</i>	Imports a CAD-file.
<i>Units</i>	The unit with which the data is interpreted can be specified in this field. This setting should match the setting that was used when exporting.
<i>Scale units by:</i>	A factor with which the data is scaled upon import can be defined here.
<i>Apply to Z Axis</i>	Must be selected when 3D data is scaled in the Z-axis.
<i>Delete Duplicates</i>	Vector objects with the same coordinates can be automatically removed, upon import with this function.
<i>Import Layout</i>	Allows for a specific layout of the file to be imported. Layout "0" is used as default. The correspondent layout number has to be used, to import another layout.
<i>Join Polylines/Bezier</i>	This function activates a filter, that is active during the import. It joins all polylines and bezier objects, if their starting and ending points are identical.
<i>Disable AutoCAD filter</i>	Enables or disables the appearance of the AutoCAD filter.
<i>Optimize for Filling</i>	Optimizes the imported object for the filling. Particularly useful when the spot offset function is used.
<i>Single Layer</i>	This function combines all single layers to one overall level and it is especially recommended when filling or spot offset functions are applied.
<i>Style</i>	Defines which filling style is used.
<i>Fill spacing</i>	The distance between the individual fill lines can be set for all new text objects. Entering "0" means that the characters will not be filled.

<i>Offset</i>	Defines the offset from the filling to the contour.
<i>Slope 1</i>	Defines the angle between parallel lines.
<i>Slope 2</i>	Defines the angle between cross hatches.
<i>Mark object</i>	Enabling this function means that the object will be marked. This function is enabled by default.
<i>Mäander</i>	This function refers to bidirectional parallel lines and/or crosshatches. When changing the direction the end of a fill line is connected to the beginning of the next fill line without the laser stopping or turning off.
<i>Mark fill</i>	If this function is enabled, the object fill will be marked. The function can only be selected if a fill has been set. This function is disabled by default.
<i>Offset follow surface</i>	For 3D objects the position of the offset is adjusted to the 3D surface.
<i>Skip Frame</i>	Inverts the filling of a vector object with multiple layers. All previously unfilled areas are filled, and vice versa.

4.2.3 Vector Graphic Designer (VGD)


The Vector Graphic Designer can be used to adjust vector graphic objects to the requirements needed for marking with the laser. The following examples represent a few possibilities:

- The position of a graphics' elements can be changed in order to adjust to the component to be marked.
- To remove single elements or complete layers from the marking process, they can be deleted.
- The elements of the graphic can be arranged in up to 8 layers. It is possible to allot one of 8 pens to each layer (SET_PEN). The marking parameters of each single pen can be set in the profile settings.
- The marking sequence and direction can be modified to optimize the marking speed. Thus the marking speed can be optimized.
- New elements can be inserted, like Text, ellipses, circles or points.
- Layers can be joined or splitted.
- 2D vector objects can be projected onto a 3D surface with a STL file.

To access the Vector Graphic Designer, follow the instructions:

- Right click on a vector graphic object.
- Select *Design*.

The Vector Graphic Designer is parted into six areas. The following chart gives a short description of them. For detailed information, refer to the related sections.

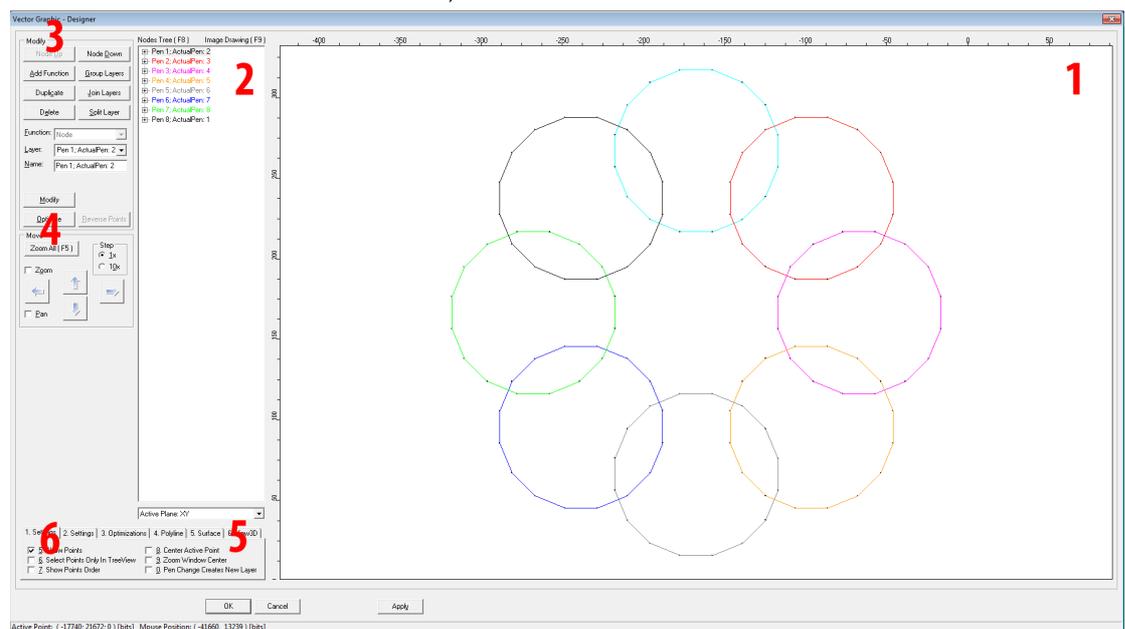

<i>Image Drawing (1)</i>	This area shows a preview of the vector graphic object.
<i>Nodes Tree (2)</i>	The node tree lists all elements of the selected vector object and simultaneously defines the marking sequence and distribution of levels.
<i>Modify (3)</i>	This area provides several functions to edit the selected object.
<i>Move (4)</i>	This area provides several functions to adjust the position of elements or the active point. Furthermore, the zoom can be changed.
<i>Change view plane (5)</i>	The object can be moved in 3D with this selection.
<i>Additional functions (6)</i>	Additional functions can be activated for several topics in this area.

(1) Image Drawing

In the Image Drawing area, single elements of the vector graphic object can be selected and dragged by the mouse.

After opening the Vector Graphic Designer, the starting point of the graphic is automatically chosen as active point. By clicking the left mouse-button, another point can be selected as active point.

By using the right mouse-button, the focus can be changed. It does not influence the position of the object.

Editing functions can be activated by clicking in the image drawing area or by pressing the F9 key. If the Image Drawing view is active, the mouse wheel can be used to zoom the focus in and out.

(2) Nodes Tree

In the Nodes Tree view, it is easy to select single points or groups of points of an element for editing. Depending on the selected items, different editing functions are available in the Modify area.

The nodes tree allows for a detailed view on different layers. By clicking the "+"-symbol the nodes tree kann be extended up to the coordinate layer.

(3) Modify

<i>Node up/ Node down</i>	Change of the position in the node and also in the marking sequence.
<i>Add Function</i>	Inserts the content from the <i>Function</i> field into the selected node.
<i>Duplicate</i>	Creates a copy of the selected function, that can be inserted.
<i>Delete</i>	Deletes the selected node. The function SET_PEN can not be deleted since it is associated with the current layer. Points can only be deleted if they are not required for the definition of the function.
<i>Group Layers</i>	Group all function from the same layer in the nodes tree.
<i>Join Layers</i>	Join all function from the same layer in the nodes tree. The marking sequence is optimized this way.
<i>Split Layer</i>	Splitting the selected layer into two nodes. Splitting will take place between the active node and the following node.
<i>Join Polyline</i>	Joining the selected node with the previous node, for polylines.
<i>Split Polyline</i>	Splitting the selected polyline into two separate lines. The distribution is made by duplicating the selected node. The first and last node can not be used.
<i>Function</i>	The <i>Function</i> field contains a list of the supported functions and their parameters. First, it displays the type of the selected node in the Nodes Tree. Furthermore, the field is used to choose the function to be added to the Nodes Tree. ⇒ above
<i>Change...</i>	Applying all changes made. The same effect is achieved by pressing the <i>Enter</i> key or clicking into another field with the mouse button.
<i>Optimize</i>	Applying the chosen optimizations to the selected layers. → page 34, (6) Additional functions
<i>Reverse Points</i>	Reversing the sequence of points of any function and thus changing the marking sequence.


(4) Move

Zoom all (F5)	Clicking on this button zooms the preview to display the whole vector graphic object.
Arrow Keys	<p>By using the arrow keys, the selected function and its sub functions can be moved in the preview.</p> <ul style="list-style-type: none"> ■ If the selected node is a point (Level 2), only that point is selected. ■ If the selected node is an object (Level 1), the first point will be selected and all other points from the objects are in the valid selection area. ■ If the selected node is a layer (Level 0), the first point of the first object will be selected and all other points from the layer are in the valid selection area.
Zoom	If this option is selected, the focus can be zoomed in and out via the arrow keys.
Pan	If this option is selected, the arrow keys move the whole workspace.
Step	<p>By this options field, the step width of the arrow key movement can be defined.</p> <p><i>1x</i> = 0.1 mm, <i>10x</i> = 1 mm.</p> <p>Note: Alternatively the switch to <i>10x</i> can be done via the shift key.</p>

(5) Change view plane


An object can be moved in 3D with this function. Available options are "Active Plane XY", "XZ" and "YZ. Depending on the chosen option, 2 of the 3 axis are figuratively put in front, so the user can view the object from the sides, from above or from the front for example.

(6) Additional functions

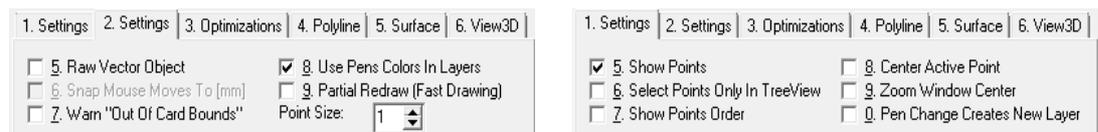

Show points	<p>If this function is enabled, points are shown in the preview.</p> <p>This function is enabled by default.</p>
Select Points Only In TreeView	<p>If this function is enabled, the selection of the active point can only be made in the nodes tree. Thus, the accidental selection of a wrong point can be avoided, even if the point density is high.</p> <p>This function is disabled by default.</p>
Show Points Order	<p>If this function is enabled, the marking sequence of the points is shown in the preview. All points that define a function are shown in the Image Drawing, not only the points intended to be marked.</p> <p>This function is disabled by default.</p>
Center Active Points	<p>This function always displays the active point in the center of the preview.</p> <p>This function is disabled by default.</p>
Zoom Window Center	<p>This function zooms in the focus up to the size of the whole Image Drawing field.</p>
Point Size	<p>By selecting a value between 1 and 10, the size of the points in the preview can be adjusted.</p>
Raw Vector-Objekt	<p>It's possible to modify or move Vector Graphic objects without the Vector Graphic Designer via dimension tools.</p> <p>Thus the object can be positioned out of the preview window.</p> <p>If Raw Vector Object function is enabled, the vector graphic object is displayed in its original form and position.</p>
Snap Mouse Moves To [mm]	<p>If this function is enabled, the mouse is moving in steps of 1 mm.</p> <p>The function is only available if Raw Vector Object is enabled.</p>
Warn "Out Of Card Bounds"	<p>If this function is enabled, the borders of the marking field are shown by dotted lines. If Show Points is enabled, points outside the marking field are shown in red colour.</p> <p>This function is disabled by default.</p>

Use Pens Colors in Layers	If this function is enabled, the diverse pen colours are shown in the Nodes Tree and the Image Drawing. Otherwise they are all shown in black colour. This function is enabled by default.
Partial Redraw (Fast Drawing)	If this function is enabled, only the selected point, function or layer is redrawn while moving the mouse, so that the rest is masked. The rest is masked. This function improves speed and display time and is disabled by default.

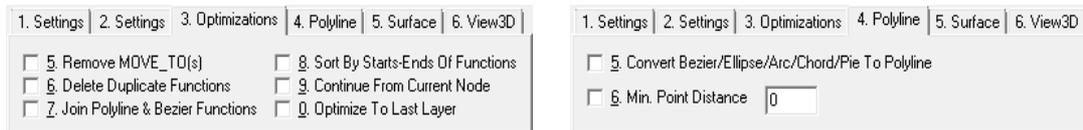


Tab 3. *Optimizing* and tab 4. *Polyline* contain a number of optimization options which are taken into account when the button *Optimize* is pressed.

→ page 33, Optimize

All optimizations are applied only to the selected layer or the layer the currently active node belongs.

To optimize all layers of the Vector Graphic object at once, enable the function *Optimize To Last Layer*.

Remove MOVE_TO(s)	If this function is enabled, pairs of MOVE_TO, LINE_TO, POLYLINE_TO and BEZIER_TO functions are combined into a single Polyline or Bezier function. If the object contains functions, that are named above, this function needs to be enabled when using the <i>Sort By Starts-Ends Of Functions</i> function.
Delete Duplicate Functions	All functions with identical X/Y values will be deleted if this function is enabled..
Join Polyline & Bezier functions	If this function is enabled, Polyline functions that have common ending respectively starting points are joined to longer chains of Polyline.
Sort By Starts-Ends of Functions	If this function is enabled, the optimal marking path can be found to reduce the marking time. The functions are automatically brought into the optimal order. If the object contains MOVE_TO, LINE_TO, POLYLINE_TO or BEZIER_TO functions, <i>Remove MOVE_TO (s)</i> has to be enabled too.
Continue From Current Node	If this function is enabled, the optimization starts from the current node instead of the first node of the layer.
Optimize To Last Layer	If this function is enabled, all layers of the vector graphic object are optimized at once.
Convert Bezier/ Ellipse/ Arc/ Chord/ Pie To Polyline	If this function is enabled, Bezier, Ellipse, Arc, Chord and Pie functions are converted into Polyline functions.
Min. PointDistance	If this function is enabled, the points that are closer than the selected minimal distance are removed.

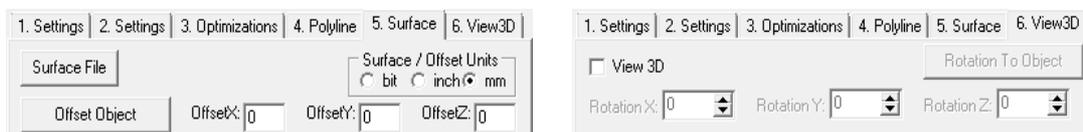

These tabs are used for creation and editon of 3D vector objects only.

The *Surface to Object* button is only available until an imported STL file is combined with a vector object. During this period offset values are used onto the position of the STL files directly.

If the option *View 3D* is checked, other options on different tabs can not be used.

Surface File	STL surface file selection
Surface Units	Defines the unit of measurement of the imported surface file.
Offset Object / Surface to Object	Activates the object offset by the defined value / Maps the 2D file onto the 3D surface.

<i>Offset X/Y/Z</i>	Offsets the selected object, or imported STL file, along the correspondent axis of coordination. To move the objects, the highest layer has to be chosen in the nodes tree.
<i>View 3D</i>	Activates <i>Rotation X/Y/Z</i> .
<i>Rotation X/Y/Z</i>	Specification of the angle in degrees to rotate the object along the specific axis.

4.2.4 Properties of a Vector Graphic Object

Properties are assigned to vector graphic objects, which determine how the objects are displayed on the screen and how they behave during laser processing. These properties are divided up as follows:


<i>Profile</i>	A marking profile is assigned to the object. The parameters of this profile can be changed.	→ page 135, Using Profiles
<i>Settings</i>	Various settings can be made for the object.	→ page 37, Settings for a Vector Graphic Object
<i>Source</i>	Allows you to see the path to the source file.	→ page 38, Source File for a Vector Graphic Object
<i>Fill</i>	Fill parameters for the object can be entered.	→ page 84, Object Fill
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be applied to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control
<i>CAD</i>	For vector graphic objects special settings can be adjusted.	→ page 39, CAD Settings of a Vector Graphic Object
<i>Tiling while marking</i>	Used to mark oversized objects that are bigger than the marking area.	→ page 111, Tiling while marking

Settings for a Vector Graphic Object

Every vector graphic object is assigned specific settings that can be called up and, if necessary modified as follows:

- Right click on a vector graphic object.
- Select *Properties...*
- Select *Settings* tab.

The dialogue on the right opens.
Refer to the table below for explanations.

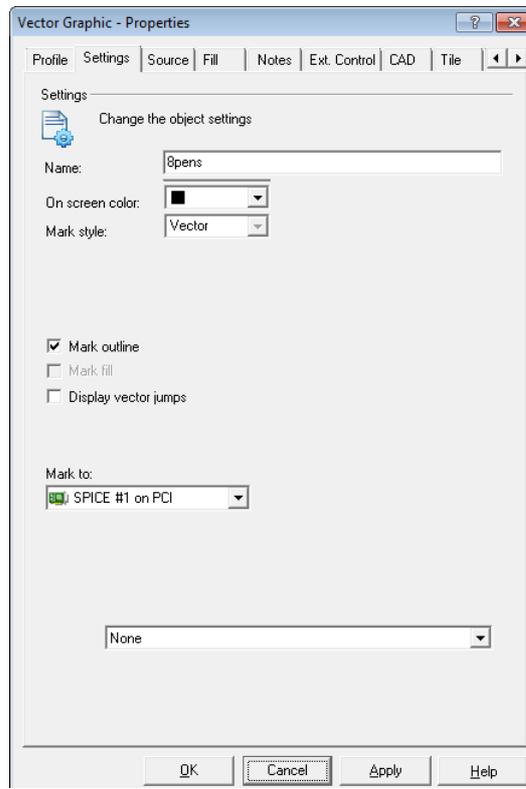


Name	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.	
On screen color	The color selection list can be used to select one of the preset colors to display the object on screen.	
Mark object	If this function is enabled, the object contour is marked. This function is enabled by default.	
Mark fill	If this function is enabled, the object fill will be marked. The function can only be selected if a fill has been set. This function is disabled by default.	
Display vector jumps	If this function is enabled, the vector jumps between the individual part of the object are displayed on screen. This function is disabled by default.	
Inline Parameter Switching	Only for vector objects with a contour composed of several pens. This can be the case as following:	
	a) Import of a vector object, that has been split into multiple layers with a graphic program beforehand.	b) Import of a single layer file, that has to be split into multiple layers with the vector graphic designer → page 32, Vector Graphic Designer (VGD). > <i>Split Polyline</i> > Change <i>Pen</i> color
	If this functions is active, the laser is not switched of, while marking the contour at the transition from one pen to another, but it is switched to the new marking parameters "on the fly".	
Mark to	If more than one control card is installed, this drop-down menu sets the desired control card for marking the object.	
Object-specific Preview	Preview option that is used before the actual marking in the job. After choosing this option, specific parameters are available.	

Source File for a Vector Graphic Object

Vector graphic objects are created in external programs and imported into weldMARK™. The path to the source file can be displayed as follows:

- Right click on a vector graphic object.
- Select *Properties...*
- Select *Source* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

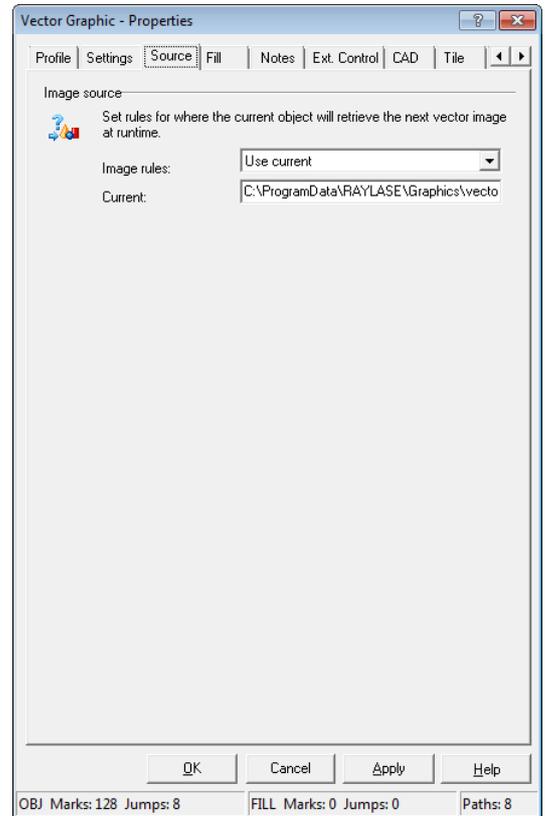


<i>Image rules</i>	For graphic objects no rules can be configured.
<i>String position</i>	This field specifies the path to the source file. If the vector graphic file has been imported with the CAD drawings filter (→ page 30, Defaults for Vector Graphic Objects), the graphic is saved within the job.

CAD Settings of a Vector Graphic Object

For vector graphic objects of the type CAD an additional tab **CAD** is available. This tab is called up as follows:

- Right click on a vector graphic object.
- Select **Properties...**
- Select **CAD** tab.

The dialogue on the right opens. Refer to the table below for explanations.

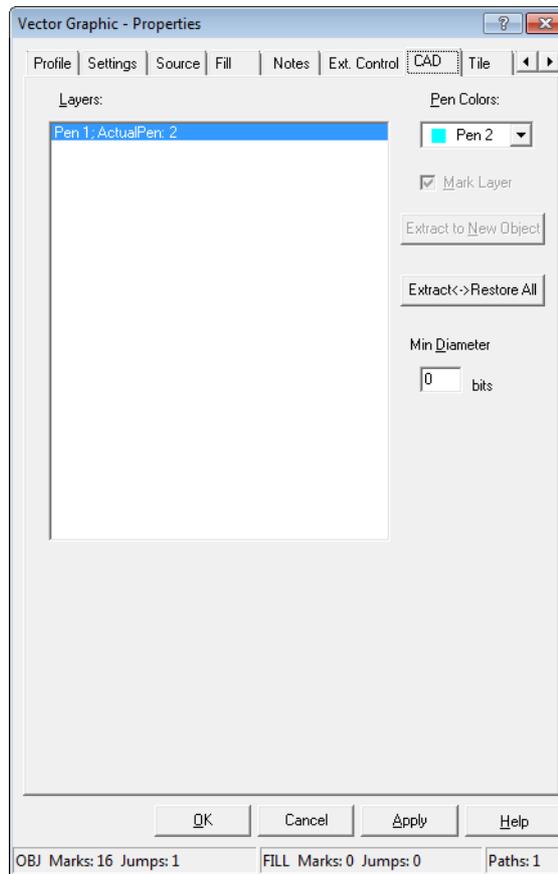

Layers	All layers of the vector graphic object are listed.
Pen Colors	A specific pen can be defined for each layer. Therefor eight predefined pens are available (Pen 1 to Pen 8). Via the profile settings it is possible to set marking parameters for each pen separately → page 136, Marking Object Profile).
Mark Layer	Via this field marking can be activated or deactivated for each layer separately.
Extract to New Object	By clicking this button, the selected layer is removed from the vector graphic object and added as a new object to the object manager.
Min. Diameter	Circular objects that fall below this diameter are converted into drill objects.


* These options are only available for vector graphic objects imported as CAD drawing.

4.2.5 Exporting Vector Graphics

Vector graphic objects can be exported for use in other programs.

- Right click on the vector graphic you want to export.
- Select *File >Export*.

The dialogue on the right opens. Refer to the table below for explanations.

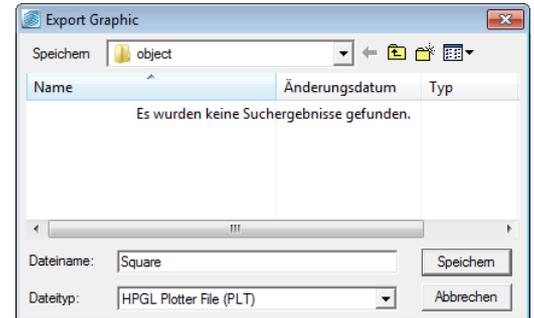

<i>Save in</i>	Folder in which the graphic should be saved.
<i>File name</i>	The object name is suggested as the file name. However, you can overwrite this with the name of your choice.
<i>Save as type</i>	The graphic can be saved in the following formats:
<i>PLT</i>	HPGL Plotter File
<i>WLO</i>	weldMARK™ object-format

4.3 Importing and editing Bitmap Objects

4.3.1 Importing Bitmap Files

A bitmap is a rectangular grouping of pixels. For laser marking, the bitmap must be rasterized. As the Scan Head is a vector output device, this raster has to be simulated. To do this, the laser beam moves repeatedly over the image and marks a series of pixels each time. This process can take a long time. It normally takes longer to mark a bitmap representation of an object than a vector representation. However, some images only allow bitmap marking, e. g. photographs.


weldMARK™ supports the import of bitmap files with monochrome, gray or colored content. Once imported, all images are automatically converted into grey scale images.

- Select *File > Import Job*.

The dialogue on the right opens.

The table below contains explanations to the bitmap formats that can be imported.

Since import parameter can be defined as default setting, they are described with the default settings. (→ page 46, Defaults for Bitmap Objects).

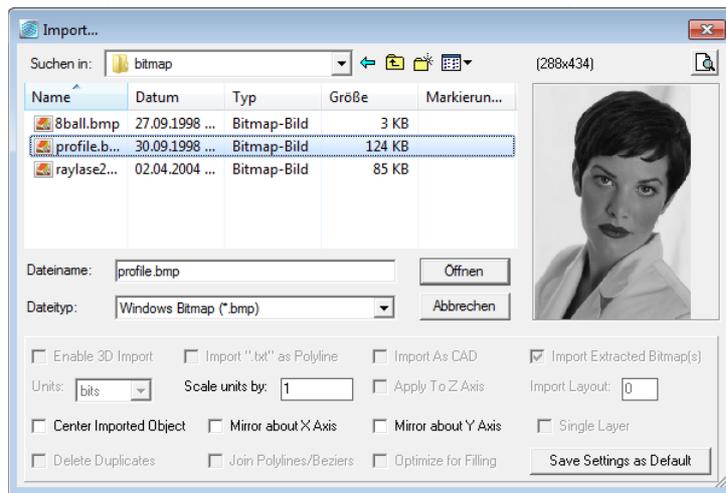

<i>Files of type</i>	<i>Windows Bitmap (BMP)</i>	A Windows bitmap format.
	<i>JPEG Bitmap (JPG)</i>	Compressed bitmap format.s.
	<i>CompuServe Bitmap (GIF)</i>	
	<i>PaintBrush (PCX)</i>	A PaintBrush bitmap format.
	<i>Further</i>	→ page 29, Importing Vector Graphic Files → page 29, Importing and editing Vector Graphic Objects

4.3.2 Properties of a Bitmap Object


Properties are assigned to bitmap objects, which determine how the objects are displayed on the screen and how they behave during laser processing. These properties are divided up as follows:

<i>Profile</i>	A marking profile is assigned to the object. The parameters of this profile can be changed.	→ page 135, Using Profiles
<i>Settings</i>	Various settings can be made for the object.	→ page 42, Settings of a Grayscale Bitmap Object
<i>Source</i>	Allows you to see the path to the source file.	→ page 45, Source File for a Bitmap Object
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be applied to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control
<i>Tiling while marking</i>	Used to mark oversized objects that are bigger than the marking area.	→ page 111, Tiling while marking

Settings of a Grayscale Bitmap Object

Every bitmap object is assigned specific settings that can be called up and, if necessary, modified as follows:

- Right click on a bitmap object.
 - Select *Properties...*
 - Select *Settings* tab.
- The dialogue on the right opens.
Refer to the table below for explanations.

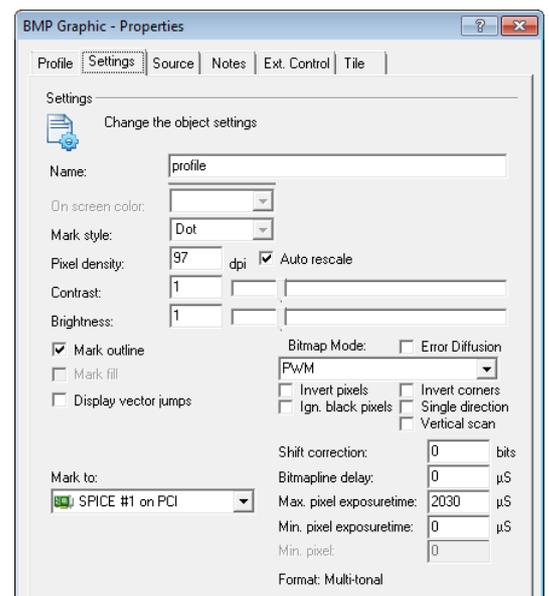

<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>Mark Style</i>	Default setting for bitmap graphics is "dot matrix".
<i>Pixel density</i>	<i>Pixel density</i> specifies in which resolution the picture will be marked. If the option <i>Auto scaling</i> is activated, the picture size remains the same, even if the <i>Pixel density</i> is changed.
<i>Auto scaling</i>	
<i>Contrast</i>	The difference between lightest and darkest pixels can be modified.
<i>Brightness</i>	The brightness of the marking result can be changed. If the value is increased, the laser rests longer on each pixel; the marking result will be brighter or darker depending on the material.
<i>Mark object</i>	Enabling this function means that the object will be marked. This function is enabled by default.
<i>Display vector jumps</i>	If this function is enabled, the vector jumps between the individual parts of the object are displayed on screen. This function is disabled by default.

Bitmap mode	Depending on the kind of the bitmap object and the preset laser type, the following modes can be selected (→ page 44, Selectable bitmap modes).	
PWM	If this function is enabled, the levels of gray are generated through the exposure time. The scan head rests at each pixel for a various time.	
PWM-2	If this function is activated the levels of gray are generated through the laser power. The scan head processes the pixels with a constant speed.	
Analog	If this function is selected, the laser power is controlled via an analogue signal (0V to10V).	
Digital	If this function is selected, the laser power is controlled via a digital signal (8bit digital output).	
Error Diffusion	If this function is selected, the bitmap object is converted into a monochrome bitmap using the default error diffusion algorithm. Black pixels are positioned in a way that the picture seems to consist of shades of grey.	

Invert pixels	Creates a negative of the original bitmap object.	
Single direction	Bitmap objects are marked line by line, where at the marking is performed in alternating direction. If this function is enabled, marking is only performed in one direction, which can improve the marking quality (deactivation of the hysteresis of the scanner mirrors).	
Ign. black pixels	Activates the <i>Min. Pixel</i> field (see below).	
Invert corners	When rotating bitmap objects, pixels, which do not exist in the original, can be generated in the corners. The color of these superfluous pixels can be set to black (no marking) or white.	
Vertical scan	Turns the pixel processing by 90 degrees. This way the picture is processed vertically instead of the default given horizontal way.	
Shift correction	Mechanical inertia and laser specific delay may cause hysteresis errors in bidirectional operation, especially when marking with high speed. Via the parameter <i>Shift Correction</i> this hysteresis can be compensated.	
		
Bitmapline delay	Via this parameter an idle time after each bitmap line is defined. The next line is not marked until the set time has elapsed.	
Max. pixel exposuretime	With this parameter the maximum and minimum time, that the laser can use to mark one point, can be set. Through the parameters the marking intensity can be adjusted, so that the graphic quality is affected.	
Min. pixel exposuretime		
Min. pixel	Via this parameter a minimal grey value is defined. Only pixels of the bitmap object of the same or a higher value are marked. If more than three pixels can be ignored, a jump command is performed to the next pixel to be marked automatically. This may increase the marking speed. The value for <i>Min. pixel</i> ranges from 0 to 1000. If the value is set to 0 or 1, no pixels are skipped.	
Format	The recognized file format of the bitmap object is displayed.	
Mark to	If more than one control card is installed, this drop-down menu sets the desired control card for marking the object.	

Settings for a monochrome Bitmap Object

Monochrome bitmap objects have the following different parameters.

<i>Dot spacing</i>	Spacing of the picture dots. Consistent with the <i>Pixel density</i> of bitmap objects with levels of gray.
<i>Pulse on time</i> <i>Pause</i>	Through the parameters the length of the laser pulse and the following pause can be adjusted.
<i>Pulses per dot</i>	The parameter defines how many pulses are sent out for each marked pixel.

Generally the option *Mark on dark material* is available for bitmap files. to invert the levels of gray.

Selectable bitmap modes

<i>Laser type</i>	Setting for laser power	Bitmap mode				
		PWM	PWM-2	Analog	Digital	Error Diffusion ³
<i>CO₂</i>	PWM	•	•			•
<i>YAG</i>	Analog ¹	•		•		•
	Digital ²	•			•	•
<i>IPG</i>	Digital ²	•			•	•
<i>SPI</i>	Analog ¹	•		• ⁴	• ⁵	•


• = selectable, 1 = DAC, 2 = PortB, 3 = not possible for combination with monochrome bitmaps
4 = SPI Basic Interface, 5 = SPI Extended Interface

Source File for a Bitmap Object

Bitmap objects are created in external programs and imported into weldMARK™. The path to the source file can be displayed as follows:

- Right click on a bitmap object.
- Select *Properties...*
- Select *Source* tab.

The dialogue on the right opens.
Refer to the table below for explanations.

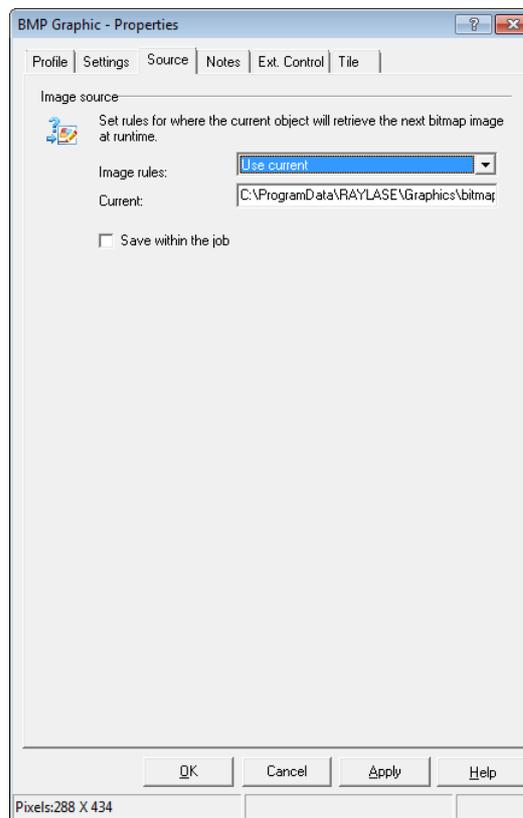


<i>Image rules</i>	For graphic objects no rules can be configured.
<i>String position</i>	This field specifies the path to the source file.
Save within job	With this option the bitmap file is saved within the job. If the option is deselected the bitmap file will be loaded upon every start of the job. In case the job is moved to another computer, the file needs to be available from there.

4.3.3 Defaults for Bitmap Objects

This section describes how the defaults for bitmap objects can be called up and changed. The defaults apply to all new bitmap objects.

- Select *Objects > Defaults...* option from the menu.
The dialogue on the right opens.
Refer to the table below for explanations.

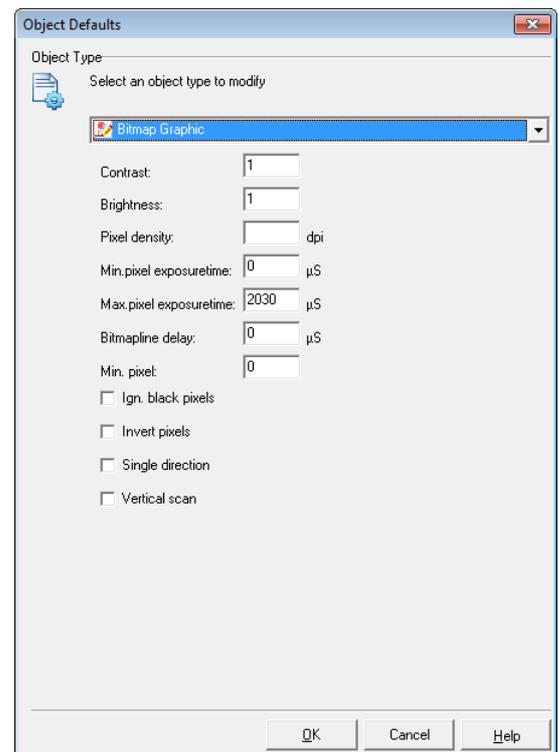

<i>Contrast</i>	The ratio between dark and light pixels in the image can be changed.
<i>Brightness</i>	The brightness of all pixels in the bitmap image can be changed.
<i>Pixel density</i>	The pixel density can be set in an area between 10 and 2400 dpi.
<i>Max. pixel exposuretime</i>	With this parameter the maximum and minimum time, that the laser can use to mark one point, can be set. Through the parameters the marking intensity can be adjusted, so that the graphic quality is affected.
<i>Min. pixel exposuretime</i>	
<i>Bitmapline delay</i>	Via this parameter an idle time after each bitmap line is defined. The next line is not marked until the set time has elapsed.
<i>Min. pixel</i>	Via this parameter a minimal grey value is defined. Only pixels of the bitmap object of the same or a higher value are marked. If more than three pixels can be ignored, a jump command is performed to the next pixel to be marked automatically. This may increase the marking speed. The value for <i>Min. pixel</i> ranges from 0 to 1000. If the value is set to 0 or 1, no pixels are skipped.
<i>Ign. black pixels</i>	During marking, the laser beam ignores pixels that have a 100% black value and are not marked therefore. This reduces the processing time.
<i>Invert pixels</i>	Creates a negative of the original bitmap object.
<i>Single direction</i>	Bitmap objects are marked line by line, where at the marking is performed in alternating direction. If this function is enabled, marking is only performed in one direction, which can improve the marking quality (deactivation of the hysteresis of the scanner mirrors).
<i>Vertical scan</i>	Turns the pixel processing by 90 degrees. This way the picture is processed vertically instead of the default given horizontal way.

4.4 Adding and editing Marking Objects

Marking objects are objects that can be marked with a laser. weldMARK™ allows you to select the following marking object types:



The sections below describe how marking objects are added to a job and how these objects can be modified subsequently.

4.4.1 Line Objects

A line is a one-dimensional object. It causes the laser to mark a straight line.

Adding a Line Object

- Select **Objects > Add > Line** option from the menu.
A new line is inserted in the center of the workspace.



New
line

Properties of a Line Object

Properties are assigned to line objects, which determine how the objects are displayed on the screen and how they behave during laser processing. These properties are divided up as follows:


Profile	A marking profile is assigned to the object. The parameters of this profile can be changed.	→ page 135, Using Profiles
Settings	Various settings can be made for the object.	→ page 48, Settings for a Line Object
Notes	A note can be assigned to the object.	→ page 27, Notes
Ext. Control	A marking condition can be applied to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control
Tiling while marking	Used to mark oversized objects that are bigger than the marking area.	→ page 111, Tiling while marking

Settings for a Line Object

Every line object is assigned specific settings that can be called up and, if necessary, modified as follows:

- Right click on a line object.
- Select *Properties....*
- Select *Settings* tab.

The dialogue on the right opens.
Refer to the table below for explanations.

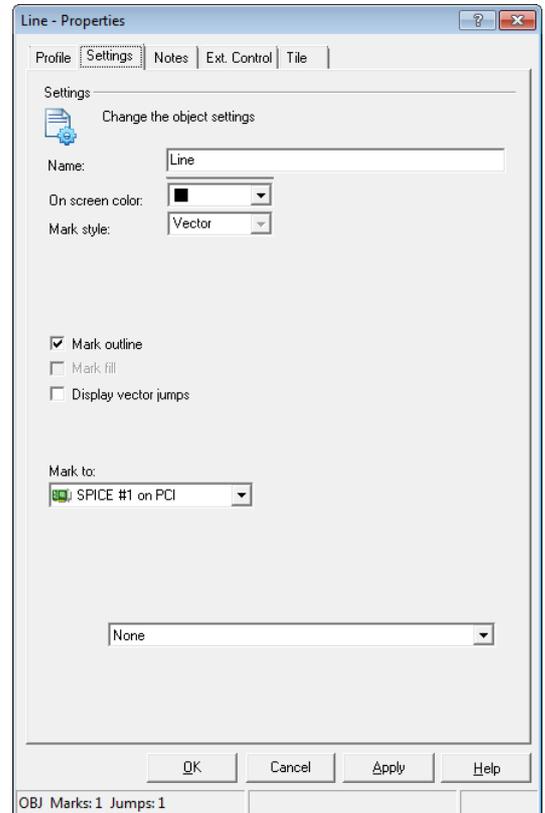

<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>On screen color</i>	The color selection list can be used to select one of the preset colors to display the object on screen.
<i>Mark object</i>	Enabling this function means that the object will be marked. This function is enabled by default.
<i>Display vector jumps</i>	If this function is enabled, the vector jumps between the individual part of the object are displayed on screen. This function is disabled by default.
<i>Mark to</i>	If more than one control card is installed, this drop-down menu sets the desired control card for marking the object.
<i>Object-specific Preview</i>	Preview option that is used before the actual marking in the job. After choosing this option, specific parameters are available.

4.4.2 Rectangle Objects

A rectangle is a marking object with four corners.

Adding a Rectangle Object

- Select *Objects >Add >Rectangle* option from the menu.
A new rectangle object is inserted in the center of the workspace.



New
rectangle

Properties of a Rectangle Object


Properties are assigned to rectangle objects, which determine how the objects are displayed on the screen and how they behave during laser processing. These properties are divided up as follows:

<i>Profile</i>	A marking profile is assigned to the object. The parameters of this profile can be changed.	→ page 135, Using Profiles
<i>Settings</i>	Various settings can be made for the object.	→ page 50, Settings for a Rectangle Object
<i>Fill</i>	A fill can be applied to the object.	→ page 84, Object Fill
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be applied to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control
<i>Tiling while marking</i>	Used to mark oversized objects that are bigger than the marking area.	→ page 111, Tiling while marking

Settings for a Rectangle Object

Every rectangle object is assigned specific settings that can be called up and, if necessary, modified as follows:

- Right click on a rectangle object.
- Select *Properties...*
- Select *Settings* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

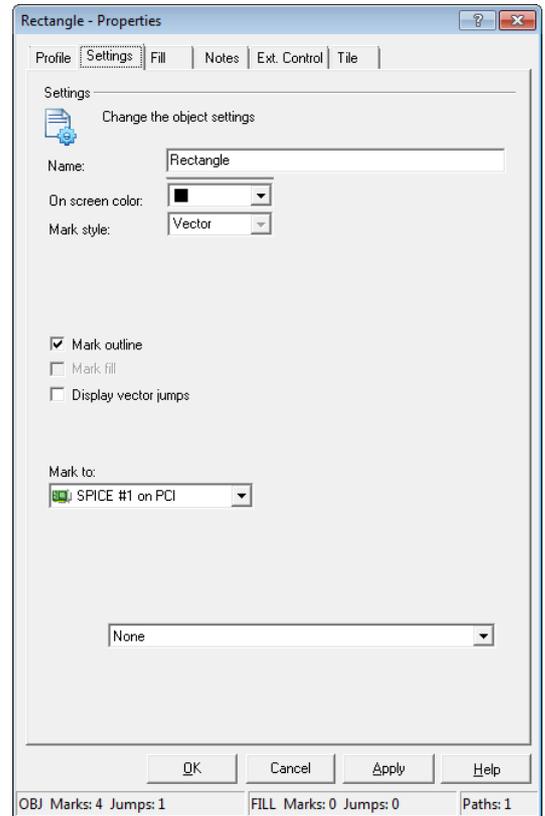

<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>On screen color</i>	The color selection list can be used to select one of the preset colors to display the object on screen.
<i>Mark object</i>	If this function is enabled, the object contour is marked. This function is enabled by default.
<i>Mark fill</i>	If this function is enabled, the object fill will be marked. The function can only be selected if a fill has been set. This function is disabled by default.
<i>Display vector jumps</i>	If this function is enabled, the vector jumps between the individual part of the object are displayed on screen. This function is disabled by default.
<i>Mark to</i>	If more than one control card is installed, this drop-down menu sets the desired control card for marking the object.
<i>Object-specific Preview</i>	Preview option that is used before the actual marking in the job. After choosing this option, specific parameters are available.


4.4.3 Polygon Objects

A polygon object is an object that can be marked and has a definable number of sides of equal length. The distance from a corner to the center of the object is always the same.

Defaults for Polygon Objects

This section describes how you can call up and modify the defaults for polygon objects. The defaults apply to all new polygon objects.

- Select *Objects > Defaults...* option from the menu.
- Select the object type *Polygon*.
- The dialogue on the right opens.
Refer to the table below for explanations.

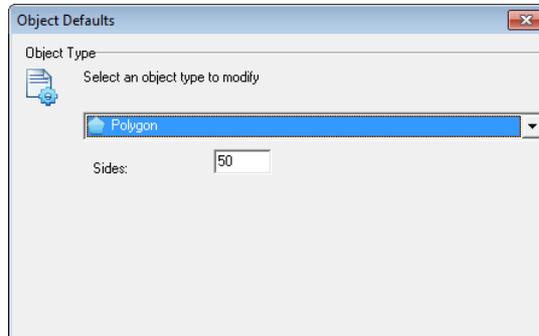

Sides	All new polygons are created with the number of corners entered.
--------------	--

Adding a Polygon Object

- Select *Objects > Add > Polygon* option from the menu.
A new polygon object is inserted in the center of the workspace.



New polygon

Properties of a Polygon Object

Properties are assigned to polygon objects, which determine how the objects are displayed on the screen and how they behave during laser processing. These properties are divided up as follows:

<i>Profile</i>	A marking profile is assigned to the object. The parameters of this profile can be changed.	→ page 135, Using Profiles
<i>Settings</i>	Various settings can be made for the object.	→ page 52, Settings for a Polygon Object
<i>Fill</i>	A fill can be applied to the object.	→ page 84, Object Fill
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be applied to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control
<i>Tiling while marking</i>	Used to mark oversized objects that are bigger than the marking area.	→ page 111, Tiling while marking

Settings for a Polygon Object

Every polygon object is assigned specific settings that can be called up and, if necessary, modified as follows:

- Right click on a polygon object.
- Select *Properties...*
- Select *Settings* tab.

The dialogue on the right opens.
Refer to the table below for explanations.



<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>On screen color</i>	The color selection list can be used to select one of the preset colors to display the object on screen.
<i>Mark object</i>	If this function is enabled, the object contour is marked. This function is enabled by default.
<i>Mark fill</i>	If this function is enabled, the object fill will be marked. The function can only be selected if a fill has been set. This function is disabled by default.
<i>Display vector jumps</i>	If this function is enabled, the vector jumps between the individual part of the object are displayed on screen. This function is disabled by default.
<i>Sides</i>	Specifies the number of sides of the polygon.
<i>Start angle</i>	Specifies the angle position at which the first line segment begins. An angle of "0" corresponds to the 12:00 position on a clock.
<i>End angle</i>	Specifies the angle position at which the first line segment ends.
<i>Mark to</i>	If more than one control card is installed, this drop-down menu sets the desired control card for marking the object.
<i>Object-specific Preview</i>	Preview option that is used before the actual marking in the job. After choosing this option, specific parameters are available.
<i>Helix (Z-step after each side)</i>	Only available for scan heads of the FOCUSSHIFTER type(→ page 151, Trepanning Parameters).

4.4.4 Polyline Objects

Polyline objects are markable objects consisting of at least 2 lines, which are connected by reversal points. The shape of the object can be adjusted according to the individual requirements.

Adding a Polyline Object

- Select *Objects >Add >Polyline* option from the menu.
A new polyline object is inserted in the center of the workspace. At first, it appears as a small point, which can be edited individually.



New polyline

Properties of a Polyline Object

Properties are assigned to polyline objects, which determine how the objects are displayed on the screen and how they behave during laser processing. These properties are divided up as follows:


<i>Profile</i>	A marking profile is assigned to the object. The parameters of this profile can be changed.	→ page 135, Using Profiles
<i>Settings</i>	Various settings can be made for the object.	→ page 54, Settings for a Polyline Object
<i>Fill</i>	A fill can be applied to polyline objects with a <u>closed</u> contour.	→ page 84, Object Fill
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be applied to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control
<i>Tiling while marking</i>	Used to mark oversized objects that are bigger than the marking area.	→ page 111, Tiling while marking

Settings for a Polyline Object

Every polyline object is assigned specific settings that can be called up and, if necessary, modified as follows:

- Right click on a polyline object.
- Select *Properties...*
- Select *Settings* tab.

The dialogue on the right opens.
Refer to the table below for explanations.

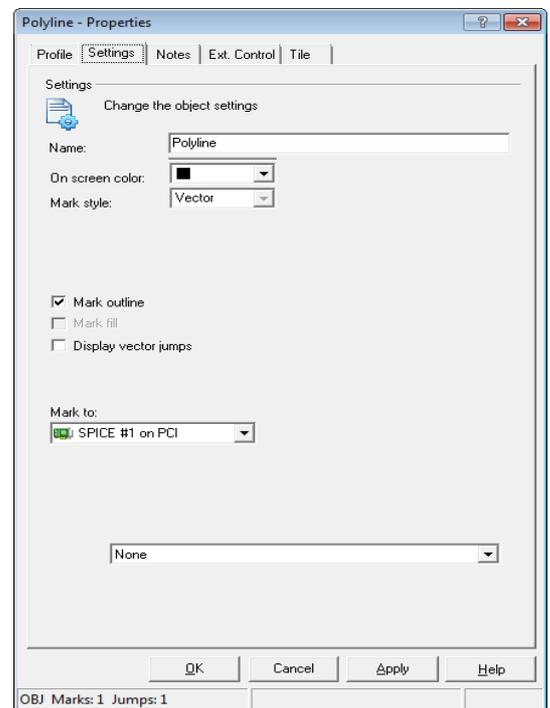


<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>On screen color</i>	The color selection list can be used to select one of the preset colors to display the object on screen.
<i>Mark object</i>	If this function is enabled, the object contour is marked. This function is enabled by default.
<i>Display vector jumps</i>	If this function is enabled, the vector jumps between the individual part of the object are displayed on screen. This function is disabled by default.
<i>Mark to</i>	If more than one control card is installed, this drop-down menu sets the desired control card for marking the object.
<i>Object-specific Preview</i>	Preview option that is used before the actual marking in the job. After choosing this option, specific parameters are available.

Setup of a Polyline object

Each new polyline object is added as a point. The shape can be modified as described in the following section:

- Click on a polyline object.
- Press key **F6**.
The dialogue on the right opens.
Refer to the table below for explanations.

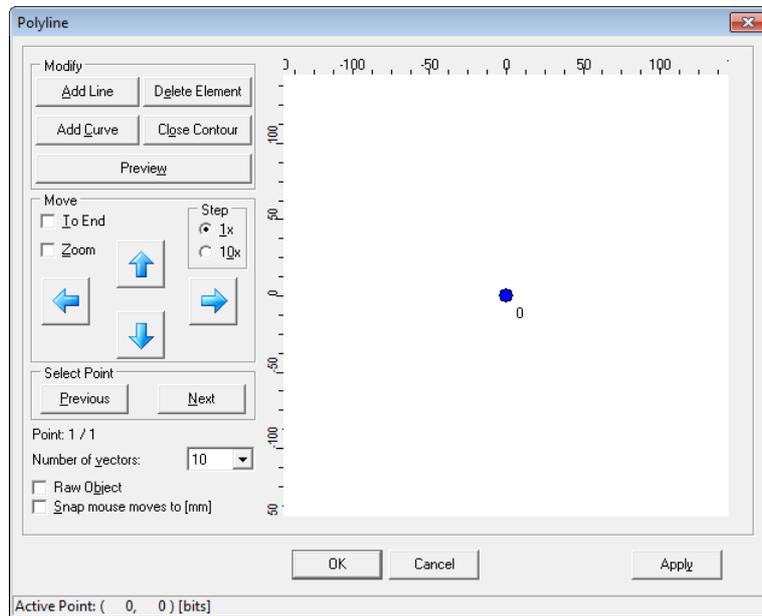

Polyline Editing Window (1)	This area shows all changes applied to the polyline object. By clicking on the OK or Apply button, the changes are saved. By clicking the Cancel button, the changes are discarded. The laser displays the active point on the marking field. If the active point (blue color) is moved in the Polyline Editing Window , the display of the marking field will be updated. So, the object can be adjusted exactly in the area that is to be marked by using the visible pointer.
Add Line	A new point is inserted behind the active point. The points are connected by a line.
Add Curve	A new point is inserted behind the active point. The points are connected by a curve.
Delete Element	Deletes the active point.
Close Contour	As described for the function Add Line , a new point is inserted behind the active point. Using this function, the new point is inserted exactly on the same position as point no.1 of the polyline object. Thus a closed contour is created. Areas with closed contours can be filled via the object properties if necessary. If one of these both points, the first or the last one, are moved afterwards, the contour may not be recognized as closed any more.
Preview	Clicking on this button creates a preview of the polyline object in the marking field. This function is available only if a SP-ICE control card is used. During the preview, no elements can be added or changed.
Arrow Keys	The selected point can be moved via the arrow keys in the desired direction.
End	If this function is activated, the active point and all subsequent points can be moved at once via the arrow keys. Consequently, the first point can be selected to move the whole polyline object.
Zoom	If this function is activated, the preview of the bezier object can be zoomed in and out via the arrow keys.
1x	By this options field, the step width of the arrow key movement can be defined.
10x	1x = 0.1 mm, 10x = 1 mm.

<i>Previous</i>	Selects the previous or next point subject to the active point.
<i>Next</i>	
<i>Number of vectors</i>	Via this pop-up menu, the accuracy of the added curve can be defined. It sets how many vectors constitute the curve.
<i>Raw Object</i>	It's possible to modify or move polyline objects without the Polyline Editing Window via dimension tools. Thus the polyline object can be positioned out of the Polyline Editing Window. In this case activate function <i>Raw Object</i> to display the original bezier object at its point of origin in the Bezier Editing Window.
<i>Snap mouse moves to [mm]</i>	If this function is activated, the point is snapped to a grid (1mm), when moving it via mouse.

4.4.5 Bezier Objects

A bezier object is a markable object consisting of free-style spline curves. The curve linearity can be defined by moving the individual points.

Adding a Bezier object

- Select *Objects >Add >Bezier* option from the menu.
A new bezier object is added to the center of the screen.



New
Bezier Object

Properties of a Bezier Object

Bezier objects are assigned properties defining their displayed on the screen and the behavior during laser processing. These properties are divided up as follows:


<i>Profile</i>	A marking profile is assigned to the object. The parameters of this profile can be changed.	→ page 135, Using Profiles
<i>Settings</i>	Various settings can be made for the object.	→ page 57, Settings of a Bezier Object
<i>Fill</i>	A fill can be applied to bezier objects with a closed contour.	→ page 84, Object Fill
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be applied to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control
<i>Tiling while marking</i>	Used to mark oversized objects that are bigger than the marking area.	→ page 111, Tiling while marking

Settings of a Bezier Object

Every bezier object is assigned specific settings that can be called up and, if necessary, modified as follows:

- Right click on a bezier object.
- Select *Properties...*
- Select *Settings* tab.

The dialogue on the right opens.
Refer to the table below for explanations.

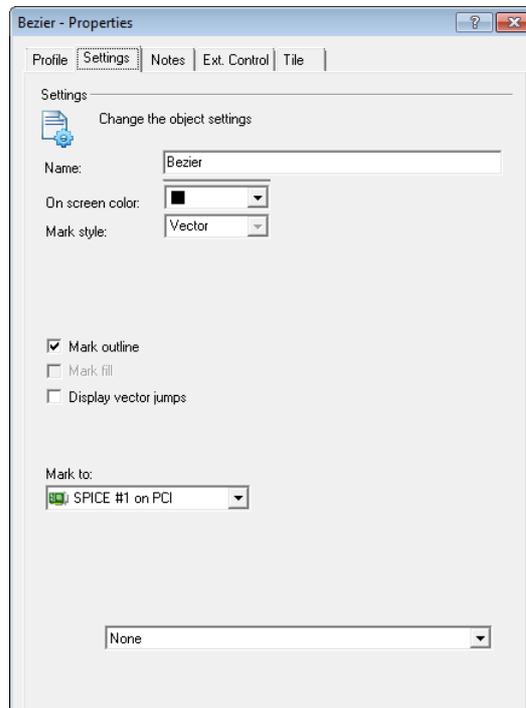


<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>On screen color</i>	The color selection list can be used to select one of the preset colors to display the object on screen.
<i>Mark object</i>	If this function is enabled, the object contour is marked. This function is enabled by default.
<i>Mark fill</i>	If this function is enabled, the object fill will be marked. The function can only be selected if a fill has been set. This function is disabled by default.
<i>Display vector jumps</i>	If this function is enabled, the vector jumps between the individual part of the object are displayed on screen. This function is disabled by default.
<i>Mark to</i>	If more than one control card is installed, this drop-down menu sets the desired control card for marking the object.
<i>Object-specific Preview</i>	Preview option that is used before the actual marking in the job. After choosing this option, specific parameters are available.

Modifying a Bezier Object

Every new bezier object is inserted with a standard shape. The shape can be modified as desired as described in the following:

- Left click on a bezier object.
- Press key **F6**.

The dialogue on the right opens.
Refer to the table below for explanations.

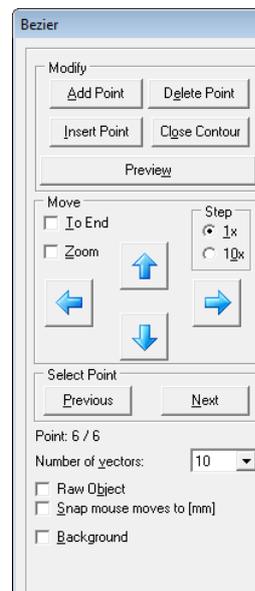

Bezier Editing Window (1)	This area shows all changes applied to the bezier object. By clicking on the OK or Apply button, the changes are saved. By clicking the Cancel button, the changes are discarded. The laser displays the active point on the marking field. If the active point (blue color) is moved in the Bezier Editing Window , the display of the marking field will be updated. So, the object can be adjusted exactly in the area that is to be marked.
Add Point	A new point is inserted behind the active point (no. 6 in the picture above).
Insert Point	A new point is inserted in front of the active point.
Delete	Deletes the active point.
Close Contour	As described for the function Add point , a new point is inserted behind the last point. Using this function, the new point is inserted exactly on the same position as point no.1. Thus a closed contour is created. Areas with closed contours can be filled via the object properties if necessary. If one of these both points, the first or the last one, are moved afterwards, the contour may not be recognized as closed any more.
Preview	Clicking on this button, creates a preview of the bezier object on the marking field. This function is available only if a SP-ICE control card is used. During the preview, no elements can be added or changed.
Arrow Keys	The selected point can be moved via the arrow keys in the desired direction.
To End	If this function is activated, the active point and all subsequent points can be moved at once via the arrow keys.
Zoom	If this function is activated, the preview of the bezier object can be zoomed in and out via the arrow keys.
1x	By this options field, the step width of the arrow key movement can be defined.
10x	1x = 0.1 mm, 10x = 1 mm.
Previous	Selects the previous or next point subject to the active point.
Next	
Number of vectors	Via this pop-up menu, the accuracy of the added curve can be defined. It appoints how many vectors generate the curve. If for example "1" is set, the points are linked with just on line.

Raw Object	It's possible to modify or move bezier objects without the Bezier Editing Window via dimension tools. Thus the bezier object can be positioned out of the Bezier Editing Window. In this case activate function Raw Object to display the original bezier object at its point of origin in the Bezier Editing Window.
Snap mouse moves to [mm]	If this function is activated, the point is snapped to a grid (1mm), when moving it via mouse.
Background	All objects on the workspace are displayed as background to be able to align other objects.

4.4.6 Text Objects


Text objects can be created using either TrueType™ fonts or laser-optimized fonts. For TrueType™ Fonts, the characters are defined by their contour. The contour can be given a fill. For laser-optimized fonts, the characters are made up of lines or points. The laser-optimized fonts „Stroke“ and „SEMI Dot Matrix“ are included in the weldMARK™ installation package.

Defaults for Text Objects

This section describes how you can call up and modify the defaults for text objects. The defaults apply to all new text objects.

- Select **Objects > Defaults...** option from the menu.
- Select the object type **Text**.

The dialogue on the right opens.
Refer to the table below for explanations.

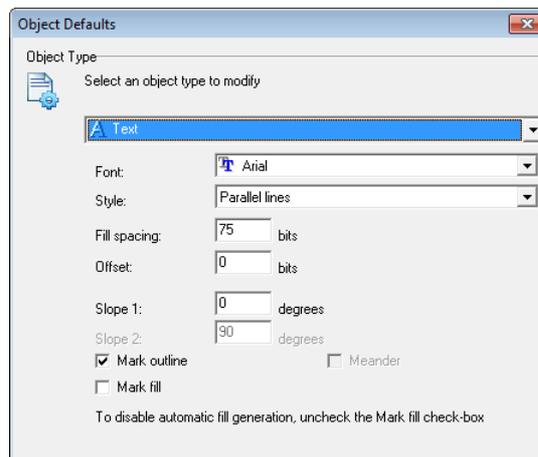

Font	The character set for all new text objects can be selected.
Style	Defines which filling style is used.
Fill spacing	The distance between the individual fill lines can be set for all new text objects. Entering "0" means that the characters will not be filled.
Mark object	If this function is enabled, the contour lines for the characters will be marked. This function is enabled by default.
Mark fill	If this function is enabled, the character fill will be marked. The function can only be enabled if a fill spacing > 0 has been set. This function is disabled by default.
Offset	Defines a spacing between the filling and the contour.




New text

Adding a Text Object

- Select *Objects > Add > Text* option from the menu.

The dialogue on the right opens.
Refer to the table below for explanations.

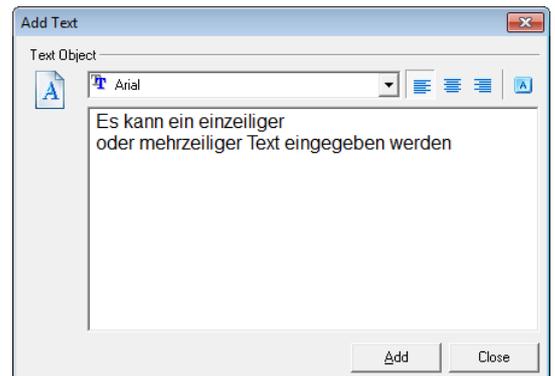

(1)	Character set to be used for the new text object.
(2)	Content of the new text object (string).
	Text alignment buttons for multi-line texts (left aligned, centered, right aligned).
	The Windows character map is called up to make it easier to enter special characters. (→ page 68, Unicode Character Map)
<i>Add</i>	The new object is included in way, so that the first letter is in the centre of the workspace.

Properties of a Text Object

Text objects are assigned properties defining their displayed on the screen and the behavior during laser processing. These properties are divided up as follows:


<i>Profile</i>	A marking profile is assigned to the object. The parameters of this profile can be changed.	→ page 135, Using Profiles
<i>Settings</i>	Various settings can be made for the object.	→ page 61, Settings of a Text Object
<i>String</i>	Content and formatting of the text object.	→ page 63, String of a Text Object
<i>Source</i>	The content of text objects can be changed dynamically based on various rules.	→ page 88, String rules
<i>Fill</i>	A fill can be applied to the object.	→ page 84, Object Fill
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be applied to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control
<i>Tiling while marking</i>	Used to mark oversized objects that are bigger than the marking area.	→ page 111, Tiling while marking

Settings of a Text Object

Every text object is assigned specific settings that can be called up and, if necessary, modified as follows:

- Right click on a text object.
- Select *Properties...*
- Select *Settings* tab.

The dialogue on the right opens.
Refer to the table below for explanations.

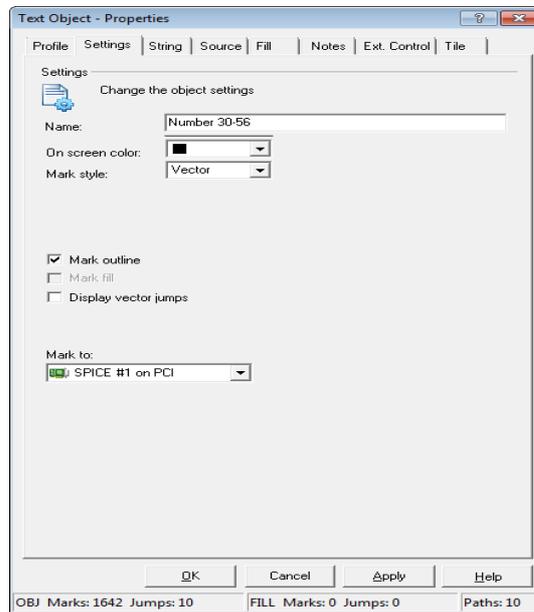


<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>On screen color</i>	The color selection list can be used to select one of the preset colors to display the object on screen.
<i>Mark Style</i>	The text object is marked in either a vector-based or dot matrix style. Additional settings are available for the "dot matrix" marking style. → page 63, Additional Settings for Dot Matrix Fonts
<i>Mark object</i>	If this function is enabled, the contour lines (shape) for the characters will be marked. This function is enabled by default.
<i>Mark fill</i>	If this function is enabled, the character fill will be marked. The function can only be enabled for TrueType™ Fonts and if an object fill has been set. This function is disabled by default.
<i>Display vector jumps</i>	If this function is enabled, the entire sequence of movements is displayed on the screen, including the times in which the laser is deactivated while moving to the next vector to be marked (vector jumps). This function is disabled by default.
<i>Object-specific Preview</i>	Preview option that is used before the actual marking in the job. After choosing this option, specific parameters are available.

Marking Text Objects with long Strings

To mark text objects that are larger than the marking field, they have to be tiled. → page 109, Tiling before Marking

Example:

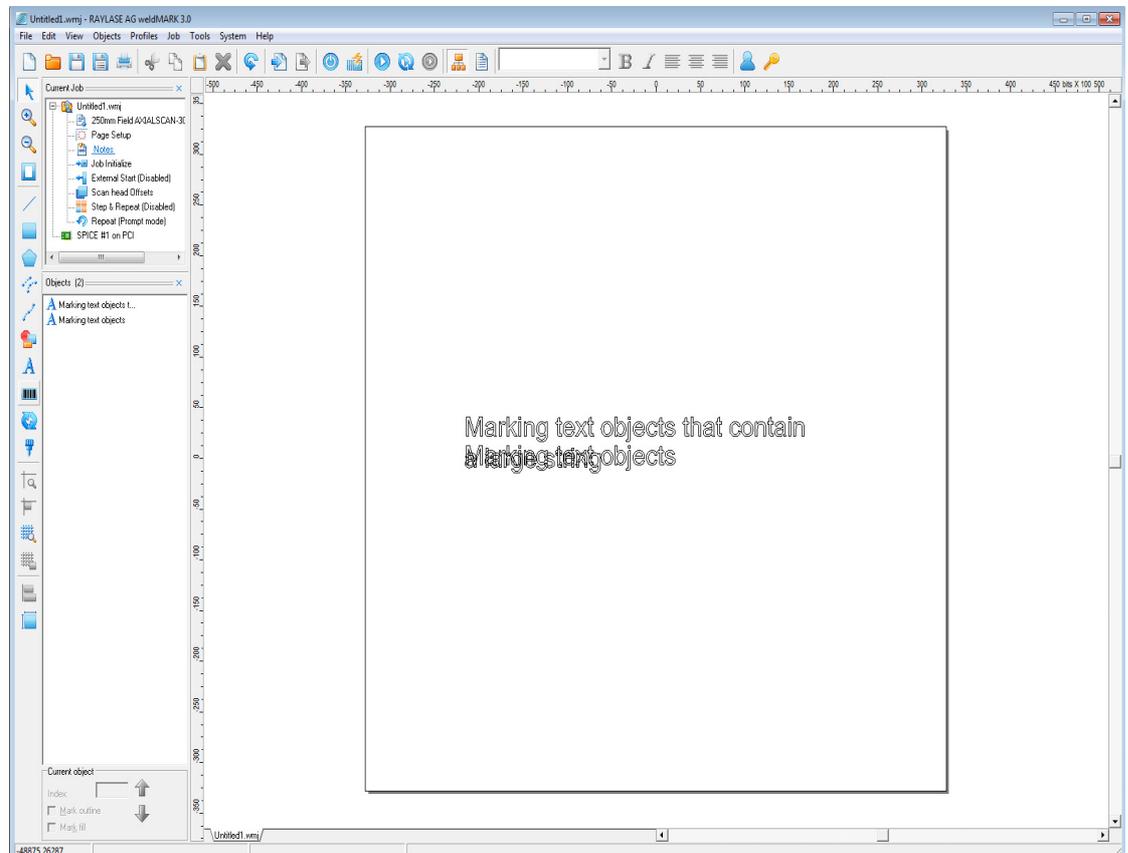


The example shows how a text object is displayed in the working space after tiling. The rectangle represents the size of the marking field. The undivided string is located above the parts which are lying upon each other. This option is most commonly used in connection with the „Mark on the Fly“ function.

Additional Settings for Dot Matrix Fonts


Dot matrix fonts are special character sets in which the characters are made up of individual dots. The character set SEMI Dot Matrix is included in the weldMARK™ installation package. Special settings are available for this kind of character set:

- Right click on a text object.
- Select *Properties...*
- Select *Settings* tab.
- Choose the marking style *Dot Matrix*.
 The dialogue on the right opens.
 Refer to the table below for explanations.

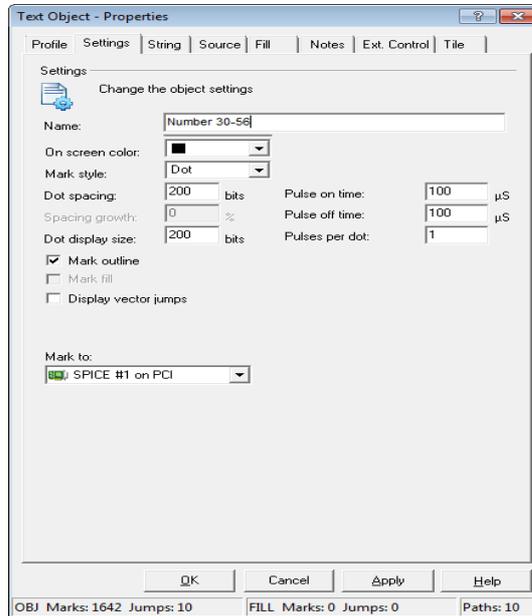

<i>Dot spacing</i>	Distance between the marking points in the X and Y axis.	
<i>Dot display size</i>	Dot size on the screen. This parameter has no influence on the actual marking.	
<i>Pulse on time</i>	Laser activation time per pulse.	These values are directly in interplay with the laser power and frequency.
<i>Pulse off time</i>	Laser deactivation time between the individual pulses (with > 1 pulses).	
<i>Pulses per dot</i>	Number of pulses emitted per marking point.	

Example:

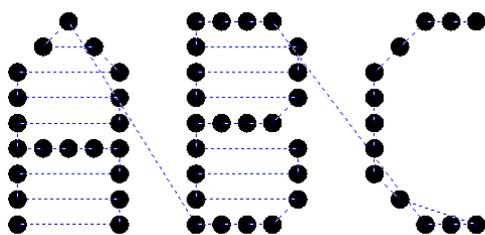

Screen display of a dot matrix font with vector jumps shown.


String of a Text Object

The content of a text object consists a string. In turn, this string can consist of any combination of letters and numbers. weldMARK™ differentiates between one-line and multi-line strings (with paragraph breaks) and provides different functions for each case.

Content and Display Options for multi-line Text Objects

- Right click on a a multi-line text object.
- Select *Properties....*
- Select *String* tab.

The dialogue on the right opens.
Refer to the table below for explanations.

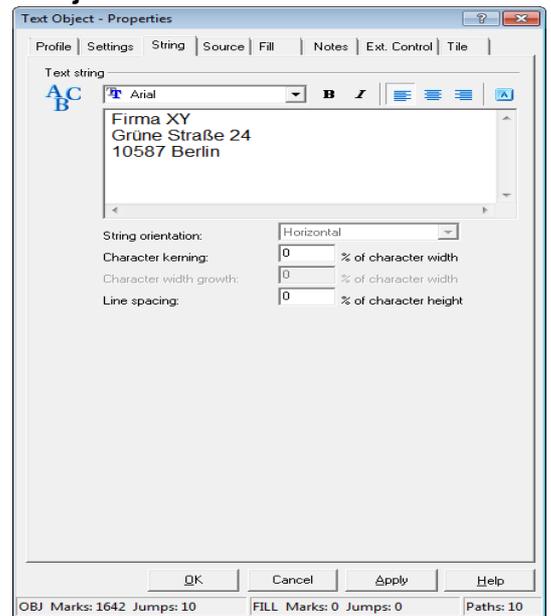


(1)	Font of the text object.
(2)	Content of the text object (string).
<i>String orientation</i>	Multiline Text objects can only be created with horizontal orientation.
	The font styles "Bold" and/or "Italic" can be applied to text object. The font styles are available only for TrueType™ Fonts.
	Text alignment buttons for multi-line texts (left aligned, centered, right aligned).
	The Windows character map is called up to make it easier to enter special characters. (→ page 68, Unicode Character Map)
<i>Character kerning</i>	The spacing between the individual characters can be changed. Positive values increase the spacing, negative values reduce it. Setting the value "0" uses the kerning defined in the character set.
<i>Character width growth</i>	The width of the individual characters can be changed. Positive values increase the character width, negative values reduce it. Setting the value "0" uses the character width defined in the character set.
<i>Line spacing</i>	The spacing between the lines can be changed. Positive values increase the spacing, negative values reduce it. Setting the value "0" uses the line spacing defined in the character set.


Content and Display Options for single line Text Objects

- Right click on a a single line text object.
- Select *Properties...*
- Select *String* tab.

The dialogue on the right opens.
Refer to the table below for explanations.

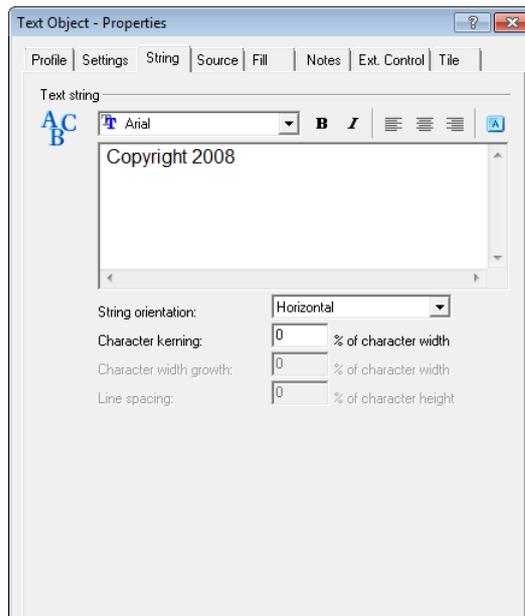


(1)	Font of the text object.
(2)	Content of the text object (string).
	The font styles "Bold" and/or "Italic" can be applied to text object.
	The Windows character map is called up to make it easier to enter special characters. (→ page 68, Unicode Character Map)
<i>String orientation</i>	You can choose between <i>Horizontal</i> , <i>Vertical</i> , <i>Radial</i> and <i>Radial – fixed</i> . If a 4-axis motor control card is installed, the additional option <i>circumferential</i> is also available.
<i>Character kerning</i>	The spacing between the individual characters can be changed. Positive values increase the spacing, negative values reduce it. Setting the value "0" uses the kerning defined in the character set.
<i>Character width growth</i>	The width of the individual characters can be changed. Positive values increase the character width, negative values reduce it. Setting the value "0" uses the character width defined in the character set.

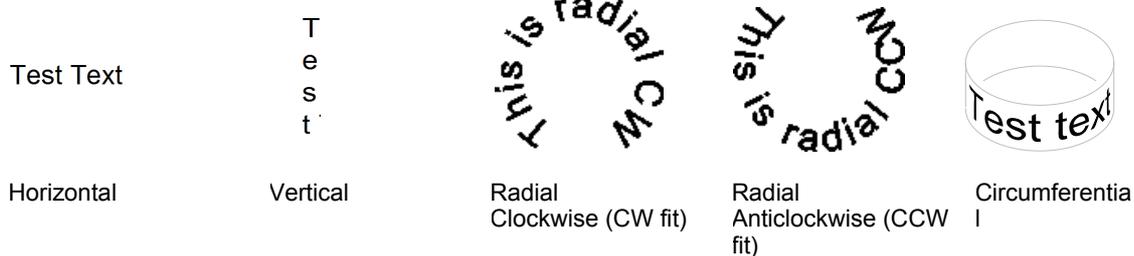


The difference between *Radial* and *Radial Text – fixed* lies in the extended editing functions. The height can be changed for example. Additionally the Radial Text fixed can directly be adjusted to radii.

- page 66, Additional Setting Options for Radial Text
- page 67, Additional Setting Options for Circumferential Text
- page 104, Size Option for Standard and radial Text Objects

Additional Setting Options for Radial Text

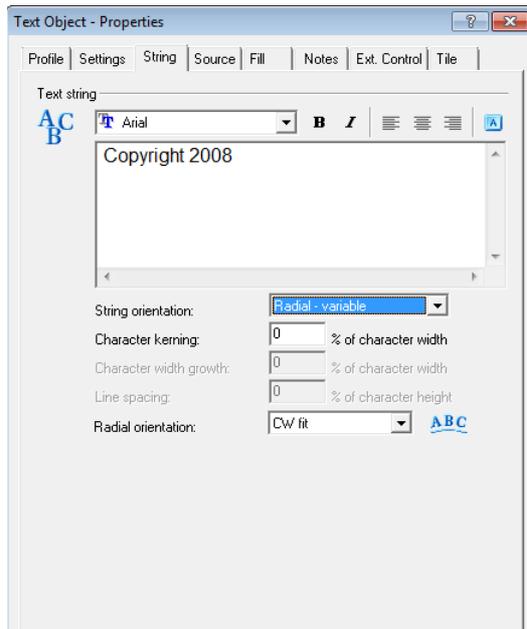

Radial

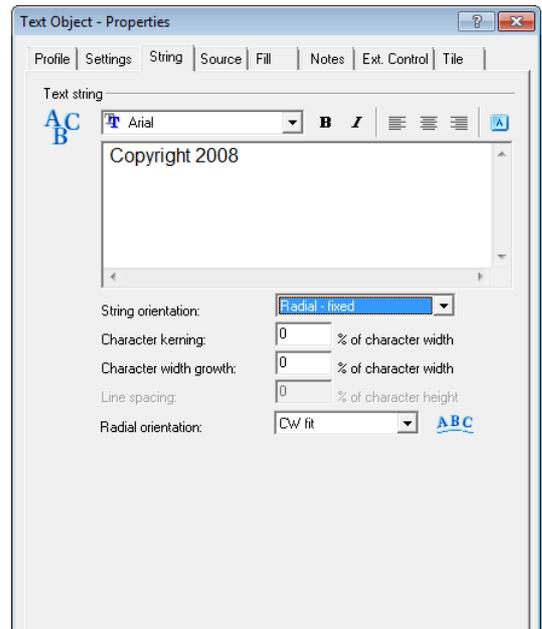

Radial - fixed

Radial orientation	The text can run clockwise (<i>CW fit</i>) or anticlockwise (<i>CCW fit</i>).
Character width growth	The width of the individual characters can be changed. Positive values increase the character width, negative values reduce it. Setting the value "0" uses the character width defined in the character set.


Additional Setting Options using Keyboard Commands

The following settings can be made exclusively using keyboard commands if the *Properties* and *Dimensions* windows are closed:

Radius	Make sure that the required text object is selected. Hold down the <i>ALT</i> key and use the <i>Up</i> and <i>Down</i> arrow keys to enlarge or reduce the object radius.
Rotation	Make sure that the required text object is selected. Hold down the <i>ALT</i> key and use the <i>Right</i> and <i>Left</i> arrow keys to rotate the object radius.

Additional Setting Options for Circumferential Text

The *Circumferential* option is only available if the optional 4-axis motor control card is installed and the rotary axis activated. The following additional settings are available:

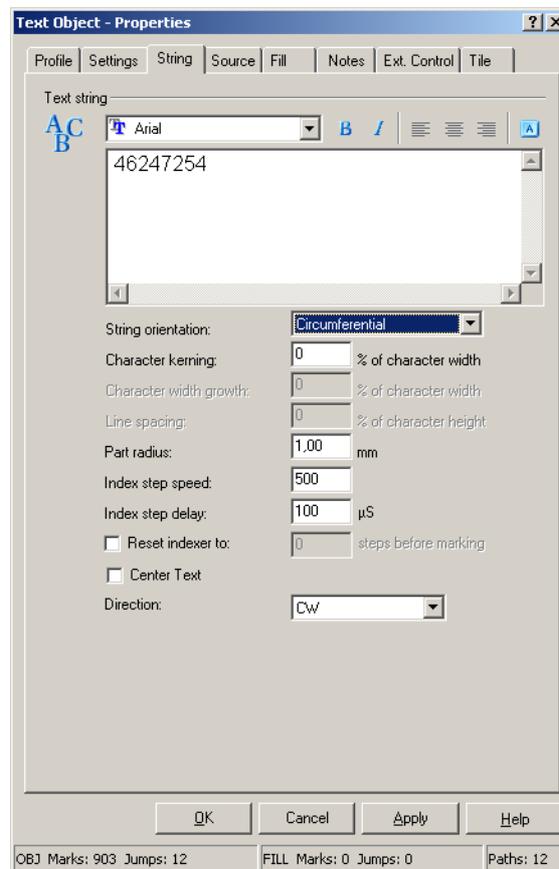


<i>Object radius</i>	Radius of the area to be marked.
<i>Index step speed</i>	Step speed of the motor.
<i>Index step delay</i>	Delay between the movement of the motor and marking of the character. This allows the motor to come to rest before marking is performed.
<i>Reset indexer to:</i>	Enable this function to return the motor to a defined start position before processing an object.
<i>Center Text</i>	The text is placed in the middle of the range starting point.

Unicode Character Map

The Windows Unicode character map enables you to insert any characters in a font, particularly special characters, into the string of characters in a text object.



- Right click on a text object.
- Select *Object > Properties...*
- Select *String* tab.
- Click on the *Character Map* icon.
The dialogue on the right opens.
Refer to the table below for explanations.

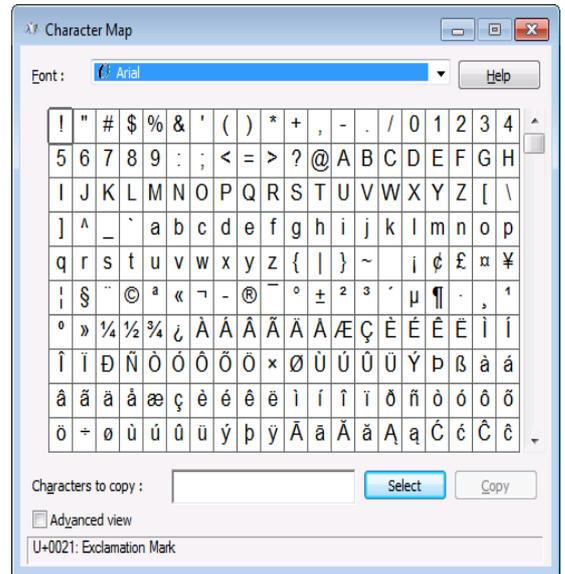

<i>Font</i>	This selection box can be used to select a font.
<i>Select</i>	Clicking on this button adds the selected character to the list of <i>Characters to copy</i> .
<i>Characters to copy</i>	This field lists the selected characters.
<i>Group by</i>	This selection box can be used to display a subgroup of characters from the selected font.
<i>Copy</i>	Clicking on this button copies the characters in the <i>Characters to copy</i> list to the clipboard.

4.4.7 1D Barcode Objects

The following 1D barcode objects are supported by weldMARK™:

Barcodes	
Code 39, Extended Code 39, HIBC	Interleaved 2 of 5 (ITF)
CodeBar	POSTNET (Zip+4, Zip+6)
Code 93	UPC A, UPC E
Code 128, EAN/UCC 128	EAN 8, EAN 13, BookLan

EAN 8 and EAN 13 can be supplemented by 2 or 5 digits. Therefore, enter the desired string and, separated with a comma, the supplementary 2 or 5 digits.


The following examples sum up the possibilities:

EAN 8	EAN 13
12345678,12	123456789012,12
12345678,12345	123456789012,12345

Defaults for 1D Barcode Objects

This section describes how to call up and modify the defaults for 1D barcode objects. The defaults apply to all new 1D barcode objects.

- Select *Objects > Defaults...* option from the menu.
- Select the object type *1D Barcode*. The dialogue on the right opens. Refer to the table below for explanations.

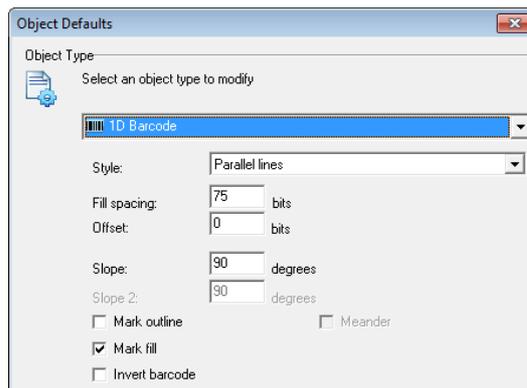


<i>Style</i>	Provides the selection of hatches.
<i>Fill spacing</i>	When marking a barcode object, each bar is created with single lines. Via this input box the distance between these fill lines can be set. A value of "0" means that the bars will not be filled.
<i>Offset</i>	Distance between the filling and the contour.
<i>Slope</i>	Hatching angle for parallel lines.
<i>Mark outline</i>	If this function is enabled, the contour lines for bars will be marked. This function is disabled by default.
<i>Mark fill</i>	If this function is enabled, the object fill will be marked. The function can only be selected if a fill has been set. This function is disabled by default.
<i>Invert barcode</i>	Enabling this function creates a negative of the original barcode. This function is disabled by default.
<i>Meander</i>	The fill of the object is marked in one go, i.e., without switching off the laser between end and start point of the single lines.

Settings for a 1D Barcode Object

Specific settings are assigned to each barcode object. They can be called up and, if necessary, modified as follows:


- Right click on a 1D barcode object.
- Select *Properties...*
- Select *Settings* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

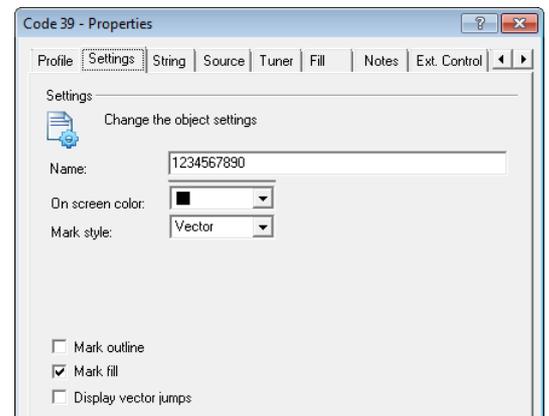

General Settings for all Mark Styles

<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>On screen color</i>	The color selection list can be used to select one of the preset colors to display the object on screen.
<i>Mark style</i>	Barcode objects can be marked by using vectors, dots or circle dots. → page 71, Settings for "Dot" Mode → page 72, Settings for "Circle dots" Mode
<i>Mark outline</i>	If this function is enabled, the contour lines of the bars will be marked. This function is disabled by default.
<i>Mark fill</i>	If this function is enabled, the object fill will be marked. The function can only be selected if a fill has been set. This function is disabled by default.
<i>Display vector jumps</i>	If this function is enabled, the entire sequence of movements is displayed on the screen, including the times in which the laser is deactivated while moving to the next vector to be marked (vector jumps). This function is disabled by default.

Settings for "Dot" Mode

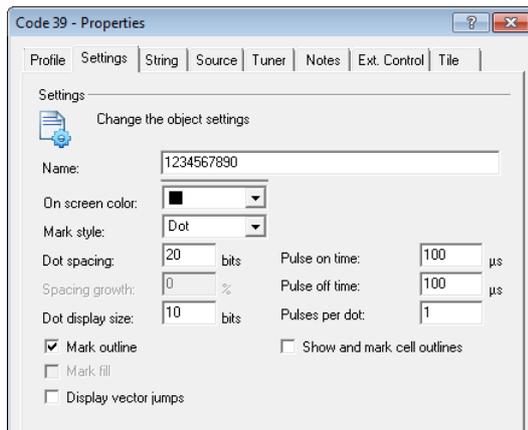


Dot spacing	Defines the spacing of the dots to each other and to the cell edge. At the same time, the number of dots, which are placed side by side, is determined.	
Dot display size	This parameter does not influence the actual marking. Ideally, the <i>Dot display size</i> matches the effect size of the dot marking. This allows the prediction of the marking quality on the computer screen.	
Pulse on time	Laser activation time per pulse.	These values interplay with laser power and frequency directly. Consequently they determine the effect size of dot marking.
Pulse off time	Laser deactivation time between the individual pulses (with > 1 pulses).	
Pulses per dot	Number of pulses emitted per dot.	
Show and mark cell outlines	If this function is enabled, the contour of the cells is displayed and marked even if <i>Mark Object</i> is deactivated.	

Example:




Settings for "Circle dots" Mode

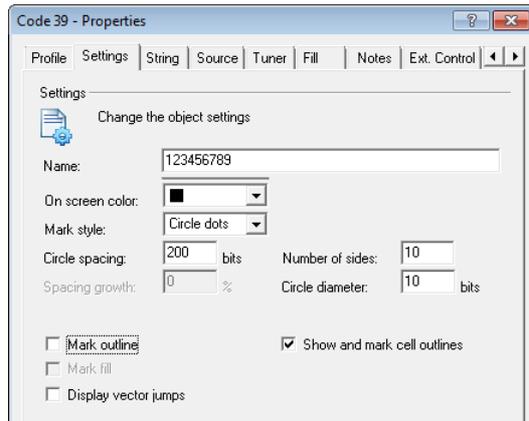


Circle spacing	Sets the midpoints distance of the circle dots. At the same time it is determined how many circle dots are placed side by side.
Number of sides	Each circle is made up by a number of lines. The more lines, the more rounded the circle appears.
Circle diameter	Allows to set the circle diameter.
Show and mark cell outlines	If this function is enabled, the contour of the cells is displayed and marked even if <i>Mark Object</i> is deactivated.

Example:

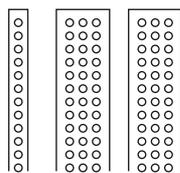

Circle spacing: 35bit
Circle diameter: 20bit

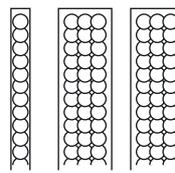

Circle spacing: 35bit
Circle diameter: 40bit


4.4.8 2D Barcode Objects

The following 2D barcode objects are supported by weldMARK™:
Data Matrix (ECC200), Denso QR code, PDF417

Defaults for 2D Barcode Objects

This section describes how to call up and modify the defaults for 2D barcode objects. The defaults apply to all new 2D barcode objects.

- Select *Objects > Defaults...* option from the menu.
- Select the object type *2D Barcode*. The dialogue on the right opens. Refer to the table below for explanations.

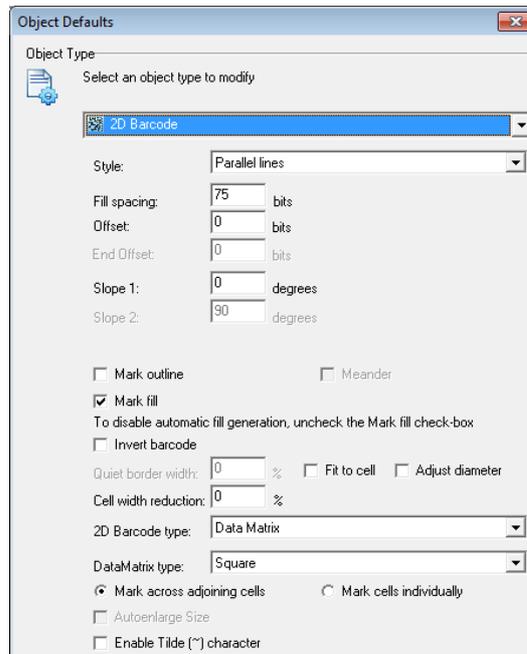


<i>Style</i>	Provides the selection of hatches. → page 87, Set Spiral filling
<i>Fill spacing</i>	When marking, each cell in the barcode is created with single lines. Via this input box the distance of these fill lines can be set. A value of "0" means that the bars will not be filled.
<i>Offset</i>	Distance between the filling and the contour.
<i>Slope</i>	Hatching angle for parallel lines.
<i>Mark outline</i>	If this function is enabled, the contour lines of the cells will be marked. This function is disabled by default.
<i>Mark fill</i>	If this function is enabled, the object fill will be marked. The function can only be selected if a fill has been set. This function is disabled by default.
<i>Invert barcode</i>	Enabling this function creates a negative of the original barcode. This function is disabled by default.
<i>Fit to cell</i>	Adjusts the position of the elements (circles, circle dots or vector lines) in such a way that they fit into the respective cell. The cell size maintains constant.
<i>Adjust diameter</i>	Adjusts the size of circle dots in such a way that they fit into the respective cell. This means that they do not overflow the cell boundary and fill the whole cell area.
<i>Cell width reduction</i>	Allows percentage reduction or extension of the cell width.
<i>2D Barcode type</i>	Allows the selection of a 2D-barcode type. For each type, different settings are offered.
<i>DataMatrix type</i>	
<i>Mark across adjoining cells</i>	Combines nearby cells to reduce marking time.
<i>Mark cells individually</i>	Marks each cell individually in order to optimize the marking quality.

<i>Autoenlarge Size</i>	Adjusts the amount of cells automatically, when the barcode content changes.
<i>Enable Tilde (~) character</i>	Allows to embed the tilde character into the barcode content.

Settings for a 2D Barcode Object

Specific settings are assigned to each barcode object. They can be called up and, if necessary, modified as follows:

- Right click on a 2D barcode object.
- Select *Properties...*
- Select *Settings* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

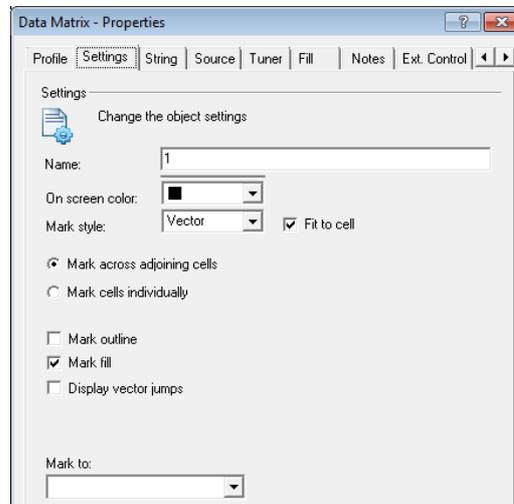


General Settings for all Mark Styles

<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>On screen color</i>	The color selection list can be used to select one of the preset colors to display the object on screen.
<i>Mark style</i>	Barcode objects can be marked by using vectors, dots or circle dots. → page 76, Settings for Mark Style „Vector“ → page 77, Settings for Mark Style „Dot“ → page 78, Settings for Mark Style "Circle dots"
<i>Display vector jumps</i>	If this function is enabled, the entire sequence of movements is displayed on the screen, including the times in which the laser is deactivated while moving to the next vector to be marked (vector jumps). This function is disabled by default.
<i>Mark to</i>	If more than one control card is installed, this drop-down menu sets the desired control card for marking the object.

Settings for Mark Style „Vector“



With this mark style the individual cells of Barcode Objects are marked by the succession of lines. The arrangement of these lines can be set via the *Fill* tab.

- Right click on a 2D barcode object.
- Select *Properties....*
- Select *Settings* tab.
The dialogue on the right opens.
Refer to the table below for explanations.
See also: → page 75, General Settings for all Mark Styles

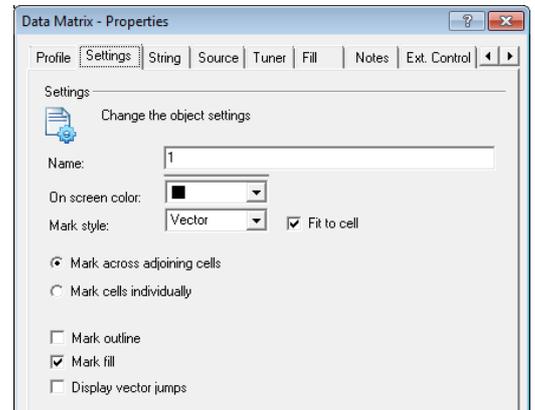

<i>Fit to cell</i>	Adjusts the position of vector lines. The fitting process for vector marking style takes into account the <i>Fill spacing</i> and the fill <i>Offset</i> defined in the <i>Fill</i> tab to space the lines evenly and to assure that the size of the cells is constant. Fill spacing is recalculated so that the first and the last filling lines are placed on the same filling offset distance to the outline. If <i>Fit to cell</i> is disabled, the number of lines to mark the cells may vary. This may lead to various cell sizes.
<i>Mark across adjoining cells</i>	The barcode filling is processed column-wise along the data matrix width.
<i>Mark cells individually</i>	Each barcode cell is processed sequentially.
<i>Mark outline</i>	If this function is enabled, the contour lines of the cells will be marked. This function is disabled by default.
<i>Mark fill</i>	If this function is enabled, the object fill will be marked. The function can only be selected if a fill has been set. This function is disabled by default.

Example:

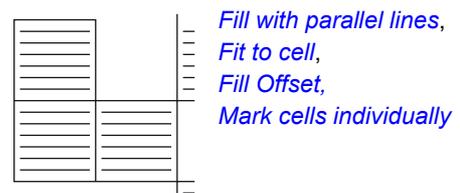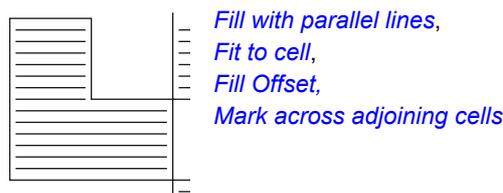


Hint: Since *Fit to cell* is a relative parameter, the marking quality is obtained even if the object size has been changed.

Settings for Mark Style „Dot“


- Right click on a 2D barcode object.
- Select *Properties...*
- Select *Settings* tab.

The corresponding dialogue opens. Refer to the table below for explanations.
 See also: → page 75, General Settings for all Mark Styles

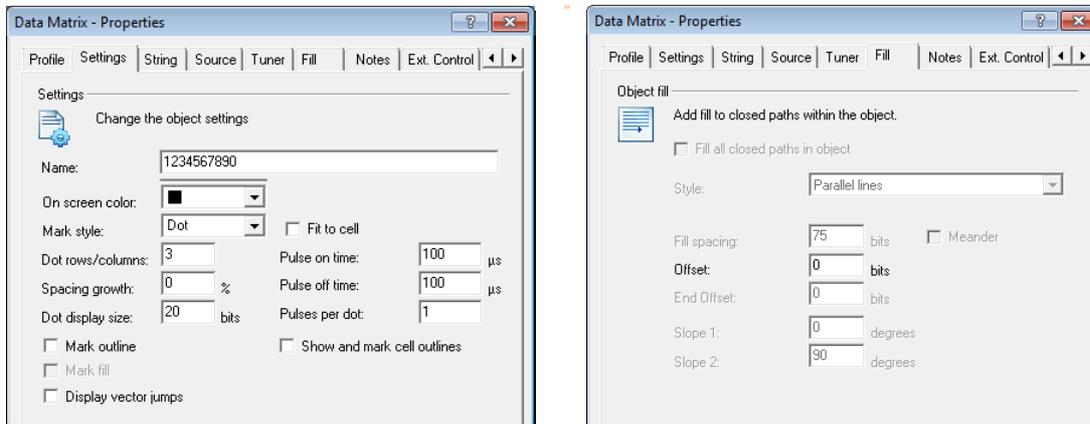

<i>Fit to cell</i>	The distance of dot centers is recalculated so that the edge of the outermost circles (dots) lay on the edge of the object (cell) reduced by the fill <i>Offset</i> .	
<i>Offset (Fill tab)</i>	Allows to set a distance to the cell edge.	
<i>Dot row/columns</i>	Sets indirectly the number of dots per cell.	
<i>Spacing growth</i>	Allows to add a percentage factor to the automatically calculated distance of the circle centers. Can not be used if <i>Fit to cell</i> is enabled.	
<i>Dot display size</i>	This parameter does not influence the actual marking. Ideally, the <i>Dot display size</i> matches the effect size of the dot marking. This allows the prediction of the marking quality on the computer screen.	
<i>Pulse on time</i>	Laser activation time per pulse.	These values interplay with laser power and frequency directly.
<i>Pulse off time</i>	Laser deactivation time between the individual pulses (with > 1 pulses).	
<i>Pulses per dot</i>	Number of pulses emitted per dot.	
<i>Show and mark cell outlines</i>	If this function is enabled, the contour of the cells is displayed and marked even if <i>Mark Object</i> is deactivated.	

Example:


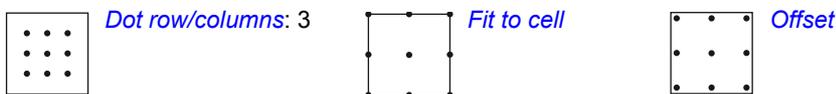


Hint: Since *Fit to cell* is a relative parameter, the marking quality is obtained even if the object size has been changed.

Settings for Mark Style "Circle dots"

- Right click on a 2D barcode object.
- Select *Properties...*
- Select *Settings* tab.

The corresponding dialogue opens. Refer to the table below for explanations.
See also: → page 75, General Settings for all Mark Styles

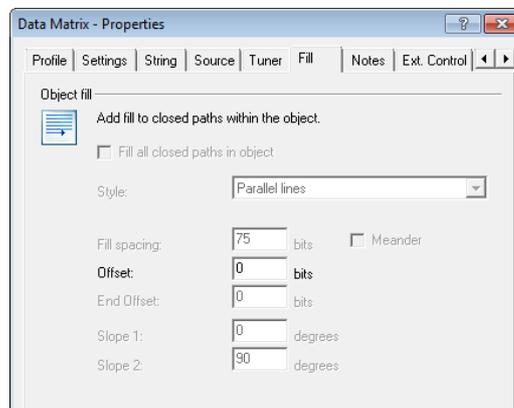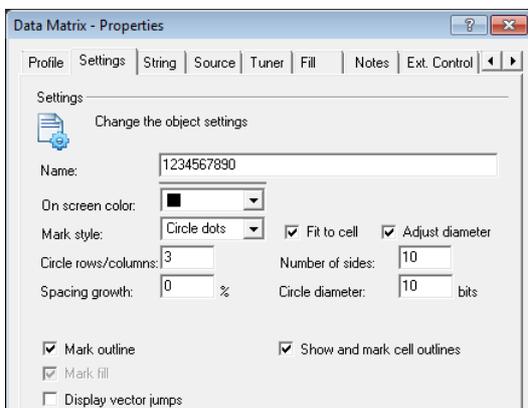


<i>Fit to cell</i>	The distance of circle dot centers is recalculated so that the edge of the outermost circles lay on the edge of the object (cell) reduced by the fill <i>Offset</i> . The spacing between circle dots is increased by the fill <i>Offset</i> value. Thus, the marked circles will not overlap if lasers with different spot sizes are used.
<i>Adjust diameter</i>	Changes the diameter of the circles so that they fit exactly together to the cell. If the diameter is smaller than the distance between circle dot centers, it is increased so that circles are spaced evenly and cover the whole cell. If the diameter is larger than the distance between circle dot centers, the diameter is reduced so that circles dots do not overlap. If the diameter is that large that circle dots overflow the cell outline, it is reduced so that the size of the cell doesn't increase.
<i>Circle row/columns</i>	Sets indirectly the number of circular dots per cell.
<i>Offset (Fill tab)</i>	Allows to specify a distance between neighboring circle dots and also to the cell edge.
<i>Spacing growth</i>	Allows to add a percentage factor to the automatically calculated distance of the circle centers. Can not be used if <i>Fit to cell</i> is enabled.
<i>Number of sides</i>	Each circle is made up by a number of lines. The more lines, the more rounded the circle appears.
<i>Circle diameter</i>	Allows to set the circle diameter. Hint: This diameter will be also maintained if the object size has been changed.
<i>Show and mark cell outlines</i>	If this function is enabled, the contour of the cells is displayed and marked even if <i>Mark Object</i> is deactivated.

Example 1:




Example 2:

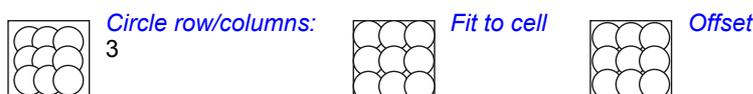

Hint: Since *Fit to cell* and *Adjust diameter* are relative parameters, the marking quality is obtained even if the object size has been changed.

Adding a Barcode Object

- Select **Objects >Add >Barcode** option from the menu.
The dialogue on the right opens.
- Select the required barcode type.
- Enter the desired data for the barcode.
- Click on **Add** button.
A new barcode is inserted in the center of the workspace.

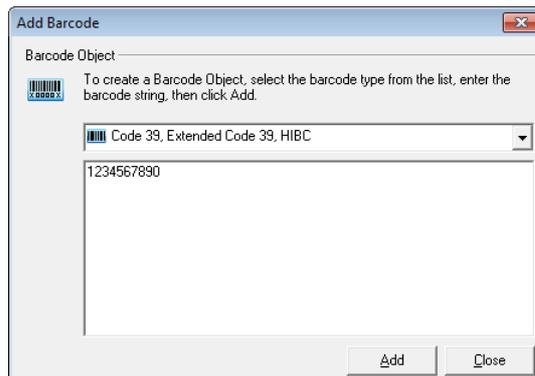

New
barcode


Properties of a Barcode Object

Properties are assigned to barcode objects, which determine how the objects are displayed on the screen and how they behave during laser processing. These properties are divided up as follows:

Profile	A marking profile is assigned to the object. The parameters of this profile can be changed.	→ page 135, Using Profiles
Settings	Various settings can be made for the object.	→ page 76, Settings for Mark Style „Vector“
String	Content of the barcode object.	→ page 80, String for a Barcode Object
Source	The content of barcode objects can be changed dynamically based on various rules.	→ page 88, String rules
Tuner	The barcode can be adapted to individual requirements.	→ page 81, Tuner Values for Barcode Objects
Fill	A fill can be applied to the object.	→ page 84, Object Fill
Notes	A note can be assigned to the object.	→ page 27, Notes
Ext. Control	A marking condition can be applied to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control
Tiling while marking	Used to mark oversized objects that are bigger than the marking area.	→ page 111, Tiling while marking

String for a Barcode Object

- Right click on a barcode object.
- Select *Properties...*
- Select *String* tab.
- The dialogue on the right opens.
Refer to the table below for explanations.

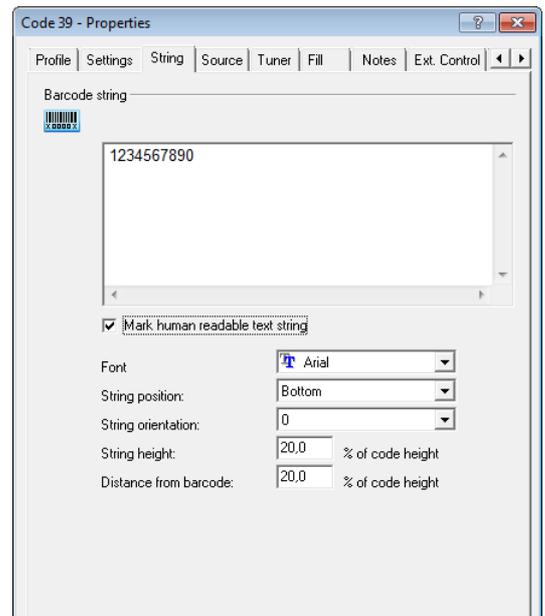


<i>Barcode string</i>	Content of the barcode object.	
<i>Mark human readable text string</i>	If this function is enabled, in addition to the barcode the associated string is marked in plain text.	
	<i>Font</i>	Font for the plain text.
	<i>String position</i>	The string can be positioned below, above, left or right to the barcode.
	<i>String orientation</i>	The alphanumeric string can be rotated in 90° increments.
	<i>String height</i>	The height of the characters relative to the height of the barcode can be set.
	<i>Distance from barcode</i>	The distance between the string and the barcode can be set relative to the height of the barcode.

Tuner Values for Barcode Objects


Some barcode types require individual options and tuner settings. The tuner values in the following example represent the values for barcode type “Code 39”. Please refer to the respective barcode specifications for non-listed tuner values of other barcode types.

- Right click on a barcode object.
- Select *Properties...*
- Select *Tuner* tab.

Depending on the barcode type, one of the following windows will be opened. Refer to the table below for explanations.

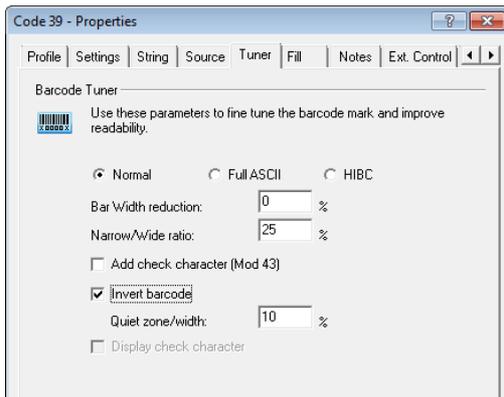

1D Barcode objects

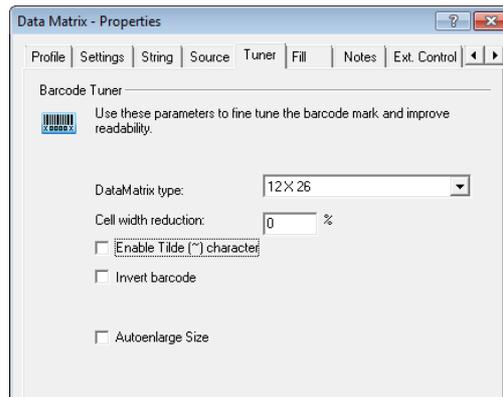

2D Barcode objects

1D Barcode objects	
<i>Bar Width reduction</i>	The bar width can be adjusted between -99% and 99%. A positive value reduces the bar width, a negative value increases it.
<i>Narrow/Wide ratio</i>	Ratio of dark and light areas in the barcode (the value must be an integer between 20 and 30).
<i>Add check character</i>	Enabling this function adds a check character to the barcode.
<i>Display check character</i>	When enabled, the check character is displayed as plain text (only available if <i>Add check character</i> is selected).
<i>Invert barcode</i>	Enabling this function creates a negative of the original barcode. This function is disabled by default
<i>Quiet zone/width</i>	The width of the quiet zone can be set relative to the barcode width.

2D Barcode objects	
<i>DataMatrix type</i>	Defines the cell to column proportion as well as the amount of cells in the data matrix code.
<i>Cell width reduction</i>	Reduces the cell size in percentage. Empty spaces between cells can be created this way.
<i>Enable Tilde (~) character</i>	Allows to embed the tilde character into the barcode content.
<i>Invert barcode</i>	Enabling this function creates a negative of the original barcode. This function is disabled by default
<i>Quiet border width</i>	In this field the relation between the width and the size of the barcode can be set.
<i>Mark across adjoining cells</i>	Combines nearby cells to save marking time.
<i>Mark cells individually</i>	
<i>Autoenlarge Size</i>	Adjusts the amount of cells automatically, when the barcode content changes.

4.4.9 Drill objects

When executing drill objects, the laser is moved to the specified coordinates and activated for a set time. Drill objects consist of individual dots arranged in rows and columns. Drill objects are used for perforating or drilling through a workpiece, for example.

Drill points are always arranged alongside both axis in constant spacings and are processed in bidirectional order.

Adding a Drill Object

- Select *Objects >Add >Drill...* option from the menu.

The dialogue on the right opens.

Refer to the table below for explanations.



New
drill object

<i>Columns</i>	Number of (dot) rows and columns that the drill object will consist of.
<i>Rows</i>	The total amount is 1000 points for columns/cells.
<i>No. of points</i>	Number of dots that the drill object consists of. This is the product of <i>cells</i> and <i>columns</i> per default. If an amount of points is chosen, that is smaller than the product, the difference in points is subtracted at the end of the dot matrix. Note that a value of "1" creates a single dot.
<i>Pulses per dot</i>	Number of pulses emitted per marking point.

Properties of a Drill Object

Properties are assigned to drill objects, which determine how the objects are displayed on the screen and how they behave during laser processing. These properties are divided up as follows:


<i>Profile</i>	A marking profile is assigned to the object. The parameters of this profile can be changed.	→ page 135, Using Profiles
<i>Settings</i>	Various settings can be made for the object.	→ page 83, Settings of a Drill Object
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be applied to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control
<i>Tiling while marking</i>	Used to mark oversized objects that are bigger than the marking area.	→ page 111, Tiling while marking

Settings of a Drill Object

Every drill object is assigned specific settings that can be called up and, if necessary, modified as follows:

- Right click on a drill object.
- Select *Properties...*
- Select *Settings* tab.

The dialogue on the right opens.
Refer to the table below for explanations.

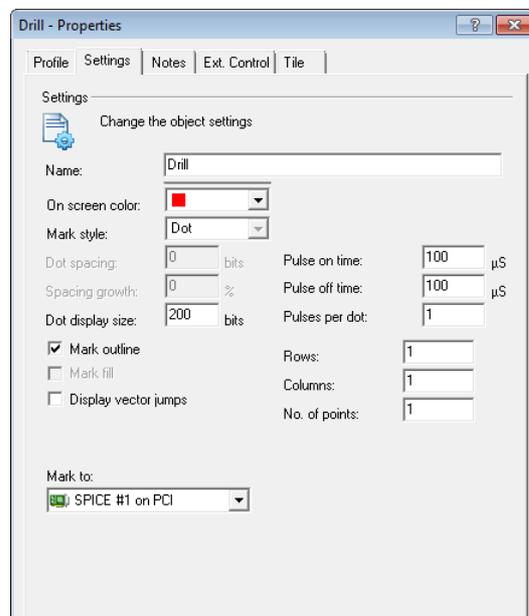

<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.	
<i>On screen color</i>	The color selection list can be used to select one of the preset colors to display the object on screen.	
<i>Dot display size</i>	Dot size on the screen. Points are shown squared. This parameter has no influence on the actual marking.	
<i>Pulse on time</i>	Laser activation time per pulse.	These values are directly in interplay with the laser power and frequency.
<i>Pulse off time</i>	Laser deactivation time between the individual pulses (with > 1 pulses).	
<i>Pulses per dot</i>	Number of pulses emitted per marking point.	
<i>Mark object</i>	Enabling this function means that the object will be marked. This function is enabled by default.	
<i>Display vector jumps</i>	If this function is enabled, the entire sequence of movements is displayed on the screen, including the times in which the laser is deactivated while moving to the next vector to be marked (vector jumps). This function is disabled by default.	

<i>Rows</i>	Number of rows of dots in the drill object.
<i>Columns</i>	Number of columns of dots in the drill object.
<i>No. of points</i>	Number of dots that the drill object consists of. This is the product of <i>cells</i> and <i>columns</i> per default. If an amount of points is chosen, that is smaller than the product, the difference in points is subtracted at the end of the dot matrix. Note that a value of "1" creates a single dot.
<i>Mark to</i>	If more than one control card is installed, this drop-down menu sets the desired control card for marking the object.

4.5 Object Fill

weldMARK™ enables areas of objects to be filled. Only objects with a completely closed contour can be filled. This may be either characters of a text object, polygon or rectangle objects, enclosed bezier or polyline objects, barcode objects or objects of an imported vector graphic. The exceptions are bitmap objects, laser optimized fonts, dot matrix fonts and drill objects.

Overlapping objects can not be filled.

The fill is created by densely packed lines that can be identified as hatching with a larger spacing.



Empty object



Filled object

The optimum spacing between the individual lines in a fill depends on the wavelength of the laser, the spot size, the material and other factors. The set line spacing is saved along with the object and remains unchanged even if the size of the object is changed.

The examples below show different fill spacings:



Fill spacing = 150 bits




Fill spacing = 30 Bits

In addition to parallel lines, a crosshatch fill with different angles is available:




Crosshatch with 0 and 90 degrees

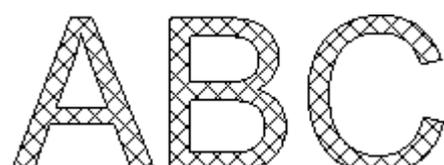

Crosshatch with -45 and +45 degrees

Via the „Offset“ option a distance between the object filling and the object outline can be defined:

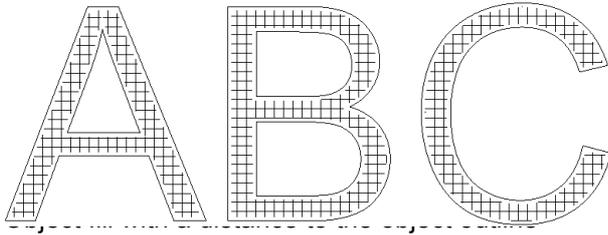


Set Object Fill

The filling of a selected object is activated and set as following:

- Right click on the object you want to fill.
- Select *Properties...*
- Select *Fill* tab..

The dialogue on the right opens.

Refer to the table below for explanations.

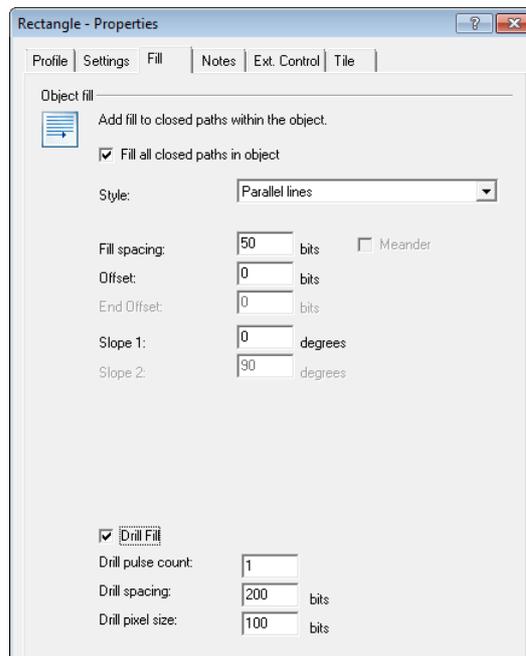

<i>Fill all closed paths in object</i>	If this function is enabled, all closed paths in the selected object are filled.	
	<i>Style</i>	 Parallel lines
		 Crosshatch
		 Parallel lines, bidirectional
		 Crosshatch, bidirectional
		 Spiral (only for Data Matrix Barcodes)
	<i>Meander</i>	 Only for barcode objects with bidirectional hatches (not for 2D barcodes): The filling of the objects is marked in one go, i.e. without switching off of the laser between end and start point of the single lines.
	<i>Fill spacing</i>	Spacing of the fill lines.
	<i>Skip Frame</i>	Inverts the filling of vector objects with multiple layers. All previously unfilled areas are filled, and vice versa.
	<i>Offset</i>	This option enables an improvement of the marking quality of a filled object. The laser beam creates rounded start and end dots with the diameter of the laser spot on each fill line. This causes a waved appearance of the object outline The outline is straightened by an additional marking of the outline itself. Because the outline overlaps the start and end points of the filling lines, these areas are marked twice. This can be prevented by an offset, i.e. a distance between the outline and the filling lines.
<i>Slope 1</i>	Hatching angle for parallel lines.	
<i>Slope 2</i>	Hatching angle for crosshatch.	
<i>Drill fill</i>	If this function is enabled, the filling of the object is marked with details instead of lines. This function is available if <i>Fill all closed paths in object</i> is enabled.	
	<i>Drill pulse count</i>	Number of pulses per point.
	<i>Drill spacing</i>	Spacing between the drills.
	<i>Drill pixel size</i>	Size of the drills.


Set Spiral filling

Spiral filling (only available for Data Matrix Barcodes) of a selected Barcode is activated and set as following.

- Right click on the object you want to fill.
- Select *Properties...*
- Select *Fill* tab..

The dialogue on the right opens.

Refer to the table below for explanations.

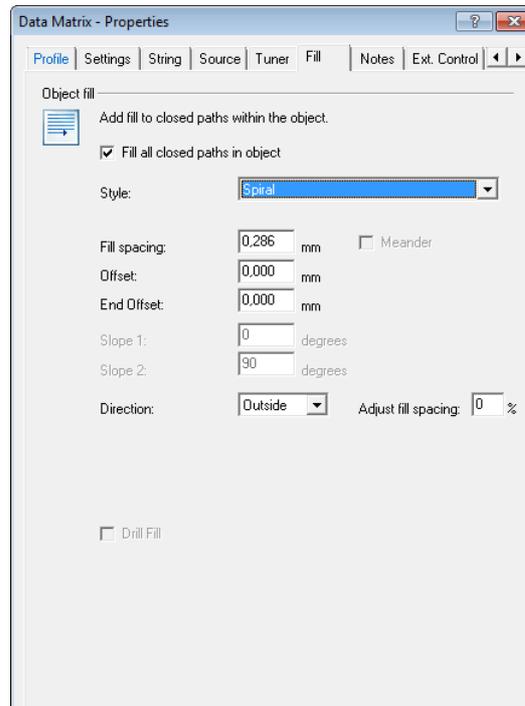

<i>End Offset</i>	Offset Settings for the barcodes from inside.
<i>Radial orientation</i>	Depending on the setting the laser will either mark from the inside or from the outside.
<i>Adjust fill spacing</i>	Spacing of the fill lines.


4.6 String rules

The strings on which text and barcode objects are based can be changed dynamically during execution of the job. The context of the string is adjusted at regular intervals according to the selected string rule..

The string rule for a text or barcode object can be called up and, if necessary, modified as follows:

- Right click on a text or barcode object.
- Select *Properties...*
- Select *Source* tab.

The dialogue on the right opens. The table below contains an overview of the available string rules.

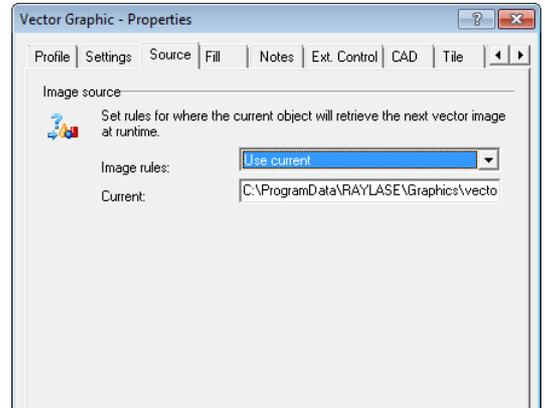

<i>Justify</i>		With strings of different lengths, this function aligns the strings with the selected point in the original string (left, right, centered / top, center, bottom).
<i>Use current string.</i>		The content of the <i>String</i> tab acts as the source for the string. This is the default setting.
<i>User TextMerge</i>		The source of the string is a linked text file. → page 89, "Use TextMerge" string rule (one line objects) → page 90, "Use TextMerge" string rule (multi-line objects)
For barcode objects and single row text objects only.	<i>Use AutoDate</i>	Depending on the setting, the string will either consist of the current date, the current time or the current shift code. → page 91, "Use AutoDate" string rule
	<i>Supply string at start</i>	The string must be entered by the user before starting each job. This entry is then valid until the end of the job. → page 93, "Supply string at start" string rule
	<i>Supply string every mark</i>	The string must be entered by the user each time the object is marked. → page 94, "Supply string every mark" string rule
	<i>Serialize w/current start value</i>	The content of the string is changed in specified increments. The content of the <i>String</i> tab is used as start value. → page 95, "Serialize w/current start value" string rule
	<i>Serialize w/supplied start value</i>	The content of the string is changed in specified increments. The user is prompted to enter a start value. → page 96, "Get string from memory buffer" string rule
	<i>Get string from memory buffer</i>	The content of one of the ten weldMARK™ buffers is used as the source for the string. → page 97, "Get string from memory buffer" string rule
	<i>Custom string</i>	The content of the string is determined by a formatting code. → page 98, "Custom string" string rule

The range of options available is reduced for multi-line text objects.


4.6.1 "Use TextMerge" string rule (one line objects)

This rule enables the strings for one line text or barcode objects to be loaded from a merge file. A simple text file with the extension ".txt" is used as the merge file. Each string in the merge file must be completed with a line break (Enter key). This also applies to the last line in the merge file.

The parameters of the TextMerge function can be set as follows for one line objects:

- Right click on a one line text or barcode object.
- Select *Properties...*
- Select *Source* tab.
- Select the *Use TextMerge* string rule.

The dialogue on the right opens.
Refer to the table below for explanations.

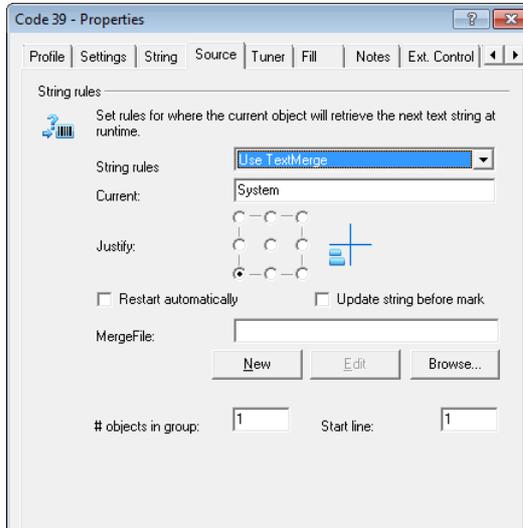

<i>Justify</i>	With strings of different lengths, this function aligns the strings with the selected point in the original string (left, right, centered / top, center, bottom).
<i>Restart automatically</i>	If this function is enabled, the merge file will be re-processed as soon as its end has been reached.
<i>Update string</i>	If this function is enabled, the merge file will be read again before executing.
<i>MergeFile</i>	The specified text file is completely loaded when starting the job. For each marking operation, the string for the text or barcode object is overwritten with the next line from the merge file. If the job is ended, weldMARK™ sets a bookmark in this text file to indicate the last item processed.
<i>New</i>	The merge file can be created, searched, loaded and edited in weld-MARK™.
<i>Edit</i>	
<i>Browse...</i>	
<i># objects in group</i>	Number of text or barcode objects in current job that read their string from the same merge file. The value entered corresponds to the increment for reading the lines: For each marking operation, lines in the merge file are skipped corresponding to the number of objects in the group.
<i>Start line</i>	Number of the first line to be read from the merge file.
<i>Update string</i>	Updates the display while the marking process is ongoing.

Upon reaching the end of the merge file, the user is prompted to start with the first entry again or cancel, per dialogue.


4.6.2 "Use TextMerge" string rule (multi-line objects)

This rule enables the strings for multi-line text or barcode objects to be loaded from a merge file. A simple text file with the extension ".txt" is used as the merge file. Each string in the merge file must be completed with a line break (Enter key). This also applies to the last line in the merge file.

The parameters of the TextMerge function can be set as follows for multi-line objects:

- oRight click on a multi-line text or barcode object.
- Select *Properties....*
- Select *Source* tab.
- Select the *Use TextMerge* string rule.

The dialogue on the right opens.
Refer to the table below for explanations.

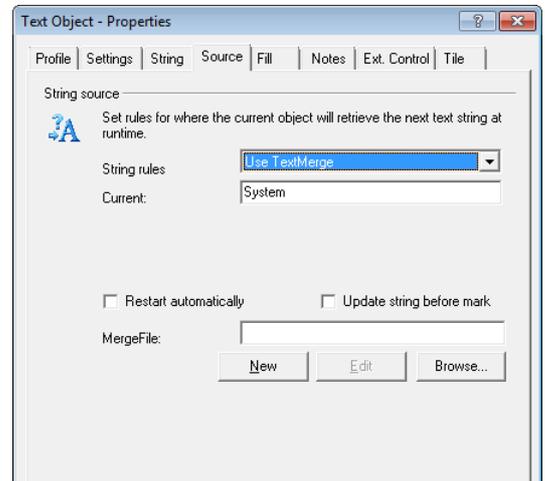

<i>MergeFile</i>	The specified text file is completely loaded when starting the job. For each marking operation, the string for the text or barcode object is overwritten with the next lines from the MergeFile. If the job is ended, weldMARK™ sets a bookmark in this text file to indicate the last item processed.
<i>Restart automatically</i>	If this function is enabled, the merge file will be re-processed as soon as its end has been reached.
<i>Update string</i>	If this function is enabled, the merge file will be read again before executing.
<i>New</i>	The merge file can be created, searched, loaded and edited in weld-MARK™.
<i>Edit</i>	
<i>Browse...</i>	
<i>Update string</i>	Updates the display while the marking process is ongoing.


Upon reaching the end of the merge file, the user is prompted to start with the first entry again or cancel, per dialogue.

4.6.3 "Use AutoDate" string rule

This rule enables text or barcode objects to be marked with the current date, the current time or the current shift code. This information is derived from the Windows system clock and is updated for each marking operation

- Right click on a one line text or barcode object.
- Select *Properties...*
- Select *Source* tab.
- Select the *Use AutoDate* string rule.

The dialogue on the right opens.
Refer to the table below for explanations.

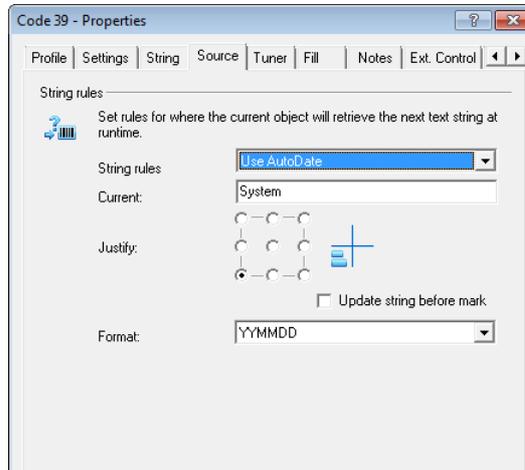


<i>Justify</i>	With strings of different lengths, the strings are aligned with the selected point in the original string (left, right, centered).	
<i>Format</i>	Format selection for the AutoDate string. The available AutoDate formats are as follows (example date 15th January 2006):	
	Format	Output
	YYMMDD	060115
	MM/DD/YY	01/15/06
	DD/MM/YY	15/01/06
	Month DD, YYYY	January 15, 2006
	DD Month, YYYY	15 January, 2006
	YWW	602 (WW: Week number)
	YMD	61E (single digit alphanumeric values for year, month and day. Sequence: 1,2,3...9,0,A,B,C...)
	DDD	015 (three digit value for day of the year)
	DDDY	0156 (three digit value for day of the year and single digit value for the year)
	YY	06
	Shift code	See next section.
	DDMY	1516
	HH:MM:SS	11:55:00
Update string	Updates the display while the marking process is ongoing.	

4.6.4 String rule „AutoDate“, Format „Shift code“

This format is part of the *AutoDate* string rule (→ page 91, "Use AutoDate" string rule). If this format is selected, the current shift code is applied to the object as a string for each marking operation. The information is derived from the Windows system clock.

- Right click on a one line text or barcode object.
- Select *Properties...*
- Select *Source* tab.
- Select the *Use AutoDate* string rule.
- Select the *Shift code* format.

The dialogue on the right opens.
Refer to the table below for explanations.

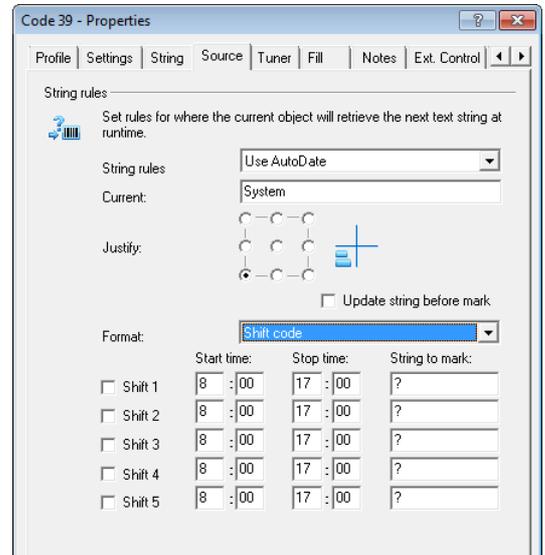


<i>Shift 1 ... Shift 5</i>	These check boxes can be used to activate up to five shifts.	
<i>Start time</i>	These fields are used to define the start and end times for each shift. If the shifts overlap, the first permissible shift is used. The remaining shifts are ignored. If there are periods of time that are not assigned to an active shift, a "?" is output. If a shift includes the time 0:00 (change of date), it must be split into two sections with the same shift code.	
<i>Stop time</i>		
<i>String to mark</i>	These fields can be used to enter the shift codes to be marked with the laser.	
Update string	Updates the display while the marking process is ongoing.	

4.6.5 "Supply string at start" string rule

If this rule is selected, each time a job is started the user is prompted to enter a string for the text or barcode object. This string rule will be used until the end of the job and will stay the same during repeated cycles for example.

- Right click on a one line text or barcode object.
- Select *Properties...*
- Select *Source* tab.
- Select the *Supply string at start* string rule.


The dialogue on the right opens.
Refer to the table below for explanations.

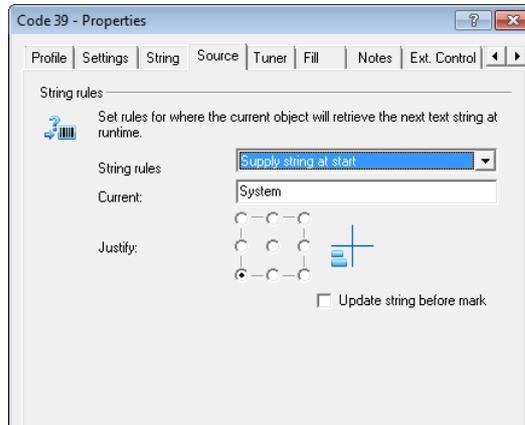

<i>Justify</i>	With strings of different lengths, the strings are aligned with the selected point in the original string (left, right, centered).
Update string	Updates the display while the marking process is ongoing.

Starting dialogue

The following dialogue is shown after starting the job.

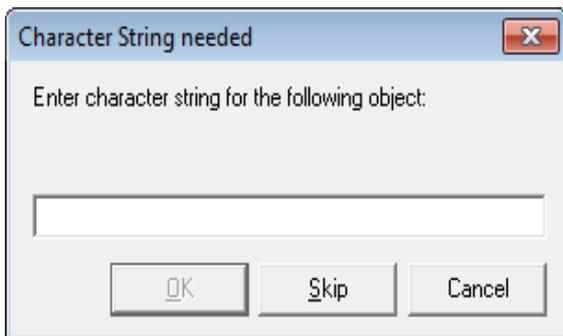


<i>OK</i>	Confirms the value.
<i>Skip</i>	Repeats the previous value
Cancel	Cancels the cycle at this point.

4.6.6 "Supply string every mark" string rule

If this rule is selected, the value of a text or barcode object is automatically increased or reduced by a particular value. The entered string will be used for one marking only.

- Right click on a one line text or barcode object.
- Select *Properties...*
- Select *Source* tab.
- Select the *Supply string every mark* string rule.


The dialogue on the right opens.
Refer to the table below for explanations.

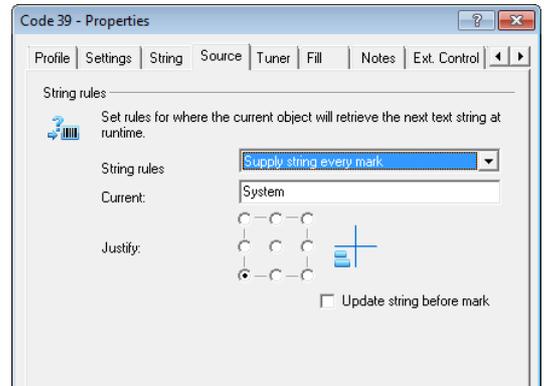

<i>Justify</i>	With strings of different lengths, the strings are aligned with the selected point in the original string (left, right, centered).
Update string	Updates the display while the marking process is ongoing.

Starting dialogue

The following dialogue is shown after starting the job.

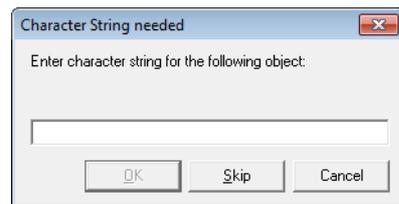

<i>OK</i>	Confirms the value.
<i>Skip</i>	Repeats the previous value
Cancel	Cancels the cycle at this point.


4.6.7 "Serialize w/current start value" string rule

If this rule is selected, the value of a text or barcode object is automatically increased or reduced by a particular value.

When starting the job the user is prompted to enter a string as the start value.

- Right click on a one line text or barcode object.
- Select *Properties...*
- Select *Source* tab.
- Select the *Serialize w/current start value* string rule..

The dialogue on the right opens.
Refer to the table below for explanations.

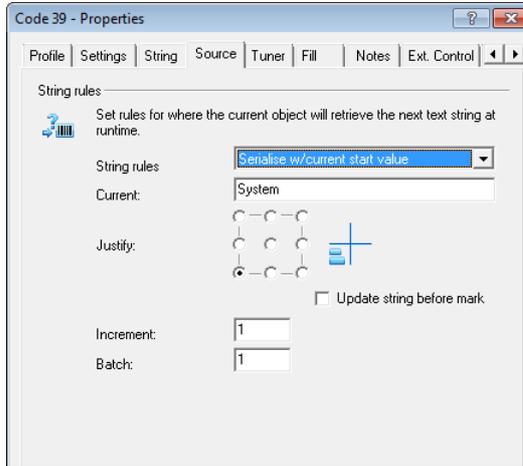

<i>Justify</i>	With strings of different lengths, the strings are aligned with the selected point in the original string (left, right, centered).
<i>Increment</i>	Sets the increment by which the string will be changed. A positive value increases the value of the string, a negative value reduces it. Both letters and numbers can be incremented: 0001A is increased to 0001B. Note that an arrangement of letters is only permissible for ANSI text. It is possible that Unicode text consisting of letters will not be in-cremented correctly. Leading zeroes are retained.
<i>Batch</i>	Batch size for serialization. The string is only incremented when the number of markings specified under <i>Batch</i> has been performed.
Update string	Updates the display while the marking process is ongoing.


4.6.8 "Get string from memory buffer" string rule

If this rule is selected, the value of a text or barcode object is automatically increased or reduced by a particular value.

When starting the job the user is prompted to enter a string as the start value.

- Right click on a one line text or barcode object.
- Select *Properties...*
- Select *Source* tab.
- Select the *Serialize w/supplied start value* string rule..

The dialogue on the right opens.
Refer to the table below for explanations.

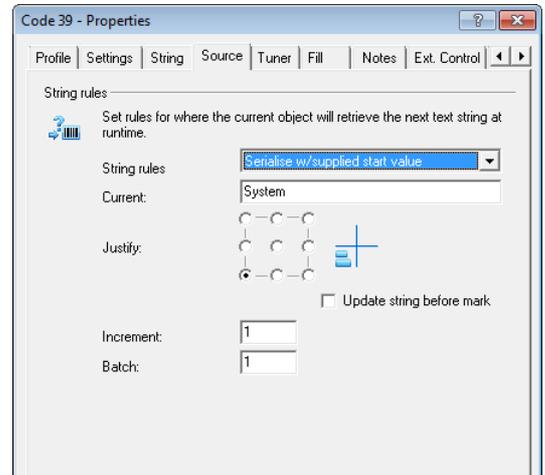

<i>Justify</i>	With strings of different lengths, the strings are aligned with the selected point in the original string (left, right, centered).
<i>Increment</i>	Sets the increment by which the string will be changed. A positive value increases the value of the string, a negative value reduces it. Both letters and numbers can be incremented: 0001A is increased to 0001B. Note that an arrangement of letters is only permissible for ANSI text. It is possible that Unicode text consisting of letters will not be incremented correctly. Leading zeroes are retained.
<i>Batch</i>	Batch size for serialization. The string is only incremented when the number of markings specified under <i>Batch</i> has been performed.
Update string	Updates the display while the marking process is ongoing.


4.6.9 "Get string from memory buffer" string rule

This rule enables the strings for text and barcode objects to be read from one of the ten weldMARK™-buffers immediately prior to the marking operation. The content of the buffer can constantly be changed using an external host program (→ page 228, Remote Interface and → page 203, Global Settings).

- Right click on a one line text or barcode object.
- Select *Properties...*
- Select *Source* tab.
- Select the *Get string from memory buffer* string rule.

The dialogue on the right opens.

Refer to the table below for explanations.

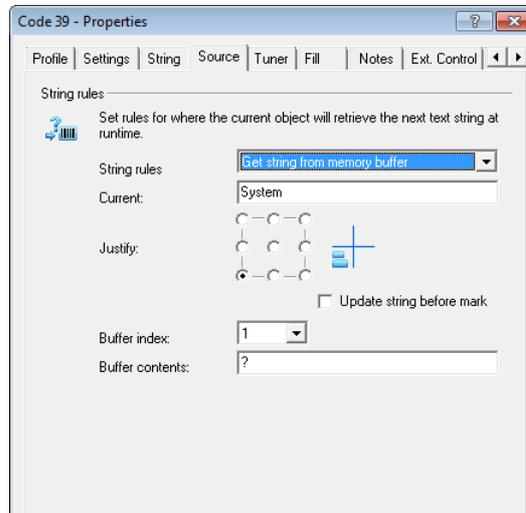


<i>Justify</i>	With strings of different lengths, the strings are aligned with the selected point in the original string (left, right, centered).
<i>Buffer index</i>	Number of the weldMARK™ memory buffer to be used to obtain the data.
<i>Buffer contents</i>	Current content of the weldMARK™ <i>Buffer Index</i> . When the application is started, the buffers are set to a value of "?".
Update string	Updates the display while the marking process is ongoing.

4.6.10 "Custom string" string rule

This rule enables the string for the text or barcode object to be created using a custom string.

- Right click on a one line text or barcode object.
- Select *Properties...*
- Select *Source* tab.
- Select the *Custom String* string rule.

The dialogue on the right opens.
Refer to the table below for explanations.

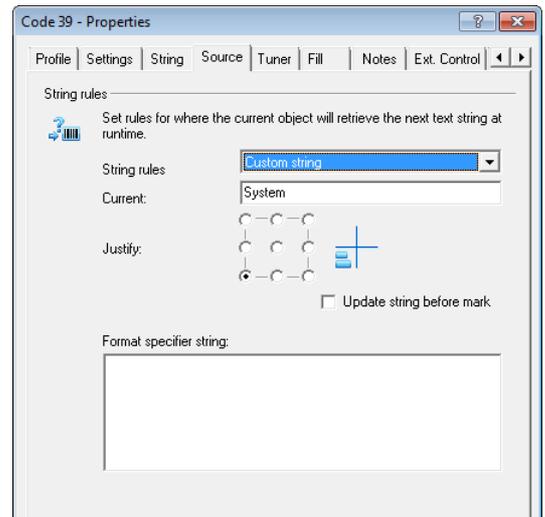

<i>Justify</i>	With strings of different lengths, the strings are aligned with the selected point in the original string (left, right, centered).
<i>Format specifier string</i>	Enter the custom string to be used to create a string for the object (see table below).

Code	Code example	Text created for string
<i>%A</i>		Abbreviated day of the week (Mon, Tue, Wed, Thu, Fri, Sat, Sun)
<i>%B</i>		Abbreviated month (Jan, Feb, Mar, Apr, May, Jun, Jul, Aug, Sep, Oct, Nov, Dec)
<i>%C</i>		Date and time (MM/DD/YY HH:MM)
<i>%D</i>		Day of the month (01 - 31)
<i>%H</i>		Hour (00 - 23)
<i>%h</i>		Hour (00 - 12)
<i>%J</i>		Day of the year (001 - 366)
<i>%K</i>		Month code (1 - 9, O, N, D)
<i>%L</i>		Last digit of year (0 - 9)
<i>%M</i>		Month (01 - 12)
<i>%N</i>		Minutes (00 - 59)
<i>%F</i>		Seconds (00-59)
<i>%E</i>		After recall, the previously string is added by the actual string.
<i>%O</i>		Ascending numerical value. Starts with a value of "1" at the beginning of the process.
<i>%o</i>		Same as code <i>%O</i> . After restart, the last used numerical value will be used as start value.
<i>%P</i>		AM or PM
<i>%Q#</i>	<i>%Q1</i>	The string is copied from the weldMARK™ buffer (# 1-10).
<i>%R</i>		Week (01-53). Week "01" is the week that includes 1st January.
<i>%r</i>		Week (01-53). Week "01" is the week that includes the first Thursday of the new year.

Code	Code example	Text created for string
<code>%S,d,s,i,b</code>	<code>%S,9,1,1,1</code>	S = Consecutive number d = End number s = Start number i = Increment b = batch Note: Only integer values are supported. The parameters "i" and "b" must be positive.
<code>%s</code>		Same as code <code>%S</code> . After restart, the last used numerical value will be used as start value.
<code>%T</code>		Time (HH:MM)
<code>%V"</code>	<code>%V'RAYLASE'</code>	Any text can be entered here. The text must be placed between quotation marks ("RAYLASE" in the code example).
<code>%W</code>		Day of the week (coding: 1 = "Sunday" ... 7 = "Saturday")
<code>%w</code>		Day of the week (coding: 1 = "Monday" ... 7 = "Sunday")
<code>%X#</code>	<code>%X5</code>	A particular number of spaces can be inserted (5 spaces in the code example).
<code>%Y</code>		Year (00 - 99)

5 TOOLS FOR EDITING MARKING OBJECTS

weldMARK™ provides the following tools for editing marking objects:

<i>Align objects</i>	Objects can be aligned relative to one another.	→ page 100, Aligning Objects
<i>Dimensions</i>	Objects can be positioned, scaled, rotated or skewed.	→ page 101, The "Dimensions" Toolbox
<i>Grid/Guidelines</i>	The grid and the guidelines are used to make it easier to align objects on the screen. Their properties can be set.	→ page 114, Grid Line Settings → page 114, Modify Guidelines
<i>Zoom tools</i>	The display size of the workspace on the screen can be enlarged or reduced.	→ page 117, Appliance of the Zoom tools


5.1 Aligning Objects

The *Align...* tool enables the alignment relative to one another. Objects are always aligned to the last selected object.



Align objects

- Select the objects you want to align.
- Select *Tools > Align...* option from the menu. The dialogue on the right opens. Refer to the table below for explanations.

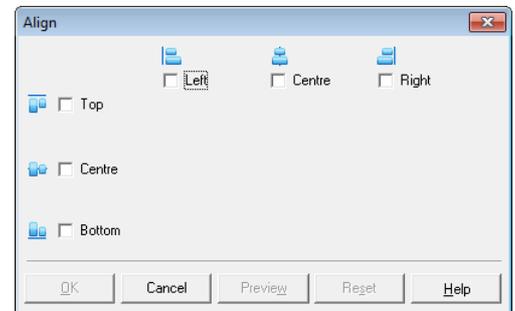

<i>Top, Center, Bottom</i>	These check boxes allow you to specify the required vertical and horizontal alignment of the objects to one another.
<i>Left, Center, Right</i>	
<i>Preview</i>	Clicking on this button displays the expected result of the alignment. Then the alignment can be reversed either by clicking on <i>Reset</i> or confirmed by clicking on <i>OK</i> .
<i>Reset</i>	

5.2 The "Dimensions" Toolbox

The "Dimensions" toolbox contains the following tools for editing marking objects:

<i>String position</i>	→ page 101, Positioning objects
<i>Scale</i>	→ page 102, Scaling and mirroring Objects
<i>Size</i>	→ page 103, Changing the Object Size
<i>Rotate</i>	→ page 106, Rotating Objects
<i>Move to Folder...</i>	→ page 106, Nudging Objects
<i>Skew</i>	→ page 107, Skewing Objects

Definition frame-spot:


The frame spot is defined as the lower-right corner of the virtual frame that covers objects.

5.2.1 Positioning objects

The *Position* tool enables you to display and change an object's current position.

- Select a marking object.
- Select *Objects > Dimensions...* option from the menu.
- Select *Position* tool.

The dialogue on the right opens. Refer to the table below for explanations.

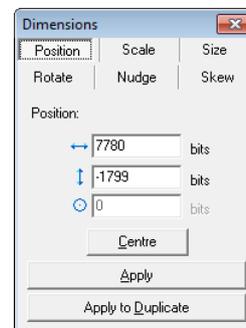


<i>String position</i>	The current position of the selected object is shown in the two input boxes. The specified position can be overwritten with your required target position. The data relates to the frame spot of the object. Additionally a Z-position for the lower edge can be defined for solid modelings (SDL File Import).
<i>Center</i>	Clicking on this button positions the selected object in the center of the workspace.
<i>Apply</i>	Clicking on this button applies the settings made to the selected object.
<i>Apply to Duplicate</i>	Clicking on this button copies the selected object and applies the changed settings to the copy.

5.2.2 Scaling and mirroring Objects

The *Scale* tool enables you to scale objects by a specified factor and, if required, to mirror them.

- Select a marking object.
- Select *Objects >Dimensions...* option from the menu.
- Select *Scale* tool.

The dialogue on the right opens. Refer to the table below for explanations.

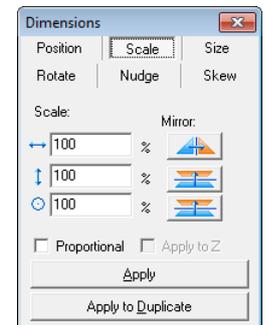

<i>Scale</i>	The desired scaling factor for the X-, Y- and Z-Axis can be defined here.
<i>Proportional</i>	If this function is activated all axis of the object will be scaled with the same factor.
<i>Mirror</i>	Clicking on this button, mirrors the selected object horizontally or respectively vertically.
<i>Apply to Z</i>	Scalings of 3D Vector Objects and solid modelings will be set proportionally to the Z-axis (height axis).
<i>Apply</i>	Clicking on this button applies the settings made to the selected object.
<i>Apply to Duplicate</i>	Clicking on this button copies the selected object and applies the changed settings to the copy.


A separate tool is available for fixed radial text objects (→ page 105, Changing the Object Size (Radial Text - fixed)).

5.2.3 Changing the Object Size

The **Size** tool enables you to change the width and height of objects by entering the required values.

- Select a marking object.
- Select **Objects >Dimensions...** option from the menu.
- Select **Size** tool.

The dialogue on the right opens. Refer to the table below for explanations.

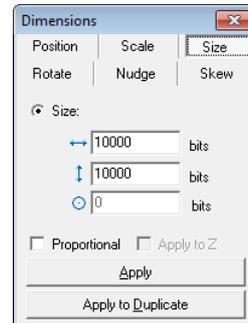

Size	These input boxes display the current width, height and depth of the selected object if necessary. The values can be changed as required. The change in size is performed from the center of the selected object or object group.
Proportional	If this function is enabled, the width and height of the object are changed by the same factor horizontally and vertically. Making an entry in one field changes the value in the other field automatically.
Apply to Z	Size alteration of 3D Vector Objects and solid modelings will be set proportionally to the Z-axis (height axis).
Apply	Clicking on this button applies the settings made to the selected object.
Apply to Duplicate	Clicking on this button copies the selected object and applies the changed settings to the copy.


The object size can also be changed by using the anchor points with the mouse. However, the value of the Z-axis stays unchanged with 3D objects.

Size Option for Standard and radial Text Objects

For standard text objects and for text objects with the *Radial* display option, in addition to the option of changing the size (→ page 103, Changing the Object Size) the special *Constraints* function is available. This function enables assigning a different output size in relation to the size shown on the screen to these objects for the marking process.


- Select a text or radial text object.
- Select *Objects >Dimensions...* option from the menu.
- Select *Size* tool.
- Select *Constraints* option field.

The dialogue on the right opens. Refer to the table below for explanations.

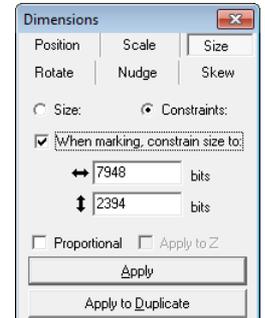


<i>When marking, constrain size to</i>	Enabling this function allows you to specify the output size of the radial text object.
	The required output size for the radial text objects can be entered in these fields.
	
<i>Apply</i>	Clicking on this button applies the settings made to the selected object.
<i>Apply to Duplicate</i>	Clicking on this button copies the selected object and applies the changed settings to the copy.

Example:

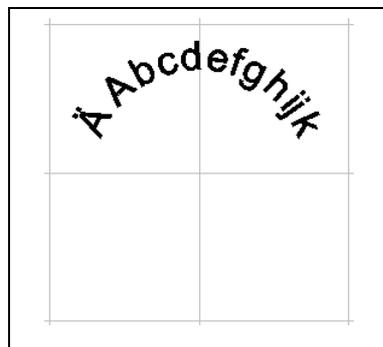

Radial text variable

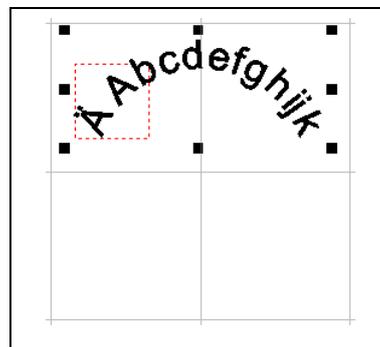


Option: *Constraints*
The red rectangle indicates the output size.

Changing the Object Size (Radial Text - fixed)


Special options are available for changing the size of *Radial - fixed* type objects. Furthermore you can assign a different output size in relation to the size shown on the screen to these objects for the marking process.

- Select a fixed radial text object.
- Select *Objects > Dimensions...* option from the menu.
- Select *Size* tool.
The dialogue on the right opens.

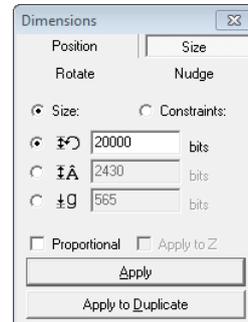

<i>Size</i>		The diameter for the base line of the text can be specified here.
		The font size can be specified by entering the x-height and the ascender.
		The font size can be specified by entering the descender.
<i>Constraints</i>		Enabling this function allows selecting a different diameter for the marking process.
<i>Apply</i>		Clicking on this button applies the settings made to the selected object.
<i>Apply to Duplicate</i>		Clicking on this button copies the selected object and applies the changed settings to the copy.

Example:

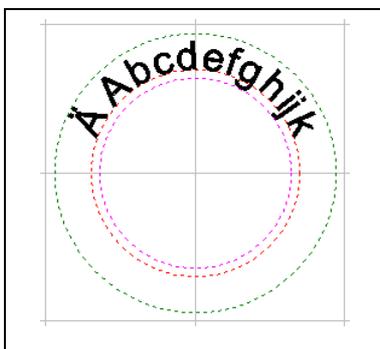


Radial text - fixed

5.2.4 Rotating Objects

The *Rotate* tool enables objects to be rotated by a specified angle. The middle of the object frame is the centre of rotation.

- Select a marking object.
- Select *Objects >Dimensions...* option from the menu.
- Select *Rotate* tool.

The dialogue on the right opens. Refer to the table below for explanations.

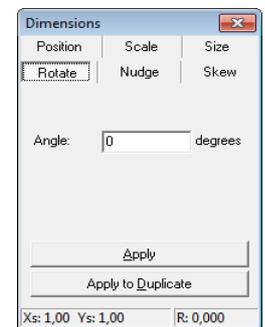


<i>Angle</i>	An angle for object rotation can be selected in this entry field. Positive value: rotation clockwise Negative value: rotation counter-clockwise
<i>Apply</i>	Clicking on this button applies the settings made to the selected object.
<i>Apply to Duplicate</i>	Clicking on this button copies the selected object and applies the changed settings to the copy.

5.2.5 Nudging Objects

The *Nudge* tool enables objects to be shifted by a specified angle.

- Select a marking object.
- Select *Objects >Dimensions...* option from the menu.
- Select *Nudge* tool.

The dialogue on the right opens. Refer to the table below for explanations.

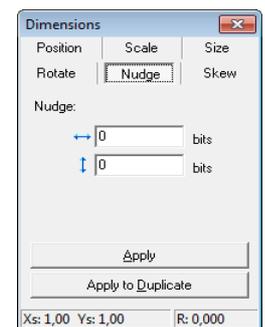


<i>Nudge</i>	These input boxes can be used to specify values for the required movement of the object in horizontal and vertical direction.
<i>Apply</i>	Clicking on this button applies the settings made to the selected object.
<i>Apply to Duplicate</i>	Clicking on this button copies the selected object and applies the changed settings to the copy.

5.2.6 Skewing Objects

The *Skew* tool enables skewing objects by a specified angle.


- Select a marking object.
- Select *Objects > Dimensions...* option from the menu.
- Select *Skew* tool.

The dialogue on the right opens. Refer to the table below for explanations.

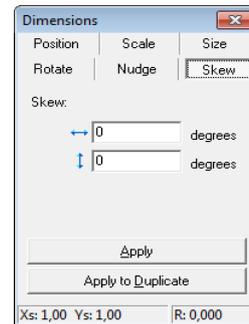

<i>Skew</i>	These input boxes can be used to specify values for skewing the object. Refer to the example below for details.
<i>Apply</i>	Clicking on this button applies the settings made to the selected object.
<i>Apply to Duplicate</i>	Clicking on this button copies the selected object and applies the changed settings to the copy.

Example:

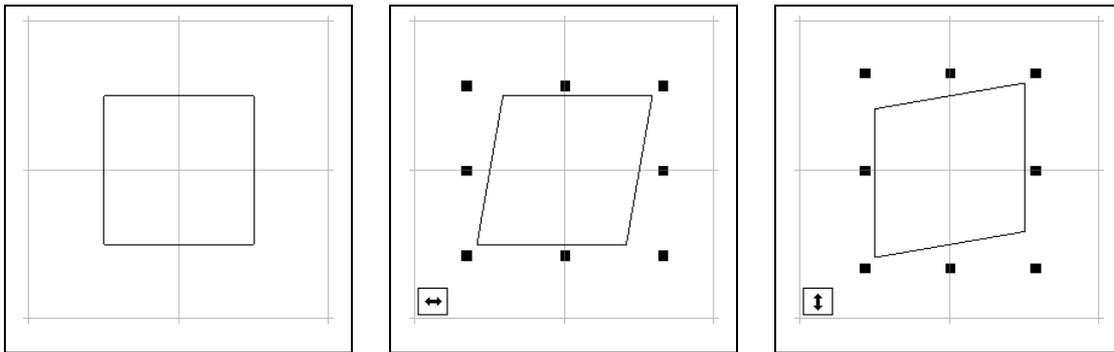

This tool is not available for fixed radial text objects.


5.3 Tiling

To mark an object that is larger than the marking field, it has to be tiled.

Two types of tiling are available, Tiling before marking (→ page 109, Tiling before Marking) and Tiling while marking (→ page 111, Tiling while marking), which are explained in the following sections. Tiling still shows the object as a whole and processes the parts, so they can be reassembled like a puzzle. The circle in the left drawing represents the marking object.

The dashed lines show the size of the marking field. The object has to be marked in 4 steps. Thereby, the component needs to be moved after every step.

Example:

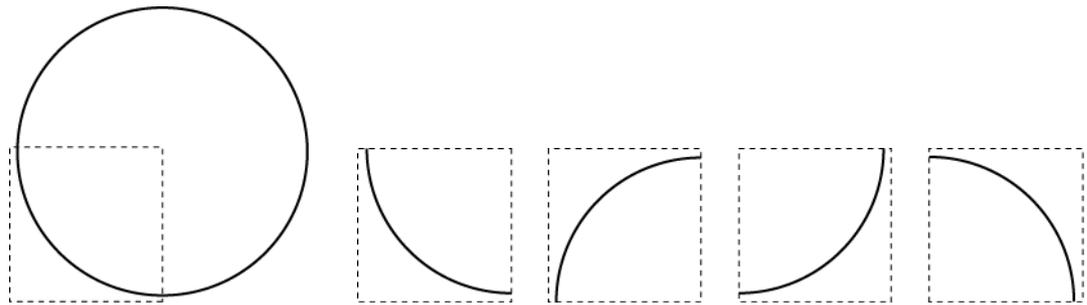


5.3.1 Tiling before Marking

The following section specifies how to tile a marking object into a tiled object:


- Right click on a marking object.
- Select *Tiling*.

The dialogue on the right opens. Refer to the table below for explanations.

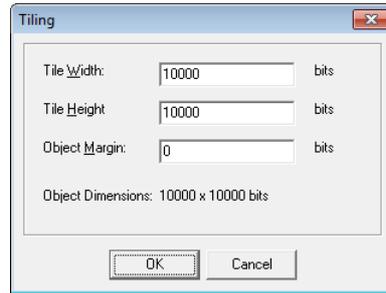


<i>Tile Width</i>	Defines the width of each single tiled object.
<i>Tile Height</i>	Defines the height of each single tiled object.
<i>Object Margin</i>	Defines the space between tiled objects.

The object will be tiled in multiple tiled objects which are shown in the Object Manager. The naming of the tiled objects is composed out of the object name, the index number of the object and the coordinates of the tiled objects compared to the whole object. Parts with no content will not be contained in the object manager.

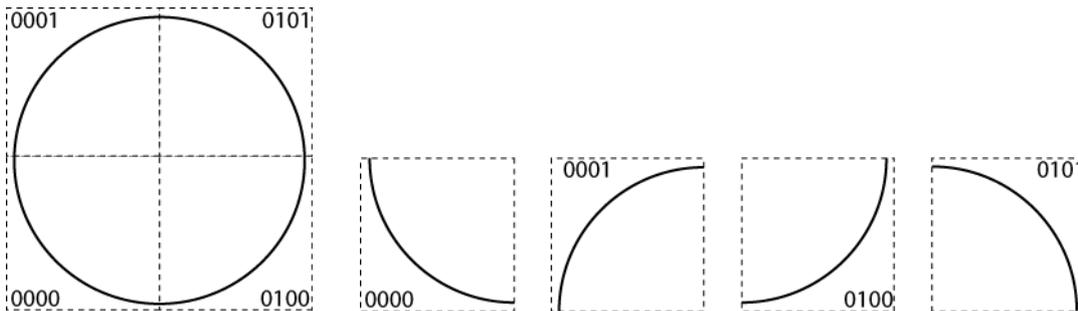


The following figure shows how a circle, tiled into four tiled objects, is displayed on the work space. The square shows the size of the marking field. Outside the untiled object is shown, which will can be deleted if it will no be used any more. On the insed the tiled objects stack on top of each other. The tiled parts can be stringed together with either automation objects positioned to each other on the marking field, or along the marking direction (Mark on the Fly) via the *Distance Encoder Steps* function.

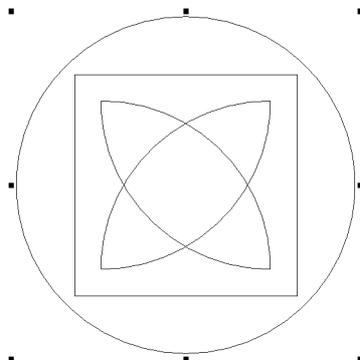

Tiling and the „Mark-on-the-Fly“ function

If a tiled object has to be marked with the „Mark-on-the-Fly“ function, additional settings have to be configured. To prevent that tiled objects are marked on top of each other, a marking pause in the size of the previous object has to be assigned to the second object and all tiled objects after. The settings for the first tiled object must not be changed. After clicking the *OK* or *Apply* button, the specified value will be marginally changed, which has no consequences whatsoever.

- Right click on the tiled object.
- Select *Properties...*
- Select *Ext. Control* tab.
- Activate *Before marking wait*.
The red marked area, displayed in the figure on the right, will be activated. Refer to the table below for explanations.

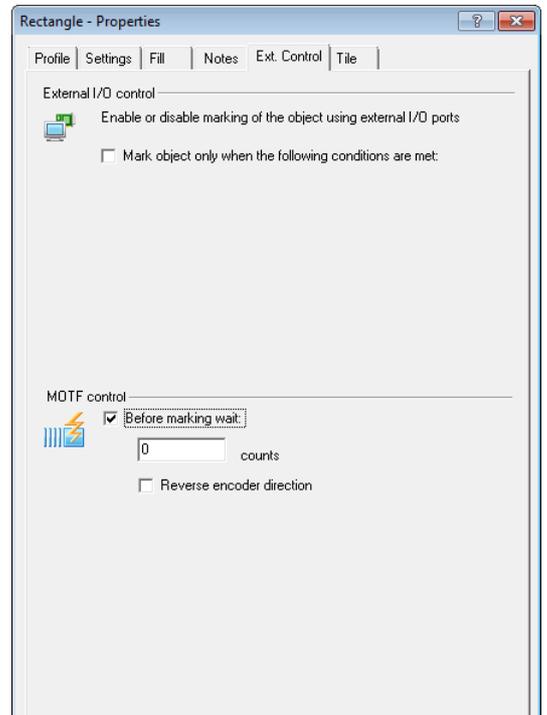

<i>MOTF control</i>	<i>Before marking wait... Impulse</i>	If bits is chosen as measuring unit. If this function is activated and a value greater than zero is entered, marking of the chosen tiled object will begin after the marking pause.
	<i>Before marking wait...mm</i>	If mmis chosen as measuring unit. If this function is activated and a value greater than zero is entered, marking of the chosen tiled object will begin after the marking pause.
	<i>Before marking wait...Inch</i>	If inch chosen as measuring unit. If this function is activated and a value greater than zero is entered, marking of the chosen tiled object will begin after the marking pause.
	<i>Switch direction of the encoder</i>	In some cases, caused by installation, the sensor signal arrives with the wrong moving sense. Though the direction of the encoder is reversed.


5.3.2 Tiling while marking

This function is only available for vector objects (Rectangle, Polygon, Polyline und Bezier) and bitmap objects.


The object is tiled in rectangle shaped parts and marked. A good comparison to this process would be placing floor tiles.

There are two selectable marking types. In the *Rotary Indexer* Mode Marking takes place after each turn rotary movement, in the *XY-Tisch* Mode after each linear movement.

Example:

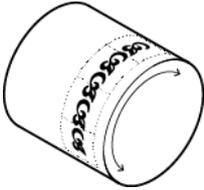


Rotary Indexer

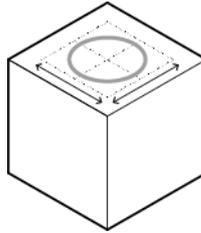

Marking process tiled in four parts with XY-movement.

Settings for the rotary indexer marking mode

- Right click on a vector graphic or bitmap object.
- Select *Properties...*
- Select *Tile* tab.
- Activate *Tile object*.
The dialogue on the right opens. Refer to the table below for explanations.

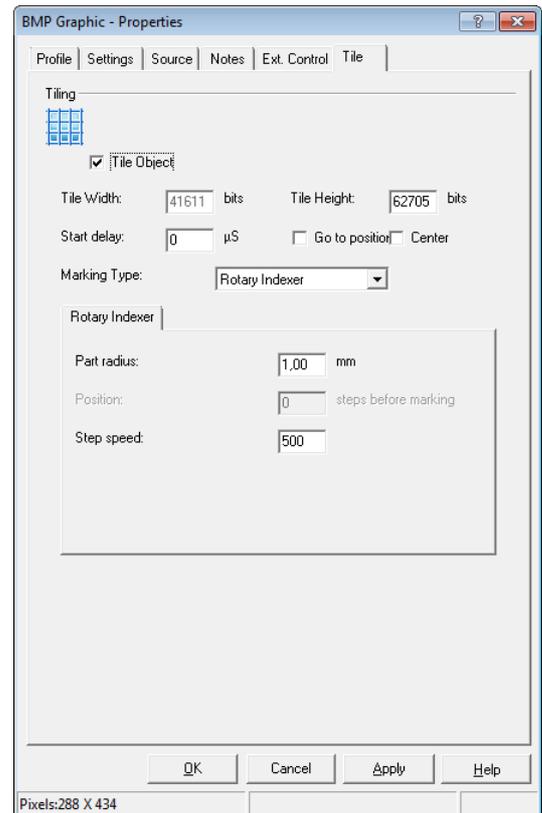


<i>Tile object</i>	If this function is activated, the object will be tiled according to the following parameters. This function is disabled by default.
<i>Tile Width</i>	The tile width can not be changed in the "Rotary Indexer" Mode.
<i>Tile Height</i>	The tile height defines the height of the tiled parts.
<i>Start Delay</i>	Defines the delay after the next tiled part is marked.
<i>Go to position</i>	If this function is activated the rotary axis is brought to a predefined starting position. this position is the new starting position for the next marking. If this function is not activated the position of the Home Sensor will be used as reference points.
<i>Center</i>	If this function is activated, the object is marked centrally to the starting position.
<i>Marking Type</i>	Defines the Marking Type. The Rotary Indexer or the XY-Table can be chosen.
<i>Radius</i>	This field is used to enter the radius of the cylinder generated surface.
<i>Starting position ... degrees before marking</i>	Can be chosen if the presetting for the unit is mm or inch. Defines the starting position prior to the marking of the object. The starting position can only be set if the <i>Go to position</i> function has been activated.
<i>Starting position ... degrees before marking</i>	Can be chosen if the presetting for the unit is bits. Defines the starting position prior to the marking of the object. The starting position can only be set if the <i>Go to position</i> function has been activated.
<i>Step speed</i>	Displays the step speed for the motor.

Settings for the XY-table marking mode

- Right click on a vector graphic or bitmap object.
- Select *Properties...*
- Select *Tile* tab.
- Activate *Tile object*.
- Choose the *XY-Table* option.

The dialogue on the right opens. Refer to the table below for explanations.

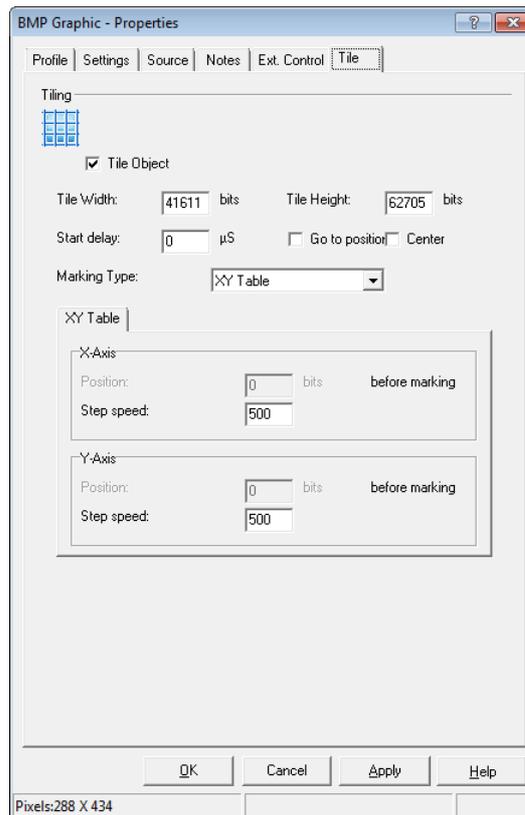

<i>Tile object</i>	If this function is activated, the object will be tiled according to the following parameters. This function is disabled by default.	
<i>Tile Width</i>	The width and height can be used to define the size of the tiled objects.	
<i>Tile Height</i>		
<i>Start Delay</i>	Defines the delay after the next tiled part is marked.	
<i>Go to position</i>	When this option is enabled, the X- and Y-axis will be set to a predefined position. this position is the new starting position for the next marking. If this function is not activated the position of the Home Sensor will be used as reference points.	
<i>Center</i>	If this function is activated, the object is marked centrally to the starting position.	
<i>Marking Type</i>	Defines the Marking Type. The options rotary indexer and XY-table are available.	
<i>X axis</i>	<i>Starting position...before marking</i>	Defines the starting position of the X-axis before the marking of the object. The starting position is only available, if the function <i>Go to position</i> is selected.
	<i>Step speed</i>	Defines the step speed of the X-axis before the marking of the object.
<i>Y axis</i>	<i>Starting position...before marking</i>	Defines the starting position of the Y-axis before the marking of the object. The starting position is only available, if the function <i>Go to position</i> is selected.
	<i>Step speed</i>	Defines the step speed of the Y-axis before the marking of the object.

5.4 Grid/Guidelines

The grid and the guidelines are used to make it easier to align objects on the screen. Their properties can be set.

5.4.1 Grid Lines

The grid is formed out of horizontal and vertical lines in a constant distance and facilitates drawing and ordering objects.

Show and Hide Grid Lines

- Select *View >Grid* option from the menu.
Shows or hides grid lines.




Grid

Grid Line Settings

The Grid Line Settings define the appearance of the grid on the screen, as well as the behaviour of the object when it is pulled near the Grid Lines.

- Select *Tools >Grid/Guidelines...* option from the menu.

The dialogue on the right opens. The figure shows grid line relevant information only. Refer to the table below for explanations.

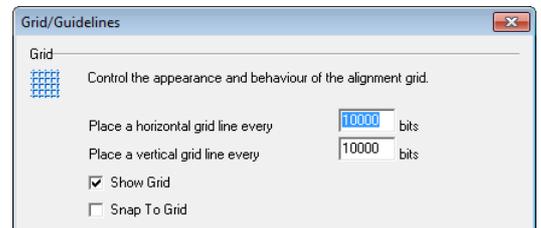

<i>Horizontal Grid</i>	The horizontal and vertical distances between each grid line can be set here.
<i>Vertical Grid</i>	
<i>Show Grid</i>	If this function is enabled, the grid lines are displayed.
<i>Snap To Grid</i>	If this function is enabled, objects that are moved get aligned with the grid lines.

5.4.2 Guidelines

The horizontal and vertical distances between each guide line can be set here. Any combination of guide lines can be saved and loaded again later on.

Show and Hide Guidelines

- Select *View >Guidelines* option from the menu.

Shows or hides guidelines. This function is only available, if the guide lines have been set under (⇒ below).



Guidelines


Modify Guidelines

Guidelines can be added, moved or deleted. An unlimited amount of guide lines can be put on the workspace.

- Select *Tools >Grid/Guidelines...* option from the menu.


The dialogue on the right opens. The figure shows only the section that is relevant for the guidelines.

Refer to the table below for explanations.

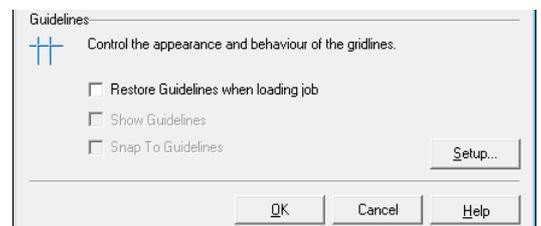

<i>Restore Guidelines when loading job</i>	If this function is activated, the created guide lines are saved with the job,
<i>Setup</i>	Opens a window for guide line creation.

- Click on the **Setup** button.
The dialogue on the right opens. Refer to the table below for explanations.

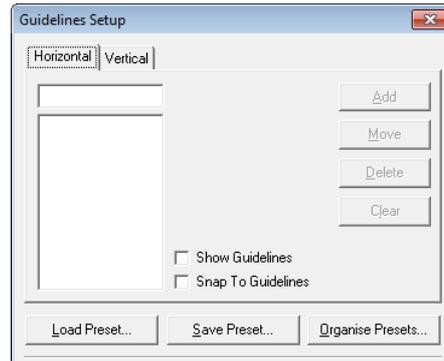


Horizontal, Vertical	There is a tab for horizontal and vertical guide lines.
(1)	Entry field for the position of the created guide lines.
Add	Clicking this button adds a new guide line to the selected position.
(2)	List of all guide lines.
Move to Folder...	Clicking this button moves the guide line from field (2) to the position set in field (1).
Delete	Clicking this button deletes the guideline selected in field (2).
Reset	Clicking this button deletes all horizontal and vertical guidelines Horizontal and vertical guide lines are not deleted simultaneously.
Show Guidelines	If this function is enabled, guidelines are shown.
Snap To Guidelines	If this function is enabled, objects that are moved get aligned with the guidelines.
Load Preset	Saved Presets can be loaded for the active job (→ page 116, Loading Preset).
Save Preset	All guide lines can be be saved and used for other. (→ page 115, Saving Presets).
Organise Presets	Saved Presets can be renamed or deleted (→ page 116, Organizing Presets).
Clear All	All guidelines contained in the job will be deleted.

Saving Presets

Presets are all guidelines contained in one job. A Preset can be used for new jobs and is saved as explained below. If the preset shall only be saved with the current job, the option **Restore Guidelines when loading job** can be used. (→ page 114, Modify Guidelines).

- Select **Tools >Grid/Guidelines...** option from the menu.
- Click on the **Setup** button.
- Click on **Save Preset** button.
The dialogue on the right opens.

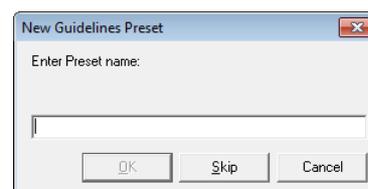

OK	After choosing a name for the preset, it can be saved.
Skip	This button enables saving the preset without specifying a name. The internal preset will be overwritten this way.

Loading Preset

Saved presets can be loaded as into the active job as described below. Potentially existing guidelines are overwritten.


- Select *Tools >Grid/Guidelines...* option from the menu.
- Click on the *Setup* button.
- Click on the *Load Preset* button The dialogue on the right opens.
- Select the desired preset and click *OK*.



Organizing Presets

Saved presets can be renamed and saved as follows:

- Select *Tools >Grid/Guidelines...* option from the menu.
- Click on the *Setup* button.
- Click on the *Organise Preset* button. The dialogue on the right opens.

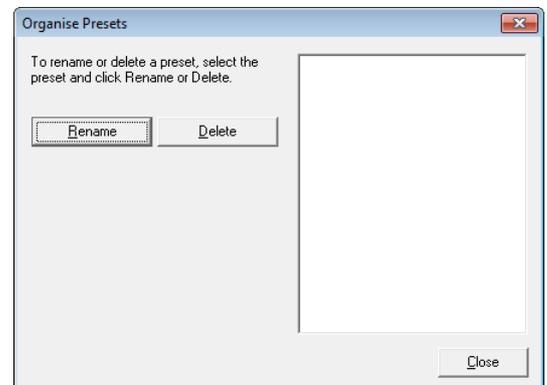

5.5 Appliance of the Zoom tools

There are three different kinds of tools available for changing the zoom factor of the workspace.

Zoom in

- Click on the *Zoom In* button.
- Drag, with pressed mouse button, along the area you want to zoom in.



Zoom in

Zoom out

- Click on the *Zoom out* button.
The workspace will be displayed smaller.
- To further scaling down the display, click the *Zoom out* button again.



Zoom out

Full view

- Click the *Full View* button
The workspace will be extended as far as possible to enable a full view.



Full view

6 TEMPLATES

A template is an object that cannot be modified and is not marked either. It is created from a marking object. In order to edit a template, it must be reconverted into a marking object first. Only one template can be created in each job.

Examples of using a template would include aligning objects or placing additional information on the workspace that should not to be marked.

Creating Templates

- Add the object you want to use as a template to your job.
- Edit the object as required if applicable.
- Select the object.
- Select the *Objects > Convert to Template* option from the menu.

The object converted into a template appears in the Job Manager (*Current Job* window) as a *Template* and disappears from the Object Manager.



Convert To
Template

Converting a Template into a Marking Object

- Right click on *Template* in *Current Job* window and select *Convert to Object*.

7 USING AUTOMATION OBJECTS

Automation objects allow communication with external applications and control devices. They are used to automate processing and the internal weldMARK™ processes. weldMARK™ provides the following automation objects:

<i>Wait for External Signal</i>	This object checks whether a signal is present at a selected I/O port. The marking process is not continued until the signal is present.	→ page 120, "Wait for External Signal" Automation Object
<i>Set I/O Port</i>	This object sets one or more I/O ports to "Low" or "High".	→ page 122, "Set I/O Port" Automation Object
<i>Insert Time Delay</i>	This object inserts a time delay between the marking of two objects. The marking process of the second object starts when the specified time span has been elapsed.	→ page 124, "Insert Time Delay" Automation Object
<i>Show Messagebox</i>	This object displays a message window on the screen during the marking process. The process is stopped until the user closes the message box.	→ page 125, "Show Messagebox" Automation Object
<i>XY Table</i>	This object controls an optional XY Table that is connected.	→ page 127, "XY Table" Automation Object
<i>Rotary axis</i>	This object controls an optional rotary indexer that is connected.	→ page 129, "Rotary Indexer" Automation Object
<i>Custom Axis</i>	This object controls an optional custom axis that is connected.	→ page 131, "Custom Axis" Automation Object
<i>Serial Output</i>	This object allows commands and scripts to be sent to the laser appliance via the serial interface of the pc.	→ page 133, Automation Object „Serial Output“

Note

Automation objects are only processed if the job was started with the *Starting execution* function. Automation objects are ignored with jobs that are started with *Quickmark* or *Run from Hardware*.


7.1 "Wait for External Signal" Automation Object

This object checks whether a signal is present at a selected I/O port. The marking process is not continued until the signal is present.

Defaults for "Wait for External Signal"

This section describes how the defaults for "Wait for External Signal" type automation objects can be called up and changed. The defaults apply to all new automation objects of this type.


- Select *Objects > Defaults...* option from the menu.
- Select the object type *Wait for External Signal*. The dialogue on the right opens. Refer to the table below for explanations.

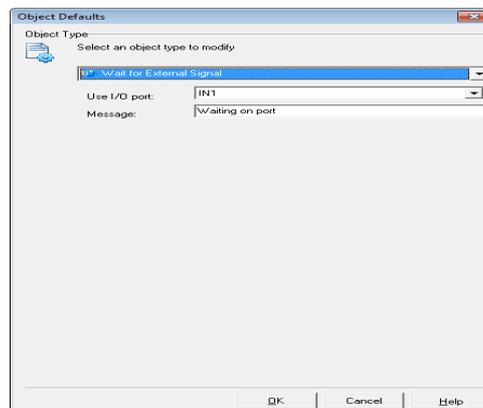

<i>Use I/O port</i>	Preset of the I/O port to be monitored.
<i>Message</i>	A text can be entered for a message displayed during the waiting time.

Adding a "Wait for External Signal" Object

- Select *Objects > Add > Automation...* option from the menu. The dialogue on the right opens.
- Select *Wait for External Signal* automation object type.
- Click on *Add* button. The automation object is added to the Object Manager.

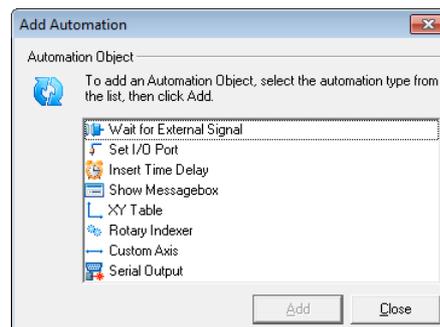


Properties

Properties, which are classified as follows, are assigned to the automation object:

<i>Settings</i>	Various settings can be made for the object.	→ page 121, Settings
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be assigned to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control

Settings

- In Object Manager, right click on a *Wait for External Signal* type automation object.
- Select *Properties...*
The dialogue on the right opens. Refer to the table below for explanations.

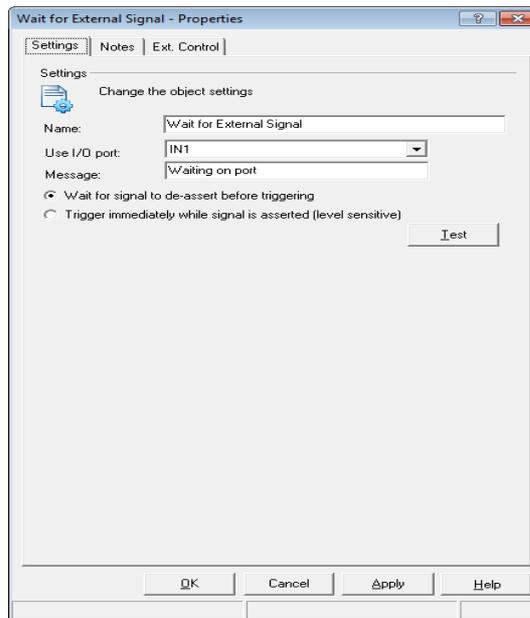

Wait for External Signal

<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>I/O Port</i>	You can select the input port to be checked.
<i>Message</i>	A text can be entered for a message to be displayed during the waiting time. The text entered in <i>Defaults...</i> is used if you do not enter anything here.
<i>(1)</i>	The marking process is not started until the start signal is terminated.
<i>(2)</i>	The marking process is started as soon as the start signal is asserted.
<i>Test</i>	Clicking on this button reads the I/O port and displays the result.


7.2 "Set I/O Port" Automation Object

This object sets the status of one or more I/O ports to "Low" or "High".

Defaults for "Set I/O Port"

This section describes how the defaults for "Set I/O Port" type automation objects can be called up and changed. The defaults apply to all new automation objects of this type.


- Select *Objects > Defaults...* option from the menu.
- Select object type *Set I/O Port*.
The dialogue on the right opens. Refer to the table below for explanations.

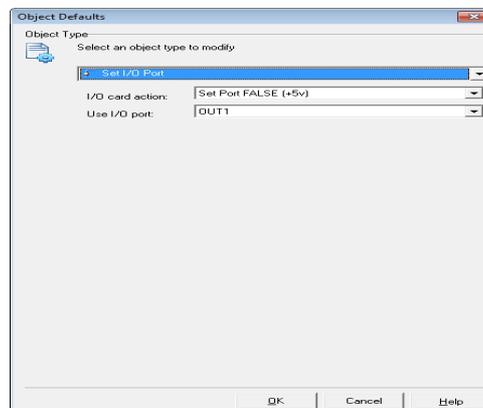

<i>I/O card action</i>	The required behavior of the port can be selected.
<i>Use I/O port</i>	You can select the input port to be set.

Adding a "Set I/O Port" Object

- Select *Objects > Add > Automation...* option from the menu.
The dialogue on the right opens.
- Select automation object type *Set I/O Port*.
- Click on *Add* button.
The automation object is added to the Object Manager.

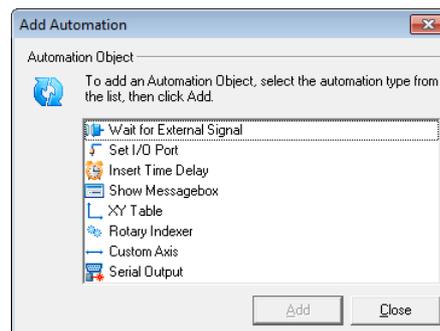


Properties

Properties, which are classified as follows, are assigned to the automation object:

<i>Settings</i>	Various settings can be made for the object.	→ page 123, Settings
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be assigned to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control

Settings

- In Object Manager, right click on a *Set I/O Port* type automation object.
- Select *Properties...*
The dialogue on the right opens. Refer to the table below for explanations.

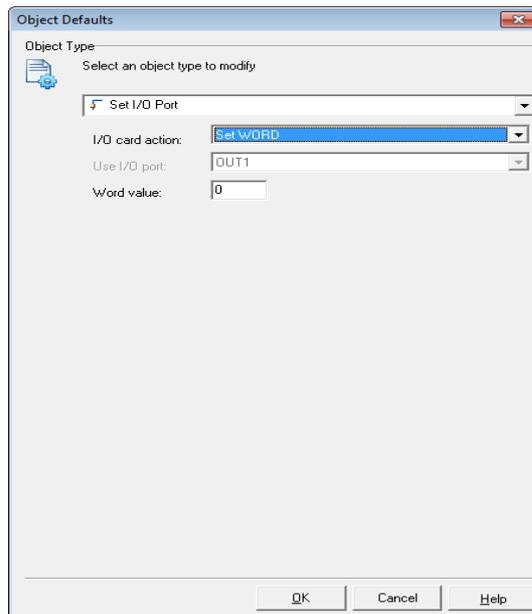

Set I/O Port


<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.	
<i>I/O card action</i>	The following actions can be selected:	
	<i>Set Port TRUE</i>	The selected port is set to TRUE.
	<i>Set Port FALSE</i>	The selected port is set to FALSE.
	<i>Pulse Port</i>	The selected port is alternately set to FALSE - TRUE - FALSE. The time span for the TRUE status can be adjusted. Note that the value for the time span is only an approximate value.
	<i>SET WORD</i>	The word consists of 6 bits, corresponding to the six output ports OUT1 to OUT6. Each bit sets one output port.
<i>Use I/O port</i>	The output port to be set (→ page 136, Marking Object Profile).	
<i>Word value</i>	This input box is only active if the <i>Set WORD</i> action has been selected. A value between 0 and 63 (decimal) can be set. It complies with a binary value of 6 bit.	
<i>Test</i>	Clicking on this button sets the I/O port in line with the settings made for testing purposes. The setted port and the current status are displayed.	

7.3 "Insert Time Delay" Automation Object

This object inserts a time delay between the marking of two objects. The marking process of the second object starts when the specified time span has been elapsed.

Adding an "Insert Time Delay" Object

- Select *Objects >Add >Automation...* option from the menu.
The dialogue on the right opens.
- Select automation object type *Insert Time Delay*.
- Click on *Add* button.
The automation object is added to the Object Manager.

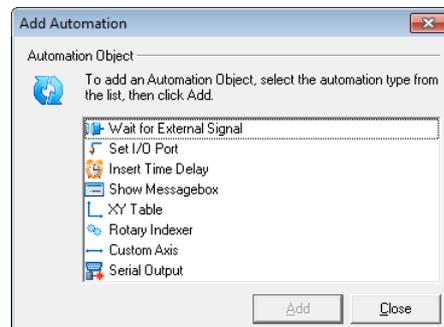

Properties

Properties, which are classified as follows, are assigned to the automation object:


<i>Settings</i>	Various settings can be made for the object.	→ page 124, Settings
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be assigned to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control

Settings

- In Object Manager, right click on an *Insert Time Delay* type automation object.
- Select *Properties...*
The dialogue on the right opens. Refer to the table below for explanations.



Insert Time Delay

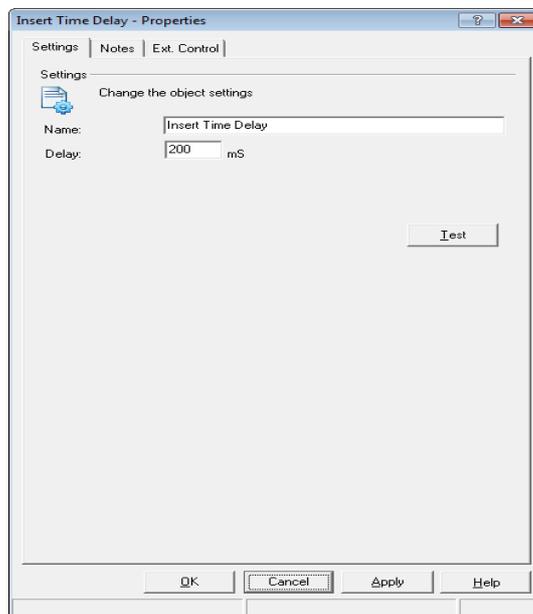

<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>Delay</i>	Time delay in milliseconds.
<i>Test</i>	Clicking on this button displays a window specifying the current time delay setting.


7.4 "Show MessageBox" Automation Object

This object displays a message window on the screen during the marking process. The process is stopped until the user closes the message box.

Defaults for "Show MessageBox"

This section describes how the defaults for "Show MessageBox" type automation objects can be called up and changed. The defaults apply to all new automation objects of this type.


- Select *Objects > Defaults...* option from the menu.
- Select object type *Show MessageBox*. The dialogue on the right opens. Refer to the table below for explanations.

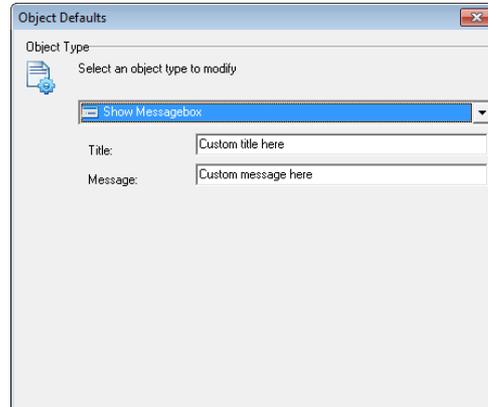

<i>Title</i>	The text that will appear in the title bar of the message window.
<i>Message</i>	The text that will appear as the message.

Adding a "Show MessageBox" Object

- Select *Objects > Add > Automation...* option from the menu. The dialogue on the right opens.
- Select automation object type *Show MessageBox*.
- Click on *Add* button. The automation object is added to the Object Manager.

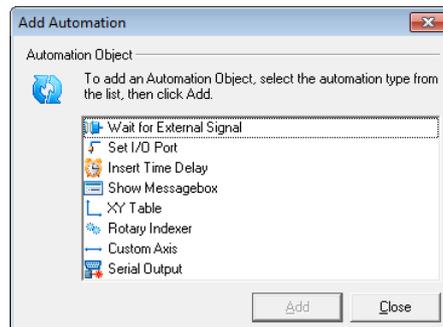

Properties

Properties, which are classified as follows, are assigned to the automation object:


<i>Settings</i>	Various settings can be made for the object.	→ page 126, Settings
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be assigned to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control



Show
Messagebox

Settings

- In Object Manager, right click on an *Show Messagebox* type automation object.
- Select *Properties...*
The dialogue on the right opens. Refer to the table below for explanations.

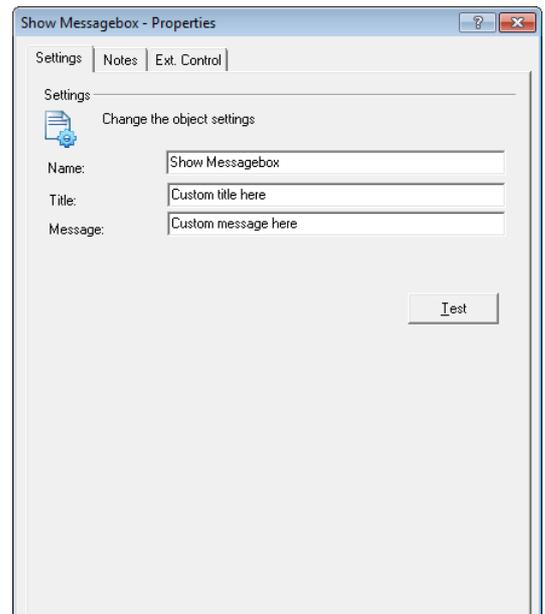


<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>Title</i>	The text for the message box title bar can be adjusted.
<i>Message</i>	The text that will be displayed in the message box can be entered in this field.
<i>Test</i>	Clicking on this button displays the message box for test purposes.

7.5 "XY Table" Automation Object

This object controls an optional XY Table that is connected. A motor controller card is necessary to control the table (→ page 222, Operating Stepper Motors).

Adding an "XY Table" Automation Object

- Select *Objects > Add > Automation...* option from the menu.
The dialogue on the right opens.
Select automation object type *XY Table*.
- Click on *Add* button.
The automation object is added to the Object Manager.

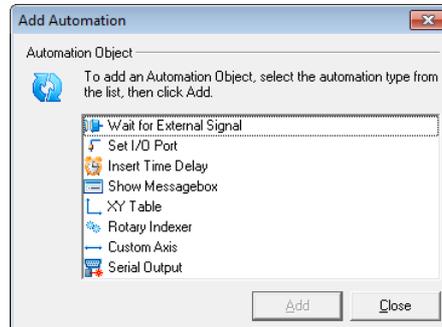

Properties

Properties, which are classified as follows, are assigned to the automation object:


<i>Settings</i>	Various settings can be made for the object.	→ page 128, Settings
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be assigned to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control



XY Table

Settings

- In Object Manager, right click on an *XY Table* type automation object.
- Select *Settings*.
The dialogue on the right opens. Refer to the table below for explanations.

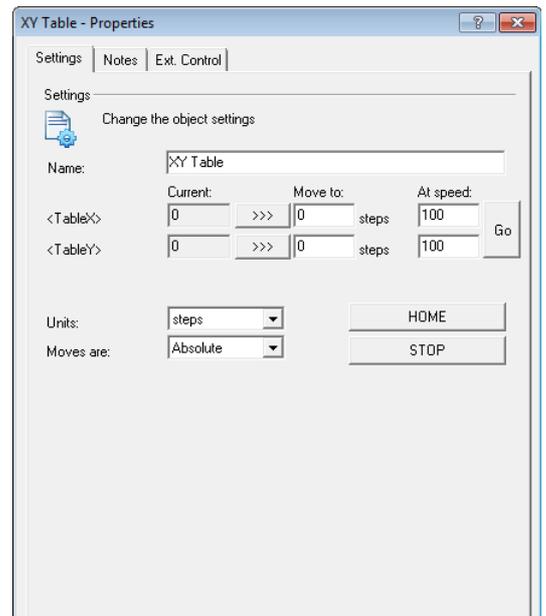


<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.	
<i>Current</i>	These fields show the current position of the motor axes.	
<i>Move to</i>	These fields can be used to enter an absolute target position, i.e. the position to which you want the table to move. These fields are only available if the <i>Absolute</i> setting has been selected in the <i>Moves are</i> list box.	
<i>Move</i>	These fields can be used to enter a relative target position, i.e. the distance you want the table to move. These fields are only available if the <i>Relative</i> setting has been selected in the <i>Moves are</i> list box.	
<i>Display Speed</i>	These fields can be used to enter the speed [steps per second] at which you want the table to move.	
<i>Units</i>	<i>mm</i> <i>Inches</i> <i>Steps</i>	The distances can be entered in millimeters, inches or motor steps.
<i>Moves are</i>	The mode for specifying the moves must be selected:	
	<i>Physical</i>	The table moves to the position specified in <i>Move to</i> field.
	<i>Relative</i>	The table moves by the values specified under <i>Move</i> .
<i>Go</i>	Clicking on this button performs the specified table movement.	
<i>Beam Home position</i>	Clicking on this button moves the table to its home position.	
<i>STOP</i>	Stops the movement of the XY table.	

7.6 "Rotary Indexer" Automation Object

This object controls an optional rotary indexer that is connected. A motor controller card is necessary for this (→ page 222, Operating Stepper Motors).

Adding a "Rotary Indexer" Automation Object

- Select *Objects > Add > Automation...* option from the menu.
The dialogue on the right opens.
- Select automation object type *Rotary Indexer*.
- Click on *Add* button.
The automation object is added to the Object Manager.

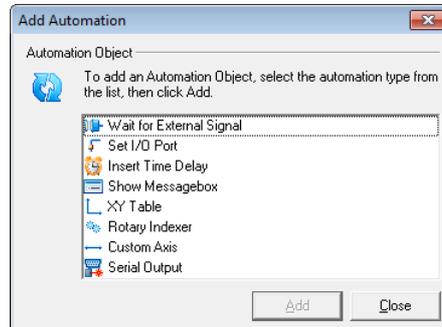


Properties

Properties, which are classified as follows, are assigned to the automation object:

<i>Settings</i>	Various settings can be made for the object.	→ page 130, Settings
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be assigned to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control

Settings

- Right click on the object you want to change in the Object Manager.
- Select *Properties...*
The dialogue on the right opens. Refer to the table below for explanations.

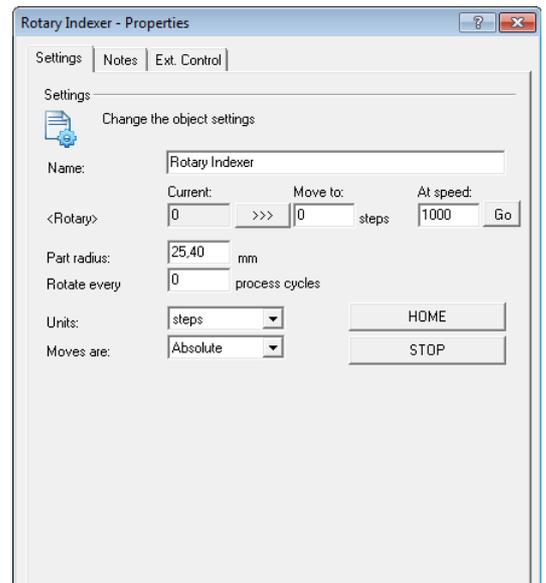


<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.	
<i>String position</i>	This field shows the current position of the rotary indexer.	
<i>Move to</i>	In this field, you can enter an absolute angle position, i.e. the position you want the rotary indexer to rotate to. This field is only available if the <i>Absolute</i> setting has been selected in the <i>Moves are</i> list box.	
<i>Move</i>	In this field, you can enter a relative target position, i.e. the angle you want the axis to rotate by. This field is only available if the <i>Relative</i> setting has been selected in the <i>Moves are</i> list box.	
<i>Display Speed</i>	This field can be used to enter the speed [steps per second] at which you want the axis to rotate.	
<i>Radius</i>	This field is used to enter the radius of the rotating component. The radius is required to calculate the target position or distance, if they are entered in inches or millimeters.	
<i>Rotate every ... process cycles</i>	This field is used to enter the number of process cycles to be performed before the axis is rotated.	
<i>Units</i>	<i>mm</i>	The distances can be entered in millimeters, inches, degrees or motor steps. The length specifications [mm] and [inch] refer to the range.
	<i>Inches</i>	
	<i>Degrees</i>	
	<i>Steps</i>	
<i>Moves are</i>	The mode for specifying the moves must be selected:	
	<i>Physical</i>	The axis is rotated to the position specified under <i>Move to</i> .
	<i>Relative</i>	The axis is rotated by the value specified under <i>Move</i> .
<i>Go</i>	Clicking on this button performs the specified rotary movement.	
<i>Beam Home position</i>	Clicking on this button rotates the rotary indexer to its home position.	
<i>STOP</i>	Stops the movement of the rotary indexer.	

7.7 "Custom Axis" Automation Object

This object controls an optional custom axis that is connected. The custom axis can be configured for linear or rotating applications either. A motor controller card is necessary for this (→ page 222, Operating Stepper Motors).

Adding a "Custom Axis (Z axis)" Object

- Select *Objects > Add > Automation...* option from the menu.
The dialogue on the right opens.
- Select automation object type *Custom Axis*.
- Click on *Add* button.
The automation object is added to the Object Manager.

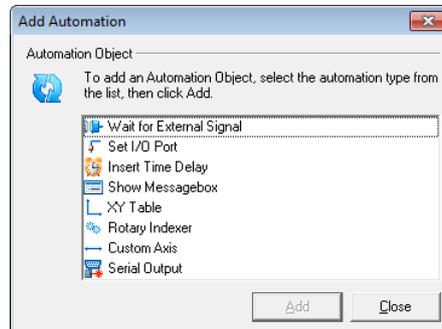


Properties

Properties, which are classified as follows, are assigned to the automation object:

<i>Settings</i>	Various settings can be made for the object.	→ page 132, Settings
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be assigned to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control

Settings

- Right click on the object you want to change in the Object Manager.
- Select *Properties...*
The dialogue on the right opens. Refer to the table below for explanations.

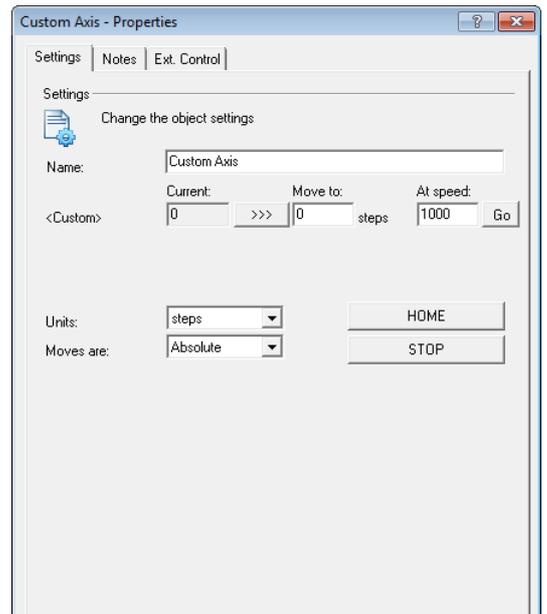

<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.	
<i>Current</i>	This field shows the current position of the custom axis.	
<i>Move to</i>	In this field, you can enter an absolute target position, i.e. the position you want the custom axis to move to. This field is only available if the <i>Absolute</i> setting has been selected in the <i>Moves are</i> list box.	
<i>Move</i>	In this field, you can enter a relative target position, i.e. the distance you want the custom axis to move by. This field is only available if the <i>Relative</i> setting has been selected in the <i>Moves are</i> list box.	
<i>Display Speed</i>	These fields can be used to enter the speed [steps per second] at which you want the custom axis to move.	
<i>Units</i>	<i>mm</i>	The distances can be entered in millimeters, inches or motor steps.
	<i>Inches</i>	
	<i>Steps</i>	
<i>Moves are</i>	The mode for specifying the moves must be selected:	
	<i>Physical</i>	The axis is moved to the position specified under <i>Move to</i> .
	<i>Relative</i>	The axis is moved by the value specified under <i>Move</i> .
<i>Go</i>	Clicking on this button performs the specified movement of the custom axis.	
<i>Beam Home position</i>	Clicking on this button rotates the custom axis to its home position.	
<i>STOP</i>	Stops the movement of the custom axis.	


7.8 Automation Object „Serial Output“

This object allows commands and scripts to be sent to the laser appliance via the serial interface of the pc. If the installed component has to be initialized, the automation object must be put before all marking objects. If commands have to be executed before marking of a certain object, the *Serial Output* object must be put before that object.

The automation object sends the commands to the installed component as a text string. With each command a request to verify can be sent and a time-out value can be set. The confirmation has to be acknowledged with the text string „ACK“. If this text string is not received within a certain time, the current job will be cancelled.

Adding a „Serial Output“ object

- Select *Objects > Add > Automation...* option from the menu.
The dialogue on the right opens.
- Select automation object type *Serial Output*.
- Click on *Add* button.
The automation object is added to the Object Manager.

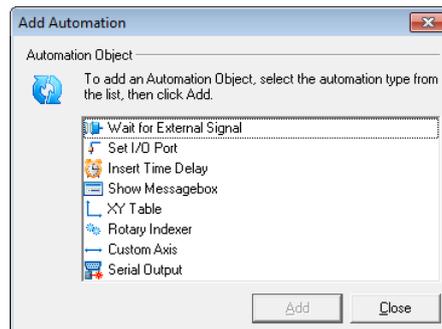


Properties

Properties, which are classified as follows, are assigned to the automation object:

<i>Settings</i>	Various settings can be made for the object.	→ page 132, Settings
<i>Notes</i>	A note can be assigned to the object.	→ page 27, Notes
<i>Ext. Control</i>	A marking condition can be assigned to the object. If the external control is activated, external signals determine whether the object is marked or skipped.	→ page 28, External Control

Settings

- Right click on the object you want to change in the Object Manager.
- Select *Properties...*
The dialogue on the right opens. Refer to the table below for explanations.

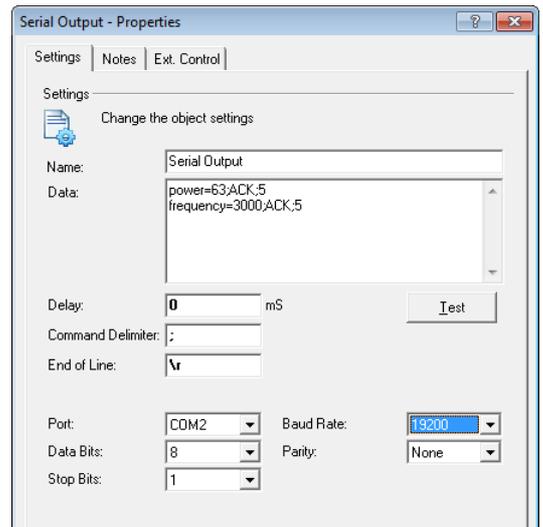

<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>Data</i>	A command can be entered in this field.
<i>Delay</i>	A Time-Out value can be entered here, if the command line hasn't been received and no confirmation of the component has been sent meanwhile.
<i>Command Delimiter</i>	The text string that defines the end of a command can be entered here.
<i>End of Line</i>	The text string that defines the end of a command line can be entered here.
<i>I/O Port</i>	In this field the COM-Port and its' command parameters can be defined.
<i>Data Bits</i>	
<i>Stop Bits</i>	
<i>Baud Rate</i>	
<i>Parity</i>	

8 USING PROFILES

This chapter provides an overview of how to manage the profiles in weldMARK™.

Every marking object is assigned a profile, which specifies the parameters for the laser marking. When you create a new object, the default profile is applied automatically. This profile can be adapted to your individual requirements, however, changes only affect the objects that are created subsequently.

If different laser settings are required (e.g. for marking different materials), any number of profiles can be created with different parameters. This is done using the Profile Manager.

The Profile Manager lists all available profiles. The profiles can be organized and applied to marking objects. In addition, the parameters of a selected profile can be applied to the default profile.


A profile can also be transferred from one marking object to another.

Profiles contained in the profile manager are available for all jobs.

8.1 Marking Object Profile

The profile applied to the marking object determines the settings for laser processing, such as the power, frequency etc. These parameters are summarized on the *Profile* tab and can be changed as follows:

- Right click on the marking object whose profile you want to change and then select *Properties....*
- Select the *Profile* tab.
The dialogue on the right opens. Refer to the table below for explanations.

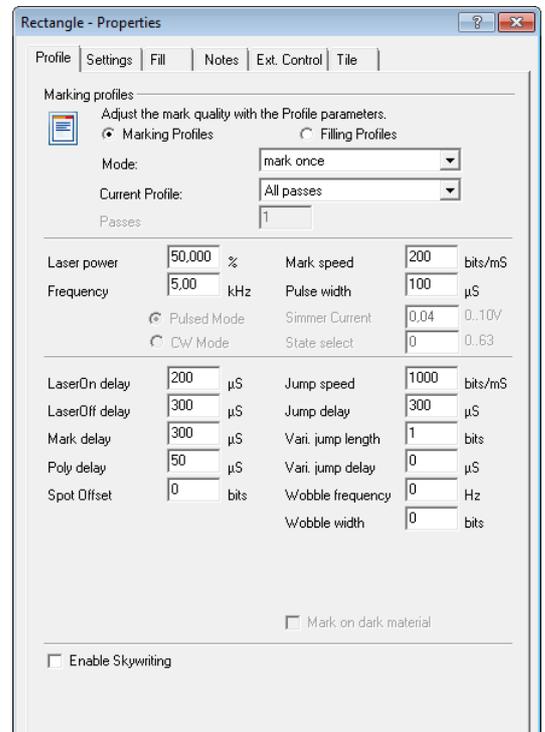

Marking profile		
<i>Mode</i>	<i>Mark once</i>	The outlines of the object are marked once according to the parameters of Pen 1. These parameters are shown in the lower part of the screen and are modifiable.
	<i>Mark multiple times</i>	The object is marked the number of times entered in the <i>Passes</i> field according to the parameters of Pen 1.
	<i>2 pass Cut & Clean</i>	The object is marked two, three or four times, and different laser parameters can be set for each pass (according to Pen 1 up to 4). The settings can be called up using the passes that are available for selection in the <i>Current Profile</i> list box.
	<i>3 pass Cut & Clean</i>	
	<i>4 pass Cut & Clean</i>	
<i>Current Profile</i>	If variable passes are selected in the <i>Mode</i> list box, this field can be used to call up the parameters for each individual pass (Pen 1 up to 4).	
<i>Passes</i>	The <i>Passes</i> field is only available if <i>Mark multiple times</i> mode has been selected. In this field, you can enter the required number of passes for the marking object. The object is marked according to the parameters of Pen 1 the number of times during execution of the job even if it is only listed once in the object list.	
<i>Use pens</i>	This field is only available if an imported object with layers is selected. In this case marking parameters can be defined for each pen after activating this function. For visualization, the elements are displayed with the defined pen colour. Elements on layers which are not selected for marking (tab <i>CAD</i>) are not shown. A maximum of eight pens can be used.	

The following filling parameters are only required, if the filling is marked with differing parameters to the outline.

Filling Profiles		
<i>Mode</i>	<i>Mark once</i>	The filling of the object is marked once according to the current profile. You cannot select other modes for filling.
<i>Current Profile</i>	With this field the parameters for up to 8 pens can be accessed. For the filling of the object, the selected pen is used.	
<i>Passes</i>	The number of passes cannot be changed for the filling. The count of passes is defined in the marking profile.	
<i>Use pens</i>	This field is not available here.	
<i>Laser power % power</i>	This field can be used to specify the laser power. The laser power can be entered in percent or watts depending on the settings in the laser configuration file.	
<i>Frequency</i>	This field can be used to set the frequency of the laser modulation signal. In association with YAG lasers, this is also referred to as the Q-Switch frequency. The setting area is also defined in the Laser-Config-File	
<i>Display Speed</i>	This field can be used to specify the speed at which the laser beam moves over the object during processing.	
<i>Pulse width</i>	This field can be used to set the pulse width of the laser modulation signal. The maximum possible pulse width is determined by the frequency entered. This parameter is not available when using CO2 lasers.	
<i>LaserOn delay</i>	The adjacent parameters are described in detail in the application manual and/or in the "Commands and Functions" manual. The laser delays are entered with positive values only. Negative values have to be defined in the Laser-Config-File if required.	
<i>LaserOff delay</i>		
<i>Mark delay</i>		
<i>Poly delay</i>		
<i>Z position</i>	Via z-position the focal plane of the scan head can be adapted to the object to be marked. This field only is displayed if a 3-axis subsystem with FOCUSHIFTER is set as scan head. The value for the z position can be positive or negative. It is limited to the maximum values of the used 3-axis subsystem.	
<i>Jump speed</i>	The adjacent parameters are described in detail in the application manual and/or in the "Commands and Functions" manual.	
<i>Jump delay</i>		
<i>Var. jump length</i>		
<i>Var. jump delay</i>		
<i>Wobble frequency</i>	Defines the wobble excursion per second.	
<i>Wobble width</i>	Defines the wobble excursion width	
<i>Zero power after mark</i>	If this function is activated, the laser power is set to zero after marking via <i>Job >Run</i> . This function is not available for all laser types.	
<i>Mark on dark material</i>	Only for bitmap objekts If this function is activated, the bitmap object will be marked inverted. This allows you to mark a pseudo-positive image on dark materials. In the weldMARK™ window the bitmap object is not displayed inverted.	
<i>Enable Skywriting</i>	→ page 138, Skywriting	
<i>Spot offset</i>	Defines the offset in which the laser is positioned to the outline.	

Hints for optimizing delay times

The delay times must be adapted to the application and the jump and marking speeds entered. Unoptimized delay times will lead to poor processing results and can increase the processing time. The length of the laser on and off delays has no influence on the processing time.

Set the delay times as described below:


- Optimize the laser on and off delay.
We recommend setting a high value for the jump and mark delays.
- Optimize the delay times for controlling the galvanometer scanners, e. g. the jump, mark and poly delay.

8.2 Skywriting

At the reversal point of a polyline, the higher retention time of the laser causes a strengthened marking effect. By using the "Skywriting" function, the laser radiation switches off at the reversal point. Afterwards, the scanner mirrors change direction. The laser radiation switches on again, when the laser arrives at the reversal point. In this way, a constant marking speed can be achieved.

Except of bitmap objects, this function is available for all object types.

Example:

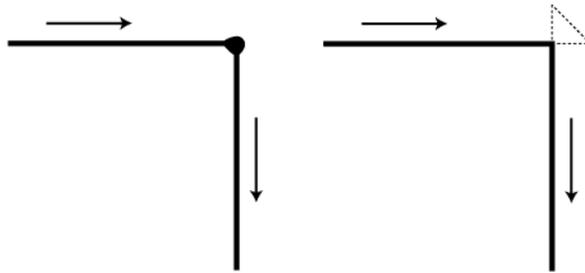

Skywriting disabled


Skywriting enabled

8.2.1 Skywriting Parameter

The adjustment of the Skywriting parameters is located in the Profile settings. They can be edited either individually in the object properties for each object or for each profile based on the Profile Manager.

In the following, the object-specific way is shown:

- Right click on the desired marking object and select *Properties...*
- Select the *Profile* tab.
- Check *Enable Skywriting*.
The red bordered area is displayed. Refer to the table below for explanations.

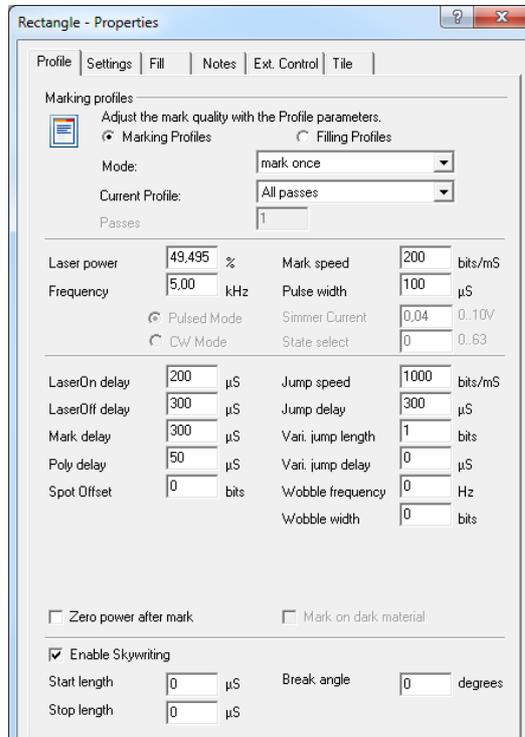


<i>Enable Skywriting</i>	If this function is disabled, all values are set to zero.	
	<i>Start Length</i>	The forerun time of the switched off laser before arriving the reversal point.
	<i>Stop Length</i>	The backlash time of the switched off laser after arriving the reversal point.
	<i>Break Angle</i>	If a value is entered into this field, <i>Skywriting</i> function is triggered only if the angle between two vectors is less than or equal to this value.


8.2.2 Preview

The vector jumps, which are added for the skywriting, can be made visible as described in the following:

- Right click on the marking object.
 - Select *Properties...*
 - Select *Settings* tab.
 - Check *Display vector jumps*.
- The dialogue on the right opens. Refer to the table below for explanations.

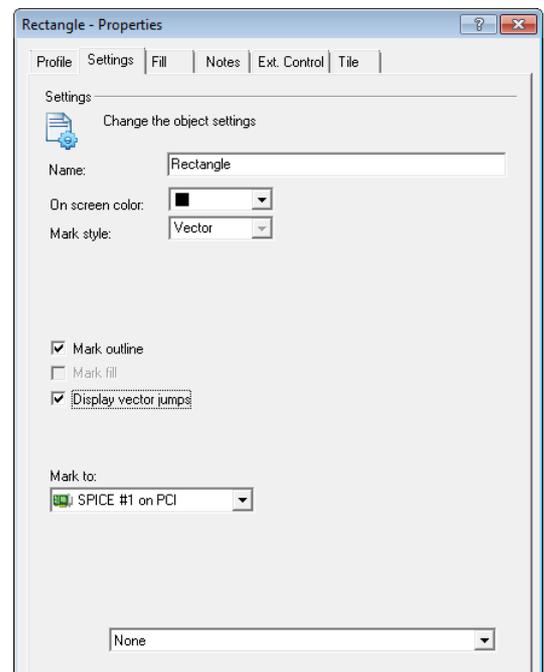


As an example, a preview of a rectangle with displayed vector jumps is shown. To improve the visibility, high values for the start and the stop length were entered.

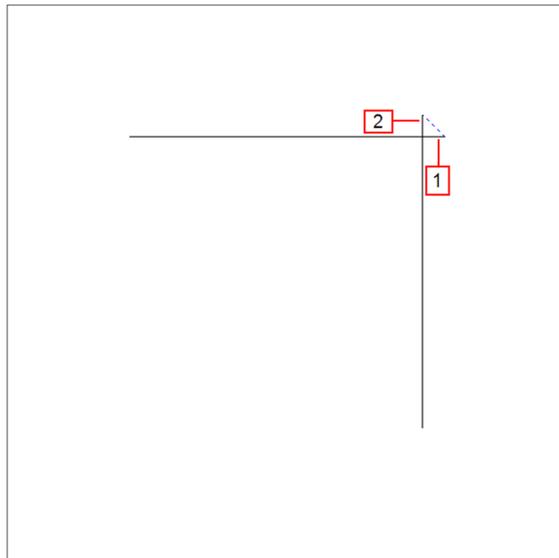

(1)	Stop Length
(2)	Start Length

8.3 Showing and hiding the Profile Manager

- Select *View >Profile Manager* option from the menu. The adjacent window is shown or hidden.

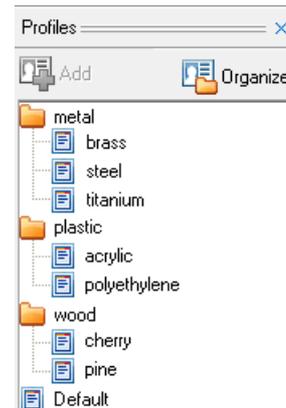


8.4 Creating and managing Profiles

In the Profile Manager, you can view, delete and modify existing object profiles and apply them to objects. You can also add new object profiles and organize all object profiles hierarchically.

8.4.1 Creating Profiles

- Right click on the object whose profile you want to add to the Profile Manager.
- Select *Add to Profile Manager*. The dialogue on the right opens. Refer to the table below for explanations.

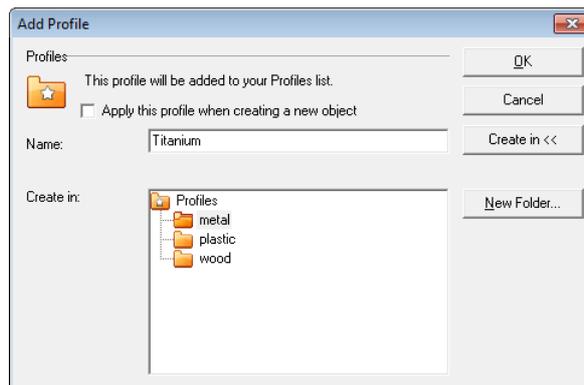


<i>Parameters are added to the profile manager</i>	If this function is enabled, the profile parameters for the selected object are applied to the default profile in the Profile Manager. The default profile is automatically applied to all new marking objects.
<i>Name</i>	The name of the profile is entered in this field.
<i>Create in <<</i>	This window shows the Profile Managers folder structure. The new profile is saved in the selected folder. If no folder is selected, the profile is saved on the highest level in the Profile Managers structure.
<i>OK</i>	Clicking on this button saves the profile in the Profile Manager.

8.4.2 Organizing Profiles

You can structure individual profiles in folders or rename, move and delete them.

- Select *Profiles > Organize Profiles...* option from the menu.
The dialogue on the right opens. Refer to the table below for explanations.
- Click on *OK* to add the changed structure to the Profile Manager.

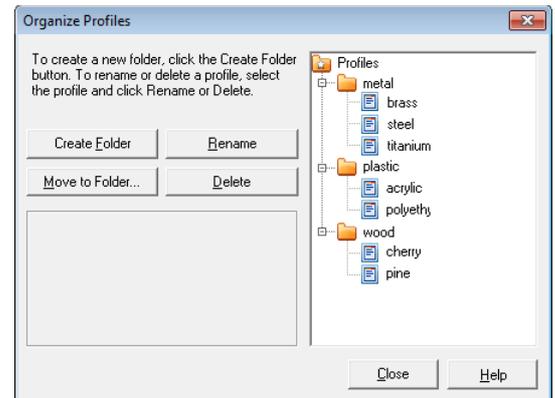


<i>Create Folder</i>	Clicking on this button prompts the user to enter a folder name. Thereupon a new profile folder is created with the name entered.
<i>Rename</i>	Clicking on this button allows you to rename a selected folder or a profile.
<i>Move</i>	Clicking on this button allows moving a selected profile to a different folder.
<i>Delete selection</i>	Clicking on this button deletes either a selected folder and the profiles it contains or a selected individual folder.

8.5 Applying Profiles

The profiles saved in the Profile Manager can be applied to selected marking objects. Furthermore the profile of a marking object can be applied to other marking objects.


8.5.1 Applying a Profile from the Profile Manager to an Object

- Select the object to which you want to apply a profile.
- Right click on the profile you want to apply in the Profile Manager.
- Select *Apply to Object*.

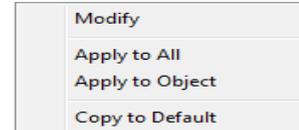

8.5.2 Applying a Profile from the Profile Manager to multiple Objects

- Select the objects to which you want to apply a profile.
- Right click on the profile you want to apply in the Profile Manager.
- Select *Apply to Group*.

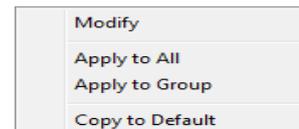


8.5.3 Applying a Profile from the Profile Manager to all Objects

- Right click on the profile you want to apply in the Profile Manager.
- Select *Apply to All*.



8.5.4 Copying a Profile from Object to Object

- Right click on the object whose profile you want to copy.
- Select *Copy Profile*.
- Select the objects to which you want to copy the object.
- Right click on the selected objects.
- Select *Paste Profile*.

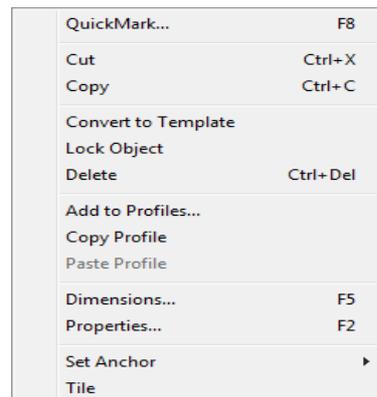

8.5.5 Saving Object Profile to the Profile Manager

- Right click on the object whose profile you want to save.
- Select *Add to Profile Manager*.
- Continue as described at (→ page 141, Creating Profiles).

8.6 Modifying a saved Profile

- In the Profile Manager, right click on the profile whose parameters you want to modify.
- Select *Modify*.
The dialogue on the right opens. Explanations can be found in the section below:
→ page 136, Marking Object Profile

The 'Modify Profile' dialog box contains the following parameters and settings:

- Mode: **mark once** (dropdown)
- Current Profile: **All passes** (dropdown)
- Passes: **0** (input field)
- Use pens
- Laser power: **0,000** %
- Frequency: **0,02** kHz
- Mark speed: **0** bits/mS
- Pulse width: **2** μS
- Pulsed Mode
- CW Mode
- Simmer Current: **0,00** 0.10V
- State select: **0** 0.63
- LaserOn delay: **0** μS
- LaserOff delay: **0** μS
- Mark delay: **0** μS
- Poly delay: **0** μS
- Spot Offset: **0** bits
- Jump speed: **0** bits/mS
- Jump delay: **0** μS
- Vari. jump length: **0** bits
- Vari. jump delay: **0** μS
- Wobble frequency: **0** Hz
- Wobble width: **0** bits
- Mark on dark material
- Enable Skywriting
- Start length: **0** μS
- Break angle: **0** degrees

Note

Separate parameters for filling profiles are not saved in the profile manager.


8.7 The Default Profile

The default profile is listed under the name *Default* in the Profile Manager. It cannot be deleted or moved to another folder. When you create a new marking object, the default profile is applied automatically. Markings performed to calibrate the marking field are performed using the settings in the test pattern profile.

The default profile can be adapted to your individual requirements; however, changes only affect the objects that are created subsequently.

8.7.1 Assigning the Parameters of a Marking Object to the Default Profile

- Right click on the marking object whose profile parameters you want to apply to the default profile.
- Select *Add to Profile Manager*. The dialogue on the right opens.
- Activate the checkmark *Parameter für alle Objekte verwenden*.
- Confirm the operation with *OK*.

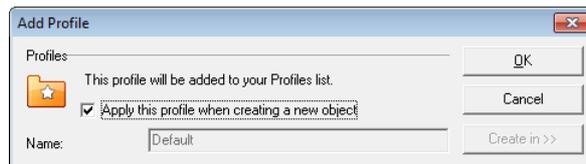

8.7.2 Applying the Parameters of a different Profile to the Default Profile

- In the Profile Manager, right click on the profile whose parameters you want to apply to the default profile.
- Select *Copy to Default*.



8.7.3 Modifying the Default Profile


The default profile can be modified in the same way as any other profile (→ page 144, Modifying a saved Profile).

8.8 Importing and exporting profiles

8.8.1 Importing profiles

Only profile folders can be imported, not individual profiles. The profile folder to be imported must be located in a folder with the name "Profiles".


- Select the *File > Import and Export Profiles...* option from the menu.
The dialogue on the right opens.
- Select *Import Profiles from a folder* and click on *Next*.
The following window is opened.
- Click on *Browse...* and then select the folder named "Profiles", which contains the profiles to be imported.
- Select option *Replace duplicates with Profiles imported* if you want to replace profiles with the same name or *Do not import duplicates* if you do not want.
- Click on *Next* to import the profiles.

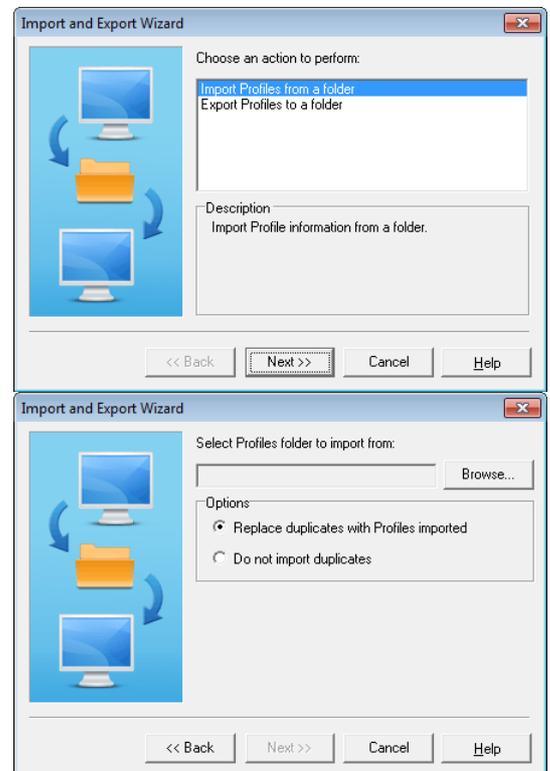

8.8.2 Exporting profiles

Only profile folders can be exported, not individual profiles. The profile folder to be exported is saved in a folder with the name "Profiles" (weldMARK™ creates this folder if there is no folder with this name at the specified location).

- Select the *File > Import and Export Profiles...* option from the menu.
The dialogue on the right opens.
- Select *Export profiles to a folder* and click on *Next*.
The following window is opened.
- Click on *Browse* button.
- Select the location in which you want to save the "Profiles" folder
or
select the location of an existing "Profiles" folder in which you want to save the profile folder to be exported.
- Click on the *Next* button.
The following window is opened.
- Select the profile folder to be exported.
- Click on *Next* to export the profiles.

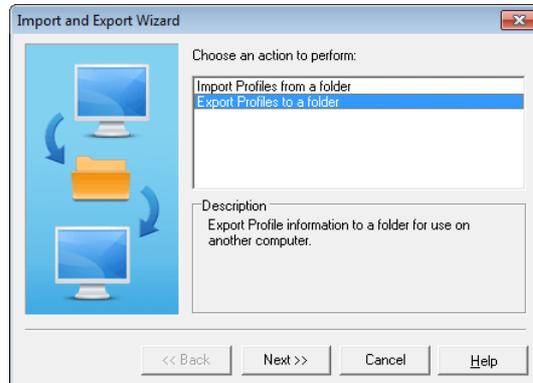


9 DEEP PROCESSING APPLICATIONS

9.1 Deep Cutting

The deep cutting function is currently for objects, imported as a vector graphic only. It is recommended to activate the option *Optimize for filling* in most cases. This way vectors will be reassessed and optimized for the filling process and deep cutting. Imported objects can be reworked in the Vector Graphic Designer if necessary (→ page 32, Vector Graphic Designer (VGD)).

The Deep cutting is designed for FOCUSSHIFTER scan heads only. If no focus change is needed, every type of RAYLASE scan head can be used.

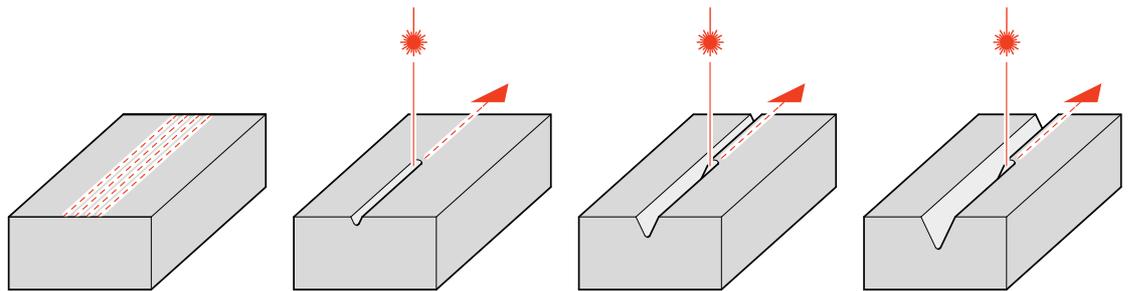


Deep cutting is realized with definable amount of parallel cuts. The cut lines can be defined to either cut within or outside the object.


9.1.1 Cutting Parameters

The cutting parameters can be defined as follows:

- Right click on the vector object whose profile you want to change and then select *Properties*.
- Select the *Cutting* tab. The dialogue on the right opens. Refer to the table below for explanations.

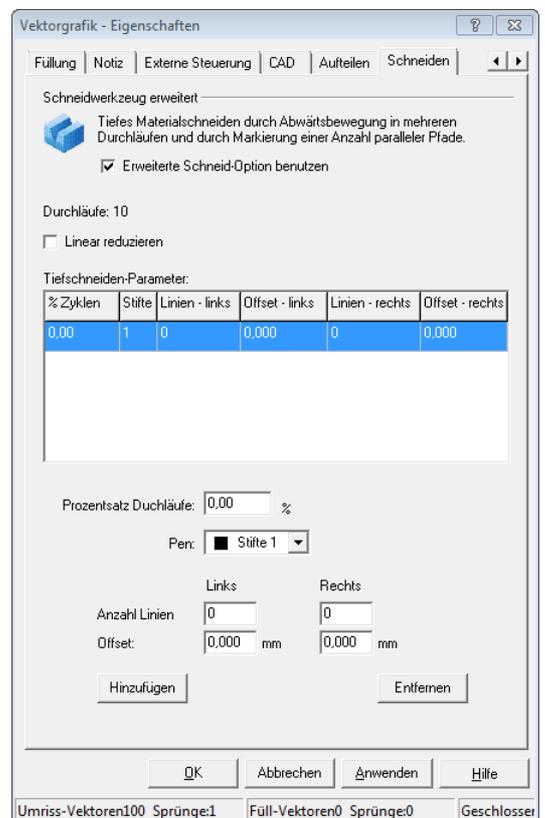


GUI-Element	Description
<i>Use advance cutting option</i>	Activates the advanced cutting options.
<i>Passes</i>	Displays how often the object has to be cut repeatedly. Definition is done in the profile tab (→ page 150, Profile Parameter).
<i>Reduce linearly</i>	This option linearly reduces the offset between lines after each cycle automatically. Only the first row of the <i>parameters for deep cutting</i> is considered. All other parameter rows are ignored.
<i>parameters for deep cutting</i>	Deep cutting can be done with an amount of passes which are executed one after another. Different parameters can be set, depending on the progress (percentage portion of one pass compared to the total amount of passes. The table <i>parameters for deep cutting</i> shows all parameters.
<i>% of Passes</i>	Defines from which percentage portion of the total amount of passes the corresponding row should be used.
<i>Pen</i>	The pen that is used for the marking can be chosen in this field.
<i>Number of Lines</i>	Defines the amount of parallel lines, which are offset to the outline. If Offset=0 no parallel lines will be marked.
<i>Offset - Left</i>	Defines the offset of the parallel lines to the outline.
<i>Offset - Right</i>	For closed objects <i>Offset - Left</i> stands for lines inside and <i>Offset - Right</i> for lines outside the the object. For open objects the lines are marked on the marking direction either left or right.
<i>Add</i>	A new parameter row is added in the <i>parameters for deep cutting</i> table.
<i>Remove</i>	Deletes the currently selected parameter row.

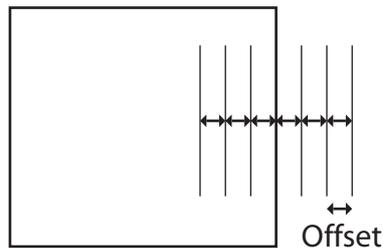

9.1.2 Profile Parameter

Profile Properties can be defined as with other objects (→ page 135, Using Profiles). The following parameters are worth a particular mentioning:

- Right click on the vector object whose profile you want to change and then select *Properties*.
- Select the *Profile* tab. The dialogue on the right opens. Refer to the table below for explanations.

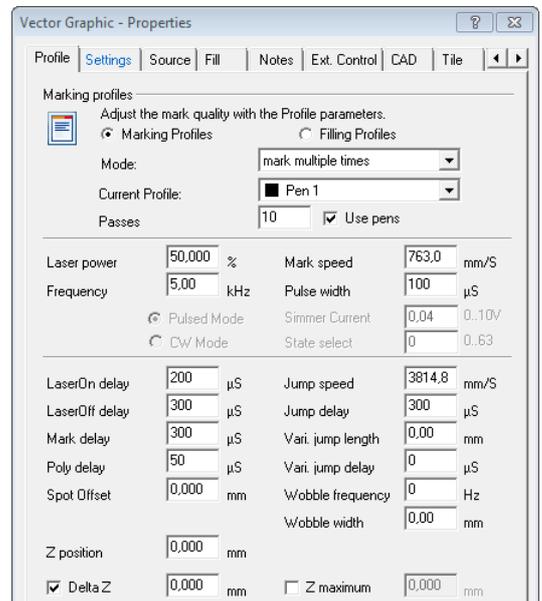


GUI-Element	Description	
<i>Passes</i>	Defines how often the object is marked repeatedly (→ page 148, Cutting Parameters).	
<i>T-Axis Position</i>	Only available for FOCUSSHIFTER scan heads.	
<i>Delta Z</i>		Defines the starting position of the z-axis.
<i>Z Maximum</i>		Defines the value, that is added to the current Z-position after each cycle.
		If this value is defined, <i>Delta Z</i> will be calculated automatically. The adjusted <i>Delta Z</i> value will be ignored this way.

9.2 Trepanning

Different methods of drilling can be applied depending on the application.

Methods for fine drilling are specified here: → page 82, Drill objects.

The trepanning function allows for drillings that are much wider than the diameter of the laser itself. Polygon objects with any number of sides can be used as a base. The following example shows a polygon with six sides and a polygon with a multitude of sides.

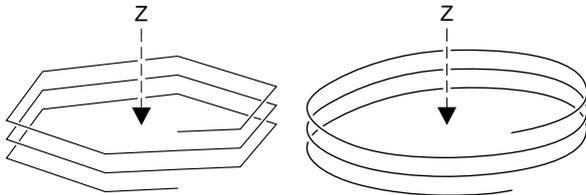

For trepanning the polygon object is marked spirally. This is accomplished with a constant shift of the Z-Axis after every marked side of the polygon.


9.2.1 Trepanning Parameters

The trepanning parameters can be set as follows:


- Right click on the vector object whose profile you want to change and then select **Properties**.
- Select **Settings** tab.
The dialogue on the right opens.

To use a polygon object for trepanning, the option **Helix (Z-step after each side)** has to be selected.

Further setting options for the polygon object are found in the "Polygon Object" section (→ page 52, Settings for a Polygon Object).

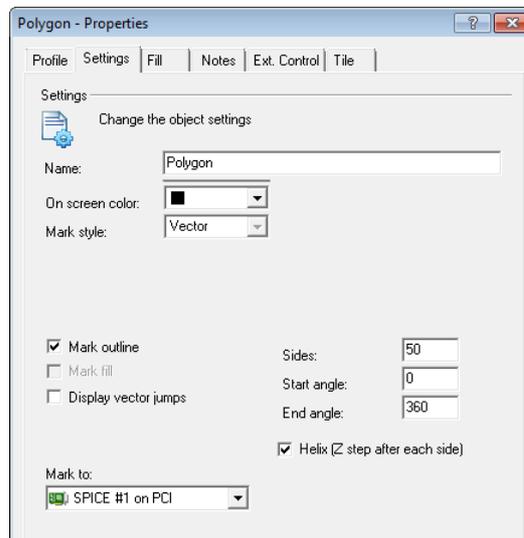

- Select the **Profile** tab.
The dialogue on the right opens. Further information for trepanning are found in the following table. All remaining parameters are explained in the section "Profile" → page 135, Using Profiles.

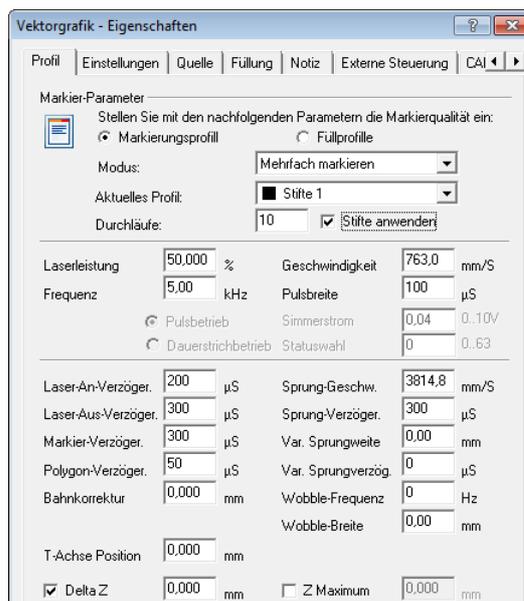

GUI-Element	Description	
<i>Marking Profile</i>	Displays profile parameters for trepanning	
<i>Mode</i>	The trepanning mode <i>mark multiple times</i> is selected by default.	
<i>Passes</i>	Defines how often the object is marked repeatedly (→ page 148, Cutting Parameters).	
<i>T-Axis Position</i>	Defines the starting position of the z-axis.	Only available for FOCUSSHIFTER scan heads.
<i>Delta Z</i>	Defines the value, that is added to the current Z-position after each marking of the polygon object sides.	
<i>Z Maximum</i>	If this value is defined, <i>Delta Z</i> will automatically be calculated as follows: <i>Z Maximum / (amount of side * cycles)</i> . The adjusted <i>Delta Z</i> value will be ignored this way.	

9.3 Deep Engraving

To use the Deep Engraving function, a STL file is required to define the surface. This 3D surface will be engraved in layers. The steps of the Z-Axis can be predefined as layer size or as layer amount, for automatical calculation. The layer size depends on the texture of the marking object and the cutting ability of the laser system.

9.3.1 Import STL file

STL-files can be imported just like vector graphics (→ page 29, Importing Vector Graphic Files). Currently only binary data formats are supported. ASCII files will be supported in the future. IGES and STEP will not be supported. All non-supporting options are displayed gray in the dialogue. If there is no unit specified in the file, it can be specified during the import.


9.3.2 Positioning of a STL object

The positioning and scaling of the STL object can be done with the "Dimensions" tool (→ page 101, The "Dimensions" Toolbox).

9.3.3 STL-Object settings

For each STL object special settings can be applied, which can be opened and changed at will as described below:

- Right click on the STL object.
- Select *Properties...*
- Select *Settings* tab.
- The dialogue on the right opens.
- Refer to the table below for explanations.

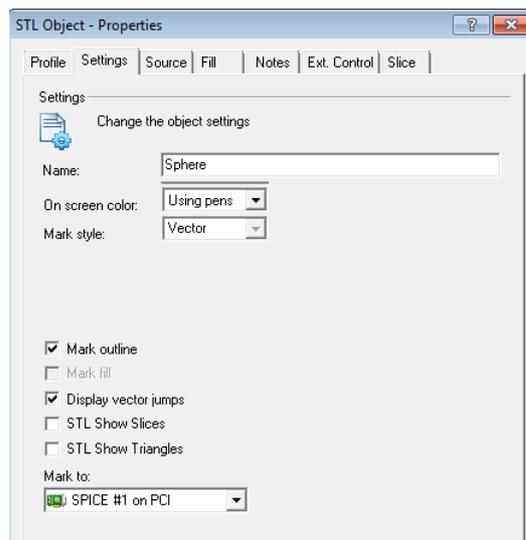


<i>Name</i>	The object name entered in this text box is used to list the object in the Object Manager. The name also appears in all information and dialogue boxes related to the object.
<i>Mark Style</i>	Defines the marking Style.
<i>Mark outline</i>	If this function is enabled, the object contour is marked. This function is enabled by default.
<i>Display vector jumps</i>	If this function is enabled, the vector jumps between the individual part of the object are displayed on screen. This function is disabled by default.
<i>Show STL Layers</i>	If no option is activated, the STL object will be used as XY projection of the 3D object. The option <i>Show STL Layers</i> shows the edges of all defined layers.
<i>Show STL Triangulation</i>	If the option <i>Show STL Triangulation</i> is activated, the STL object is displayed with the resulting triangles.

9.3.4 Adjust Layer parameters of a STL object

Before a STL object can be marked, the following parameters have to be defined:

- Right click on the STL object.
- Select *Properties...*
Select *Layer* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

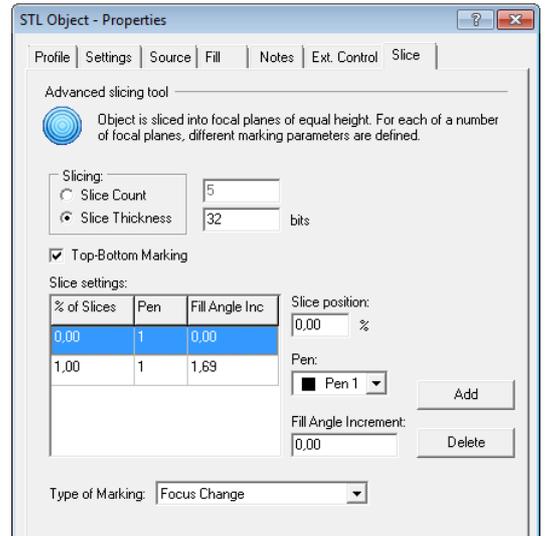


<i>Amount Layers</i>	The amount of layers for engraving the STL object can be set in this field. The resulting <i>Layer Size</i> is calculated and set automatically.
<i>Layer Size</i>	The size of layers for engraving the STL object can be set in this field. The resulting <i>Layer Size</i> is calculated and set automatically.
<i>Top-Bottom Marking</i>	Layers will be marked from top to bottom if this function is activated.
<i>Layer Settings</i>	Layers can be defined with different settings. They are commonly combined in groups, due to great amounts of single layers. The distribution in layer groups is made percentaged This way the last 50% of the layers can be engraved with different parameters to the previous layers.
<i>Layer Position</i>	Defines when a parameter row will be used. Definition is resulting from the chosen percentage value and selected layers.
<i>Pen</i>	Defines which pen is used for which parameter. If no pen is defined in the STL file, pen1 will be used as default.
<i>Filling angle increment</i>	In each marking pass, when moving to the next slice, the fill angle is incremented by the value specified in this field.
<i>Marking Type</i>	<p><i>Change Focus</i></p> <ul style="list-style-type: none"> ■ The Z-Position is achieved through a change of the focus position with a FOCUSHIFTER scan head. ■ 3-Axis scan heads can achieve the focus change with the Zoffset of the scan head. <p>Object height and layer size have to be within the technical data of the corresponding scan head.</p> <p><i>Auxiliary Axis</i> (currently not implemented)</p> <p><i>Port Definition</i> (currently not implemented)</p>

9.3.5 Saving options of a STL file in the job file

A STL object can be saved and referenced withing the job. If the file is referenced, the currently updated file will be loaded upon opening the job. Files saved within the job will save their file path, but not their contents. With the file path, the object can be manually loaded anew. These options can be set as follows:

- Right click on the STL object.
- Select *Properties...*
Select *Source* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

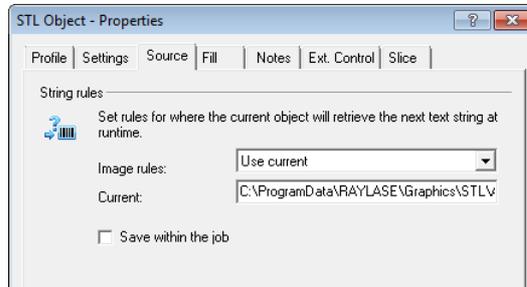

<i>Character string rules</i>	No settings necessary.
<i>String position</i>	Shows the path where the file is saved.
<i>Save within job</i>	If this function is activated the file will be saved within the job. Changes on the original file will not be loaded automatically. If this function is deactivated, the newest file will be loaded automatically upon opening the job. The job can only be accessed from another computer, if the original file can be found in the saved file path. Loading times can increade due to the loading the STL file.

10 3D APPLICATIONS

There are several possibilities for 3D marking in weldMARK™. A proper Scan Head and a special 3D Dongle have to be available for the 3D marking.


Particular correction files can be created, objects can be moved in 3D and 2D objects can be put onto a 3D surface for example.

10.1 Preparation for 3D Applications

To use the different 3D functions in weldMARK™ a 3D surface marking compatible Scan Head has to be used and the proper correction file has to be selected.


10.1.1 Selecting a Scan Head for 3D Surfaces

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
- Select the Scan Head you want to change from the directory tree.
- Click on *Change* button.
- Read and acknowledge the security query that appears.
The dialogue on the right opens.
- Select a 3D Application compatible Scan Head and confirm your choice with *OK*.

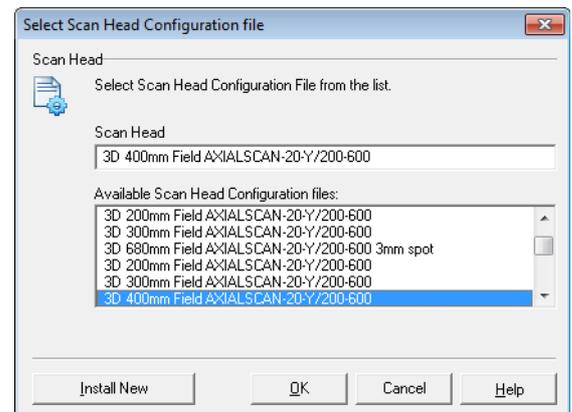


10.1.2 Add a new Correction

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
- In directory tree, click on the correction file of the deflection unit you want to optimize.
- Click on *Change* button.
- Read and acknowledge the security query that appears.
- Click on *Install New File* button.
The dialogue on the right opens.
- Click on *Next* button.
The following window is opened.

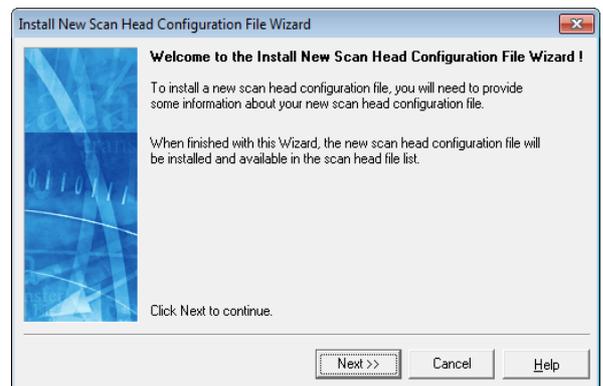

- Select the correspondent configuration file by clicking the *Search* button.

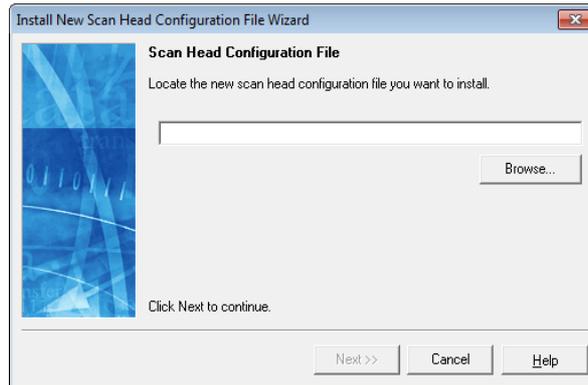

10.2 Importing 3D Vector-Objects

This method allows to directly import vector-objects (3Ddxf) as a three-dimensional Layout. Alternatively the 3D-coordinates can be provided in a separate txt-File. Import Details → page 29, Importing and editing Vector Graphic Objects.

After the import, the z-position (height position) of the layout has to be set, so the complete layout is underneath the zero level, meaning all z-coordinates have to be negative. This is done in the Vector Graphic Designer. → page 32, Vector Graphic Designer (VGD) (Tab: [Surface](#) > [Offset Object](#))

To finally mark the object in 3D the [Mark3D](#) option has to be activated → page 165, Job Settings - "Page Setup".

10.3 Projection of a 2D-layout onto a 3D-surface

This method allows to project 2D-layouts onto a 3D-surface within the Vector Graphic Designer → page 32, Vector Graphic Designer (VGD).

a) Tab: [Surface](#) > Import [Surface File](#)

b) Positioning the layout to the surface: Tab: [Surface](#) > [Offset Object](#) (X/Y coordinates)

c) Tab: [Surface](#) > [Surface to Object](#)

d) Afterwards, the z-position (height position) of the layout has to be set, so the complete layout is underneath the zero level, meaning all z-coordinates have to be negative. Tab: [Surface](#) > [Offset Object](#) (Z-coordinate)


To finally mark the object in 3D the [Mark3D](#) option has to be activated → page 165, Job Settings - "Page Setup".

10.4 Marking with modified Correction Files

This type of marking depends on correction files, that can be changed to adjust to different surfaces. Standard correction files for 3-axis scan heads, as well as correction files for 3D surface markings can be created with the correction file generator.

10.4.1 Correction File Generator

To start the correction file generator choose the menu point [Tools >Generate Correction](#). This option is only available for type "Professional 3D" dongles. The following window is opened.

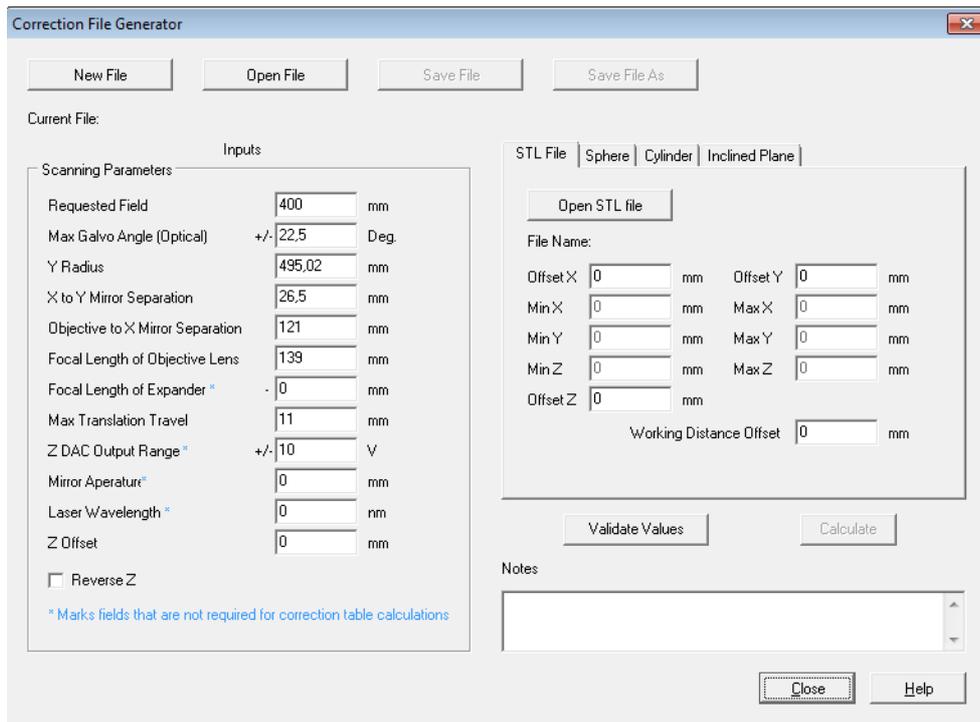

The following table shows all functions of the correction file generator:

Scanning Parameters	Values from the scan head correction file are entered here. They can be changed at will. The values have to be verified with the function <i>Validate Values</i> and <i>Calculate</i> anew.
Validate Values	Checks if the <i>Scanning Parameters</i> function is valid and shows an error message if the values are not in the area of validity.
Calculate	Calculates changed values after the function <i>Validate Values</i> has been checked for it's validity. After successful evaluation the options <i>Save File</i> and <i>Save File As</i> become available.
New File	Creating a new correction file
Open File	Opening a correction file
Save File	Saving a correction file
Save File As	Choose path & save Correction File

10.4.2 Creating correction files for different surfaces

weldMARK™ enable the creation of correction files which can be adjusted to different surfaces. Standard options for surfaces are sphere, cylinder and inclined plane. By assigning a STL-File other surfaces can be defined. To create a correction file based on a STL File follow the steps below:

- In the correction file generator click on *Open STL File*.
- Choose the corresponding STL-File and confirm with *Open*.
- The STL-File data is displayed in the right are of the correction file generator, as shown in the adjacent picture.
- If necessary, change the correspondent values, confirm them with *Validate Values*, and click on the button *Calculate*.
- Save your file with either *Save File* or *Save File As*.

STL File | Sphere | Cylinder | Inclined Plane

Open STL file

File Name: Ausschnitt Wanne

Offset X: -10 mm Offset Y: -10 mm

Min X: 0 mm Max X: 20 mm

Min Y: 0 mm Max Y: 20 mm

Min Z: 0 mm Max Z: 5 mm

Offset Z: -5 mm

Working Distance Offset: 0 mm

Validate Values Calculate

10.4.3 Create a correction file for spheres

- Click on the tab *sphere* in the correction file generator.
- The area pictured adjacent opens.
- Change the correspondent values, confirm them with *Validate Values*, and click on the button *Calculate*.
- Save your file with either *Save File* or *Save File As*.

STL File | Sphere | Cylinder | Inclined Plane

Center X: 0 mm Center Y: 0 mm

Center Z: 0 mm Radius: 0 mm

Working Distance Offset: 0 mm

Marking Area Scan Head

Z=0 Level Working Distance



Center (xyz) Working Distance Offset

Radius

Validate Values Calculate


10.4.4 Create a correction file for cylinders

- Click on the tab *cylinder* in the correction file generator.
- The area pictured adjacent opens. Depending on the chosen direction of X and Y the view is altered.
- Change the correspondent values, confirm them with *Validate Values*, and click on the button *Calculate*.
- Save your file with either *Save File* or *Save File As*.

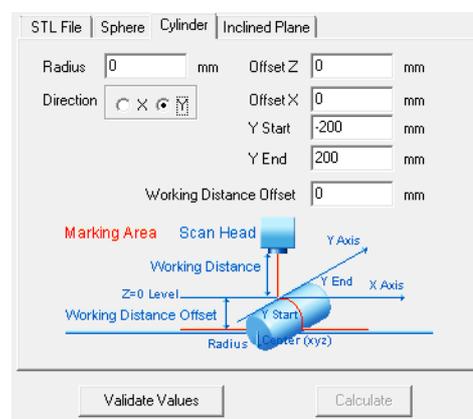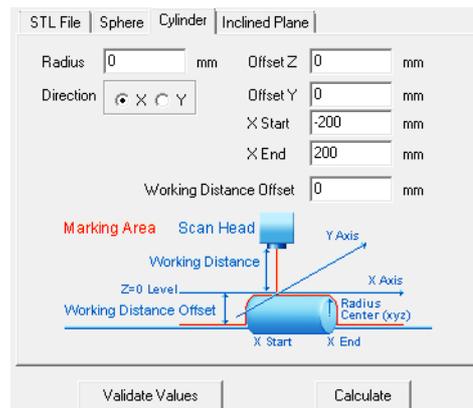

10.4.5 Create a correction file for inclined planes

- Click on the tab *inclined plane* in the correction file generator.
- The area pictured adjacent opens.
- To specify the inclined plane, the points A,B and C are defining a restricting triangle in a X/Y/Z coordinate system
Die Punkte A,B und C definieren ein begrenzendes Dreieck in einem X/Y/Z-Koordinatensystem um die geneigte Ebene zu definieren.
- Change the correspondent values, confirm them with *Validate Values*, and click on the button *Calculate*.
- Save your file with either *Save File* or *Save File As*.

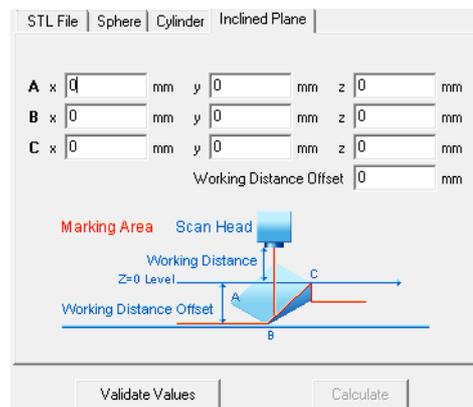

11 EXECUTING MARKING OBJECTS (QUICKMARK)

This chapter provides an overview of the QuickMark function. The function enables you to execute the marking process without automation objects or additional functions (e.g. serialization). It is also possible to mark only certain marking objects of a job.

Before using QuickMark function, you should familiarize with the job settings (→ page 164, Job Settings, run Job).



Warning


The laser beam can cause severe injury to the eyes and the skin. Make sure that there are no reflective objects in the beam path before starting the QuickMark function and turning on the laser. Note that laser beams can be reflected even by apparently matt objects.

All persons in the room must wear appropriate laser protection goggles, or the marking area must be covered completely. Follow the local safety regulations, which can be obtained from the person responsible for laser safety.



QuickMark

- Select the objects you want to mark. If you want to process all objects, you do not need to select an object.
- Select *Job > QuickMark...* option from the menu. The dialogue on the right opens. Refer to the table below for explanations.

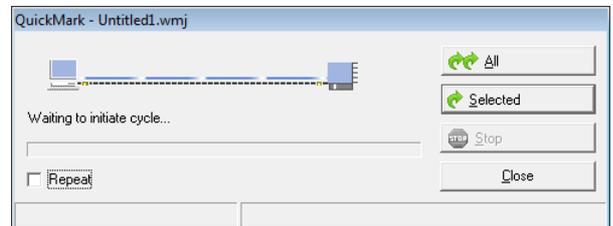


<i>Repeat Process</i>	Enabling this function means that once the marking process has been started it will be repeated until you stop it by clicking the <i>Stop</i> button.
<i>All</i>	Executes all marking objects of the current job.
<i>Selected</i>	Executes only the selected marking objects.
<i>Stop</i>	Clicking on this button stops the marking process immediately. Alternatively, you can do this by pressing the <i>ESC</i> key.
<i>(1)</i>	When laser marking has been completed, the attended marking time is displayed in the status bar.

11.1 PreviewMark

The PreviewMark can be used if the laser system is fitted with a visible pointer and you have selected a laser driver file that supports a visible pointer in the system preferences. Note that the visible pointer needs to be calibrated in order to represent the position of the marking laser correctly (→ page 217, Calibrating the Visible Pointer).

The PreviewMark shows the shape of a marking object or a group of marking object using the visible pointer. Thereby the marking laser remains off. The shape can be used to position and scale marking objects exactly on the target Furthermore, the workspace can be rotated.

- Select the marking objects whose marking position and size you want to set.
- Select *Job >PreviewMark...* option from the menu.
The dialogue on the right opens. Refer to the table below for explanations.

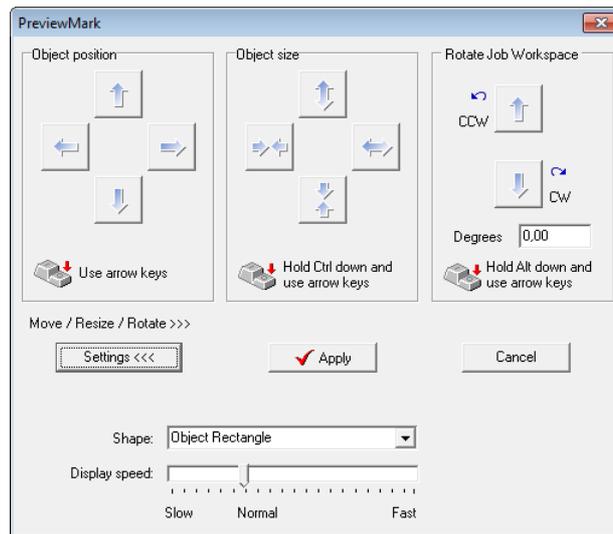

<i>Object position</i>	These buttons can be used to change the marking position of the selected objects.
<i>Object size</i>	These buttons can be used to change the size of the selected objects.
<i>Rotate Job Workspace</i>	These buttons can be used to rotate the workspace of the selected job. Thereby the arrow key down rotates clockwise (negative angle) and the arrow key up rotates anti-clockwise (positive angle). The angle can be entered into the field below the arrow keys, too. Please mind the algebraic sign. The rotation of the job workspace can also be set via Job Settings >Page Setup .
<i>Settings</i>	Clicking on this button shows or hides the slider for adjusting the speed of the visible pointer.
<i>Object Rectangle</i>	The object is shown as a rectangle whose shape symbolizes the object dimensions.
<i>Object Outline</i>	The visible pointer represents the object outline, even if only the filling is selected for marking. Only available with a SPICE control card
<i>Preview Profile</i>	the speed of the visible pointer can be set in this profile.
<i>Display Speed</i>	This slider can be used to adjust the speed of the visible pointer. The higher the speed, the more static the representation of the shape.
<i>Apply</i>	Clicking on this button applies the settings made.

12 JOB SETTINGS, RUN JOB

This chapter provides an overview about the sequence of a job, which settings you can make and how you run a job.

When executing a job, all objects contained in the job are executed, including the automation objects and all additional functions of the objects, e.g. serialization.

12.1 The Job Manager


The Job Manager gives an overview about the job settings. The settings can only be changed at the *All editing functions* access level. In *Operator interface only* mode, the Job Manager is displayed only, while it does not appear at all in *Touchscreen interface* mode.

Showing and hiding the Job Manager



Show/Hide Job Manager

- Select *View > Job Manager* option from the menu.
The adjacent window is shown or hidden.

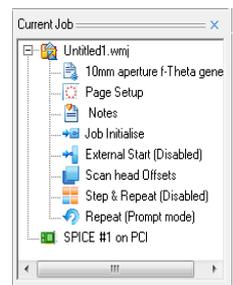


12.2 Editing the Job Settings

The job settings enable you to adapt the execution of a job to specific requirements. The job settings are saved within the job. They are divided up as follows:

<i>Page Setup</i>	Allows you to set the format and size of the workspace.	→ page 165, Job Settings - "Page Setup"
<i>Repeat Process</i>	Execution of the job can be repeated several times or continuously.	→ page 166, Job Settings „Repeat Process“
<i>Step & Repeat</i>	The Step & Repeat function allows an object to be marked several times. The duplication is based on adjustable row and column arrangements.	→ page 167, Job settings - "Step & Repeat"
<i>Job Initialize</i>	When starting the job, external components can be automatically prepared for the marking process.	→ page 168, Job Settings „Job Initialize“
<i>External Start</i>	The start of job execution can be controlled by external signals.	→ page 169, Job Settings - "External Start"
<i>Stop Mark</i>	Sets the behaviour of the laser if an external stop signal appears.	→ page 171, Job Settings - "Stop Mark"
<i>Scan head Offsets</i>	→ page 172, Job Settings - "Scan Head Offsets"	
<i>Notes</i>	A note can be added to the job.	→ page 173, Job Settings - "Notes"
<i>Interlocks</i>	Execution of the job can be interrupted by external interlock loops. This option is only available, if the Interlock card is installed.	→ page 174, Job Settings - "Interlocks"

12.2.1 Job Settings - "Page Setup"


- Select *Job >Settings...* option from the menu
or
double click on *Page Setup* option in the Job Manager.
The dialogue on the right opens.
Refer to the table below for explanations.

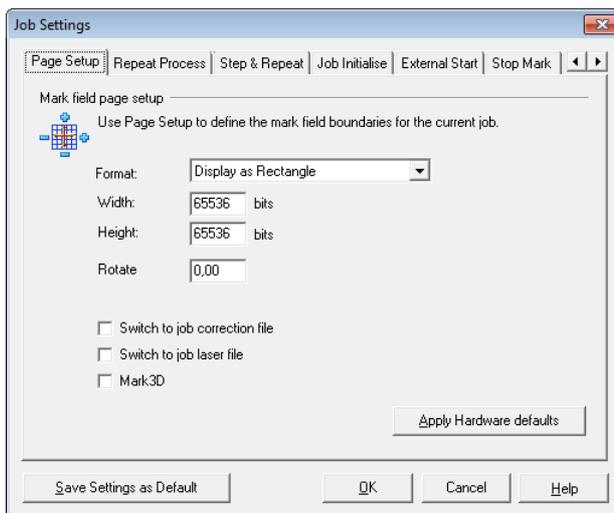

<i>Format</i>	You can select a rectangular or circular workspace.
<i>Width</i>	The size of the workspace can be adjusted. The maximum size of the workspace is determined by the size of the deflection unit's operating field.
<i>Height</i>	
<i>Rotate</i>	Into this field, a rotation angle to rotate the job workspace can be entered. A negative value rotates the workspace clockwise, a positive one anti-clockwise. These settings can also be modified via <i>Job >Preview Mark...</i>
<i>Switch to job correction file</i>	If this option is selected, the path for the currently selected correction file is saved and the correction file will be loaded automatically upon the next opening of the job.
<i>Apply Hardware defaults</i>	Clicking on this button sets the workspace to its maximum possible size (size of deflection unit's operating field).
<i>Save Settings as Default</i>	Clicking on this button allows to save the current settings as defaults for the <i>Page Setup</i> .
<i>Switch to job laser file</i>	If this option is selected, the path to the currently selected file will be saved and is automatically loaded upon the next opening of the job.
<i>Mark 3D</i>	If this option is selected, vectors with three-dimensional coordinates can be processed if a suitable scan head is connected.

12.2.2 Job Settings „Repeat Process“

- Select *Job >Settings...* option from the menu.
- Select *Repeat Process* tab. The dialogue on the right opens. Refer to the table below for explanations.

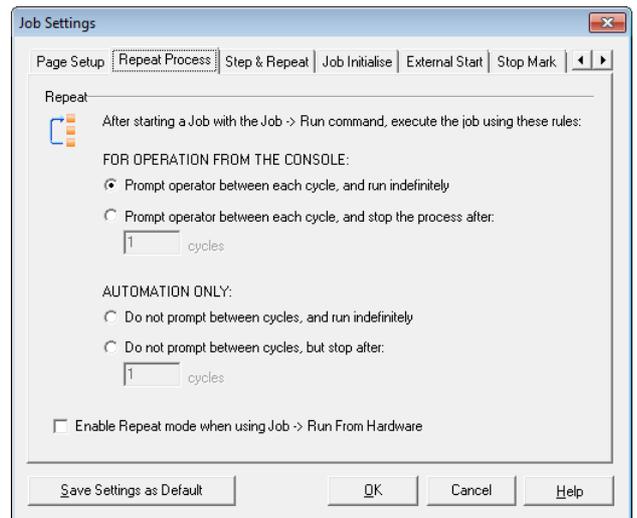


<i>FOR OPERATION FROM THE CONSOLE</i>	If you select a manual repeat function, each new execution of the job must be started manually.
	(1) The job is executed as many times you wish.
	(2) The frequency of execution is limited by the specified number of <i>Cycles</i> .
<i>AUTOMATION ONLY</i>	If you select an automatic repeat function, execution of the job is automatically restarted after completion of a cycle.
	(3) The job is automatically and continuously repeated until it is cancelled manually.
	(4) Execution of the job is repeated automatically for the specified number of <i>Cycles</i> . The limitation is not considered with the <i>Run from Hardware</i> mode.
(5)	Only selectable if a SP-ICE Control Card is used If this function is enabled, the settings are also used in <i>Run from Hardware</i> mode. This option is available only if <i>Run from Hardware</i> mode is enabled (→ page 176, Run from Hardware).
<i>Save Settings as Default</i>	Clicking on this button uses the current settings as defaults for <i>Repeat Process</i> .

12.2.3 Job settings - "Step & Repeat"

The Step & Repeat function allows marking of objects several times on the workspace. Reproduction takes place in an adjustable row and column arrangement and applies to all marking objects in the job.

- Select *Job >Settings...* option from the menu.
- Select *Step & Repeat* tab.
The dialogue on the right opens. Refer to the table below for explanations.

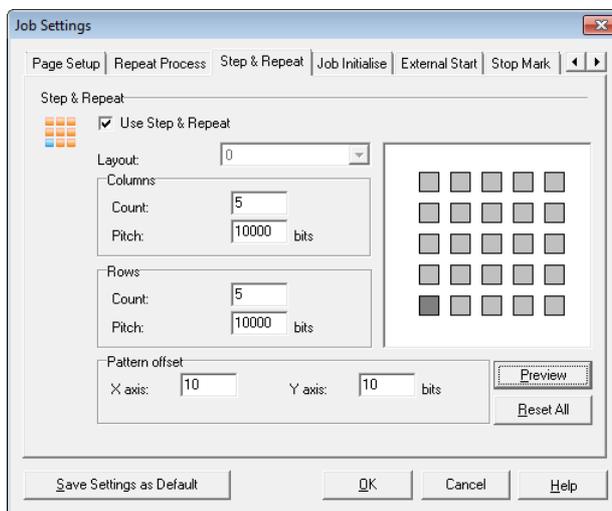


<i>Use Step & Repeat</i>	If this function is enabled, the following parameters can be set:		
	<i>Layer</i>		
	<i>Columns</i>	<i>Count</i>	If a standard I/O card is installed, up to four matrix layouts can be created. Each layout can have a different matrix arrangement. The layout can be selected using the ports on the standard I/O card.
		<i>Pitch</i>	
	<i>Rows</i>	<i>Count</i>	
		<i>Pitch</i>	
	<i>Pattern offset</i>	<i>X axis</i>	The position of the matrix on the marker can be adjusted using these offset values.
		<i>Y axis</i>	
<i>Preview</i>		Clicking on this button updates the preview window.	
<i>Reset All</i>		Clicking on this button resets all settings to the defaults.	
<i>Save Settings as Default</i>		Clicking on this button uses the current settings as defaults for <i>Step & Repeat</i> .	

12.2.4 Job Settings „Job Initialize“

When the job is started, the RS232 port can be used to output a string for initialization of external components. In addition, you can specify a port to report execution of the job to external components. As initialization is job specific, the components can be initialized in a different way for each loaded job.

- Select *Job >Settings...* option from the menu.
- Select *Job Initialize* tab. The dialogue on the right opens. Refer to the table below for explanations.

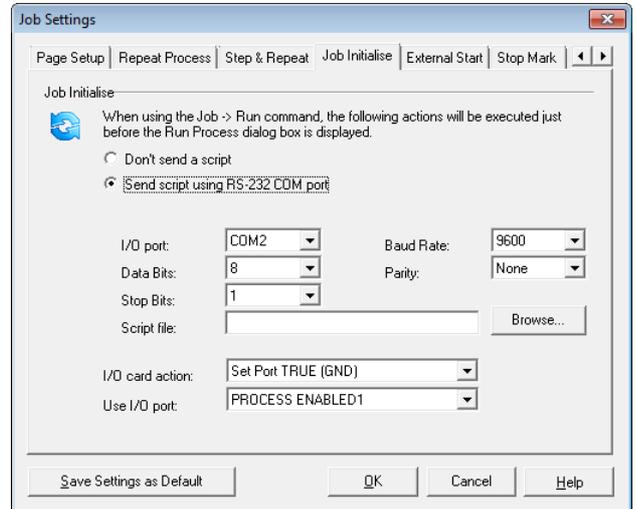

<i>Don't send a script</i>	No script is sent to initialize external components.	
<i>Send script using RS-232 COM port</i>	A script is sent to initialize external components using an RS232 port.	
	<i>I/O Port</i>	Select an RS232 port for sending the script.
	<i>Data Bits</i>	These parameters are used to adapt the RS232 port to the parameters of the script recipient.
	<i>Stop Bits</i>	
	<i>Baud Rate</i>	
	<i>Parity</i>	
	<i>Script file</i>	Selection of the script file to be sent using the RS232 port.
<i>Browse...</i>		
<i>I/O card action</i>	A port of the I/O-card can be selected. An action that should be executed when the job is started must be assigned to this port.	
<i>Use I/O port</i>		
<i>Save Settings as Default</i>	Clicking on this button uses the current settings as defaults for <i>Initialization</i> .	


12.2.5 Job Settings - “External Start”

The „External Start“ function allows the control of job execution by an external signal. This tab is available only if the standard I/O card is installed and/or SP-ICE/RLC series control cards are installed.

Wait for an external Start Signal

- Select *Job >Settings...* option from the menu.
- Select *External Start* tab.
- Enable *Wait for an external start signal*.

The dialogue on the right opens. Refer to the table below for explanations.

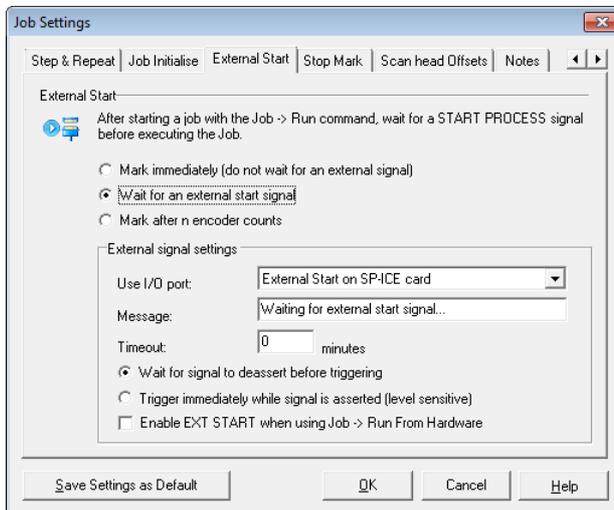


(1)	If this check box is selected, the <i>External Start</i> function is deactivated.
(2)	If this check box is selected, the <i>External Start</i> function is activated and the following setting options are available:
	<i>Use I/O port</i> This choice box can be used to choose the port for the start signal. The options vary depending on the cards installed.
	<i>Message</i> A text can be entered for a message displayed during the waiting time.
	<i>Timeout</i> A time limit can be placed on the waiting time for the external start signal. When this time has elapsed, an error message will be output. If the value "0" is entered, the waiting time is unlimited.
(3)	The job is not started until the start signal is terminated.
(4)	The job is started as soon as the start signal is asserted.
(5)	If this function is enabled, the selected parameters are also used in <i>Run from Hardware</i> mode. This option is available only if <i>Run from Hardware</i> mode is enabled (→ page 176, Run from Hardware).
	<i>Save Settings as Default</i> Clicking on this button uses the current settings as defaults for <i>External Start</i> .

Mark after n Encoder Counts

- Select *Job >Settings...* option from the menu.
- Select *External Start* tab.
- Enable *Mark after n encoder counts*.

The dialogue on the right opens. Refer to the table below for explanations.

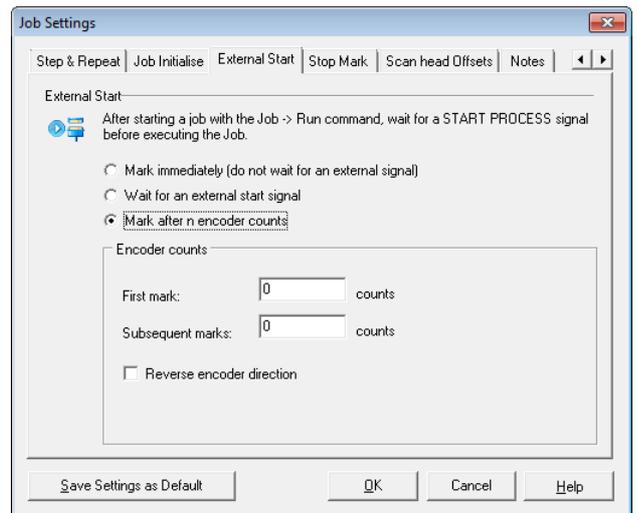


(1)	If this option is enabled, the mark starts after an adjustable number of encoder counts.	
	<i>First mark</i>	Number of encoder counts before the marking operation starts.
	<i>Subsequent marks</i>	Number of encoder counts before starting the following marks.
(2)	In some cases, caused by installation, the sensor signal arrives with the wrong moving sense. Though the direction of the encoder is reversed.	
	<i>Save Settings as Default</i>	Clicking on this button uses the current settings as defaults for <i>External Start</i> .

12.2.6 Job Settings - "Stop Mark"

This function sets the reaction at an external stop signal.

- Select *Job >Settings...* option from the menu.
- Select *Stop Mark* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

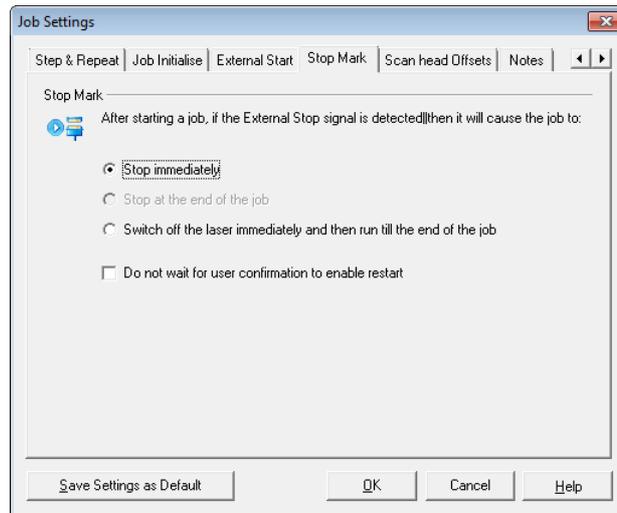


(1)	Mark stops immediately after the external stop signal has appeared. This function is enabled by default.
(2)	The marking laser switches off immediately after the external stop signal has appeared. Subsequently, the job runs to end.
(3)	If this function is enabled the job is repeated without waiting for a confirmation by the user.

12.2.7 Job Settings - "Scan Head Offsets"

If several scan heads are used, it can be necessary to balance the offset. For this purpose, individual settings can be specified for every scan head.

- Select *Job >Settings...* option from the menu.
- Select *Scan head Offsets* tab. The dialogue on the right opens. Refer to the table below for explanations.

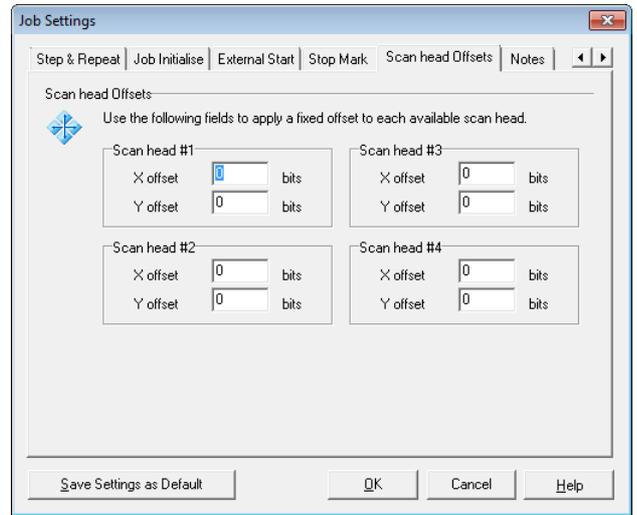


Scan head 1	X offset	It is possible to set the X and Y offset for each single scan head.
	Y offset	
Scan head 2	X offset	
	Y offset	
Scan head 3	X offset	
	Y offset	
Scan head 4	X offset	
	Y offset	

12.2.8 Job Settings - "Notes"

A note can be added to the job. weldMARK™ can be set up in such a way that the job note is displayed automatically when loading the job and has to be acknowledged by the user (→ page 198, Settings for the Job File).

- Select *Job >Settings...* option from the menu.
- Select *Notes* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

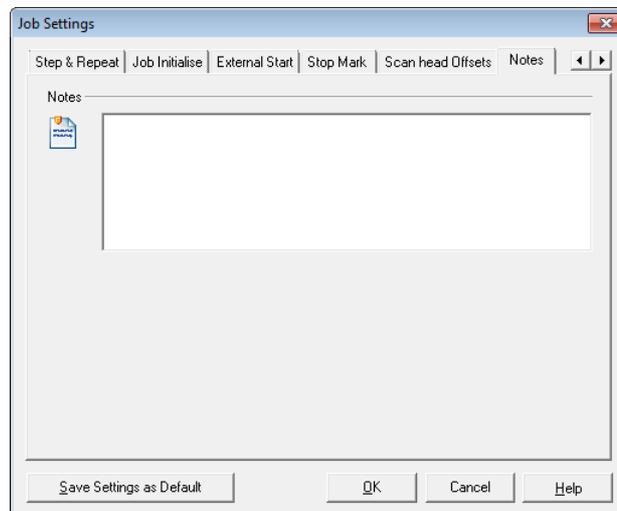


Save Settings as Default

Clicking on this button uses the text entered as default for *Notes*.

12.2.9 Job Settings - "Interlocks"

Use the settings on the *Interlocks* tab to set when and how weldMARK™ will report interlock events. The *Interlocks* tab is only available if an interlock card is installed.

- Select *Job > Settings* option and then select the *Interlocks* tab. The dialogue on the right opens. Refer to the table below for explanations.

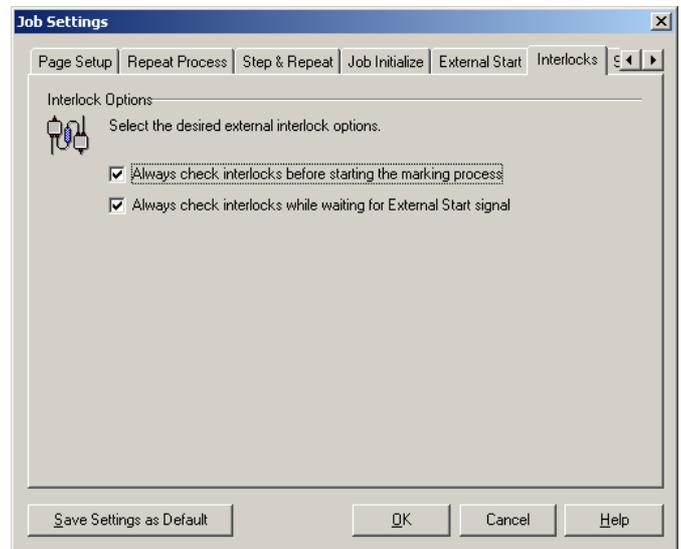

<i>Always check interlock before...</i>	If this check box is enabled, the interlock status is checked before starting each job. If there is an interlock event, the job is not started and an error message is output.
<i>Always check interlock while...</i>	If this check box is enabled, the interlock status is checked while the system is waiting for the external start signal and, if necessary, an error message is output. If the check box is not enabled, an interlock event does not result in an error message. However the start signal is ignored and the READY signal on the standard I/O card changes to BUSY.
<i>Save Settings as Default</i>	Clicking on this button uses the current settings as defaults for <i>Interlocks</i> .

12.3 Executing a Job

In order to be able to execute a job, the Object Manager must contain at least one object that can be marked. The procedure for starting a job differs depending on the access level and is described below.




Warning

The laser beam can cause severe injury to the eyes and the skin. Make sure that there are no reflective objects in the beam path before starting a job and turning on the laser. Note that laser beams can be reflected even by apparently matt objects. All persons in the room must wear appropriate laser protection goggles, or the marking area must be covered completely. Follow the local safety regulations, which can be obtained from the person responsible for laser safety.

Starting a Job at "All editing functions" Access Level

- If necessary, open the required job.
- Select **Job >Run** option from the menu. The dialogue on the right opens.
- Click on **Go** button. The job is executed.

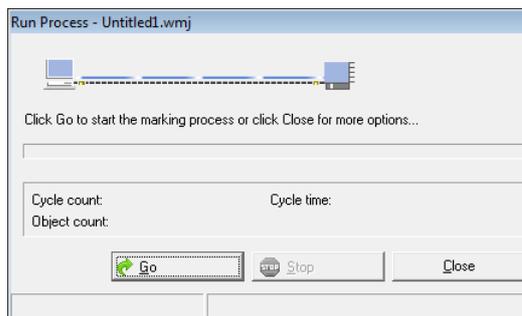


Stopping the Job

Click on **Stop** button or press the **ESC** key. Upon restarting the execution of the job begins with the first object

Starting a Job at "Operator interface only" Access Level

- If necessary, open the required job.
- Select **Job >Run** option from the menu. The dialogue on the right opens.
- Click on **Go** button. The job is executed.

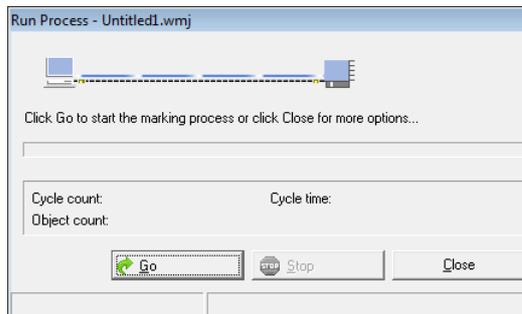

Stopping the Job

- Click on **Stop** button or press the **ESC** key.

Starting a Job at "Touch screen interface" Access Level

- If necessary, open the required job.
- Touch the **Run** button. The job is executed.

Stopping the Job

- Touch the **Stop** button or press the **ESC** key.

12.3.1 Displays during a Job

While the job is executed, the following values are displayed in the status bar:

<i>Cycle count</i>	How often the entire job has been executed so far.
<i>Object count</i>	Number of objects processed so far.
<i>Cycle time</i>	Required time for the execution of the current job (current cycle).
<i>Current object</i>	The object that is currently being processed.

12.3.2 Events during a Job

Depending on the objects included in the job and their properties, the program may ask the user for input during execution.

Entering a String

If an object has been created for which the user needs to enter a string, The dialogue on the right opens.


Refer to the table below for explanations.



<i>(1)</i>	Input box for the string with which the object is marked. Execution of the job is continued as soon as the entry is confirmed by clicking the <i>OK</i> button.
<i>OK</i>	
<i>Skip</i>	Clicking on this button skips the input prompt. The object is marked with the last string used.

Parameters for TextMerge

If an object has been created that uses a Text-Merge function, The dialogue on the right opens. Refer to the table below for explanations.

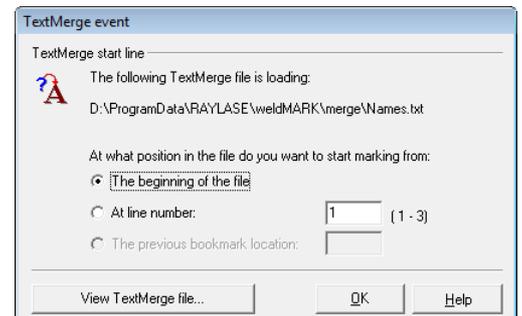

<i>The beginning of the file</i>	The first string for the object is taken from the first line of the merge file.
<i>At line number</i>	The first string for the object is taken from the specified line of the merge file. The available line numbers are specified in brackets.
<i>The previous bookmark location</i>	The first string is taken from the line in the merge file that is bookmarked. This option is not available until at least one line has been read from the merge file. The bookmark is inserted each time a line from the merge file is read and specifies the next line to be read. This allows serialization to continue seamlessly after restarting the job.

12.3.3 Run from Hardware


weldMARK™ allows loading all marking objects of a job to the control card's memory. Thus, the job can be executed very quick and potential delays caused by the operating system are avoided. With this function, no automation objects run and no signals for "External Control" processed.

To allow direct operation, the following conditions must be met:

- A SP-ICE control card must be used.
- The *Run from Hardware* mode must be activated.

Activating "Run from Hardware" Mode

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
The dialogue on the right opens.
- Select the control card for which you want to activate the mode.
- Click on *Configure...* button.
The following window is opened.
- Select *Display* tab.
- Activate the check box *Job <Run from Hardware*.

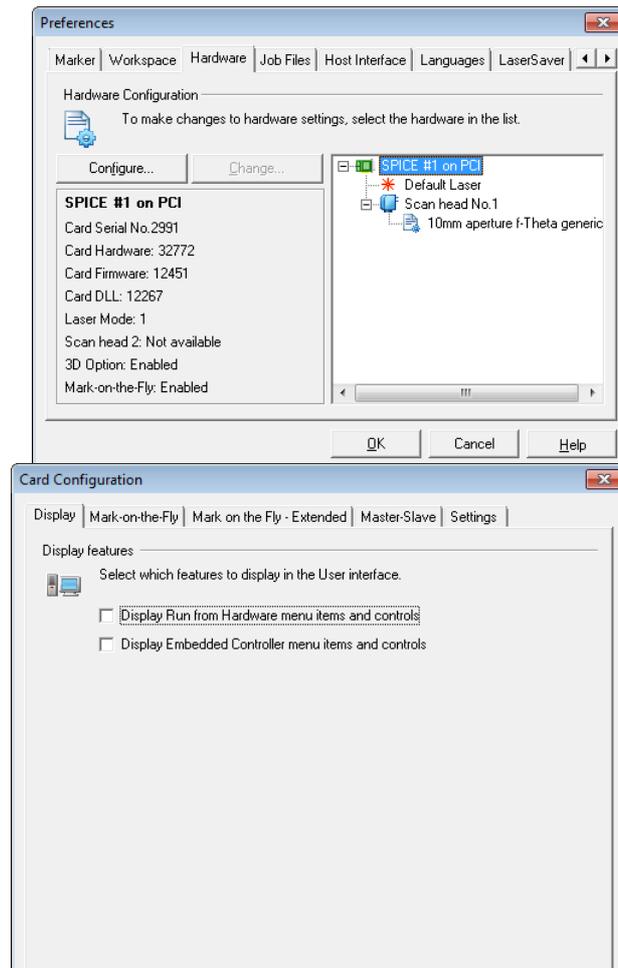


Running a Job from Hardware



Warning

The laser beam can cause severe injury to the eyes and the skin. Make sure that there are no reflective objects in the beam path before starting a job and turning on the laser. Note that laser beams can be reflected even by apparently matt objects. All persons in the room must wear appropriate laser protection goggles, or the marking area must be covered completely. Follow the local safety regulations, which can be obtained from the person responsible for laser safety.

- Select *Job >Run from Hardware* option from the menu.
The dialogue on the right opens. Refer to the table below for explanations.

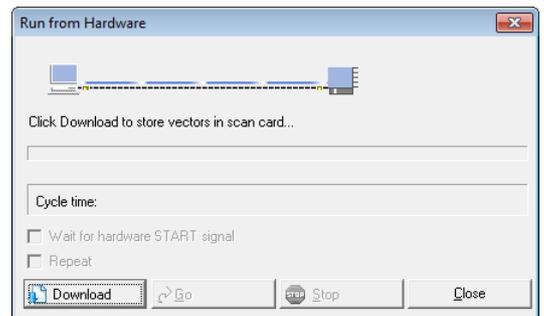

<i>Download</i>	Clicking on this button sends the marking objects to the control card.	
	<i>Go</i>	This button becomes active only when all marking objects have been saved on the control card. Clicking on the button starts the execution of the job.
	(1)	If this function is enabled, the job is not executed until the hardware signal is present (→ page 169, Job Settings - “External Start”).
	(2)	If this function is enabled, the job is executed repeatedly (→ page 166, Job Settings „Repeat Process”).
	<i>Stop</i>	Clicking on this button or pressing the <i>ESC</i> key stops execution immediately.

12.3.4 Stand Alone Operation


weldMARK™ allows loading all objects of a job to the memory of a stand alone control card. Then the job can be executed from the control card itself without connection to weldMARK™. This function is available only with SP-ICE control cards.

In order to be able to save a job on a stand alone control card, the following conditions must be met:

- The appropriate hardware must be available
- The function must be enabled.
- The job may not contain more objects that can be saved on the controller.


Enabling "Save to stand alone control card" Mode

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
- Select the control card for which you want to activate the mode.
- Click on *Configure...* button.
- The dialogue on the right opens.
- Select *Display* tab.
- Select *File > Save Job to Embedded Controller*.

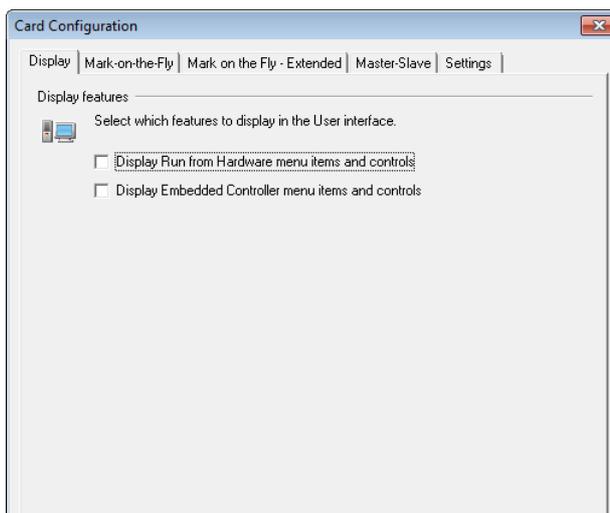

Saving a Job to a Stand Alone Control Card

- Select *File > Save Job to Embedded Controller*.
- The dialogue on the right opens.
- Select a script file from the list.
- Click on the *Send* button to start saving.

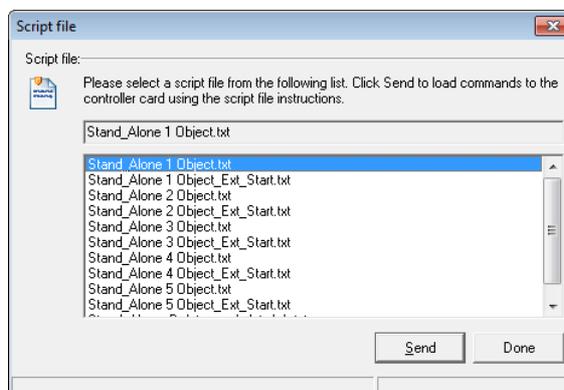

12.4 The "Mark on the Fly" Option


The „Mark on the Fly“ option allows marking of moving workspaces. The vectors of a job are corrected corresponding to the respective velocity.

In order to use the „Mark on the Fly“ option, the following conditions must be met:

- A suitable SP-ICE control card and a suitable encoder signal need to be available. Please note the hints in the respective manual to the SP-ICE control card.
- The „Mark on the Fly“ option must be enabled.

Activating the "Mark on the Fly" Option

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
- Select the control card for which you want to activate the mode.
- Click on *Configure...* button.
- Select *Mark on the Fly* tab.
The dialogue on the right opens. Refer to the table below for explanations.

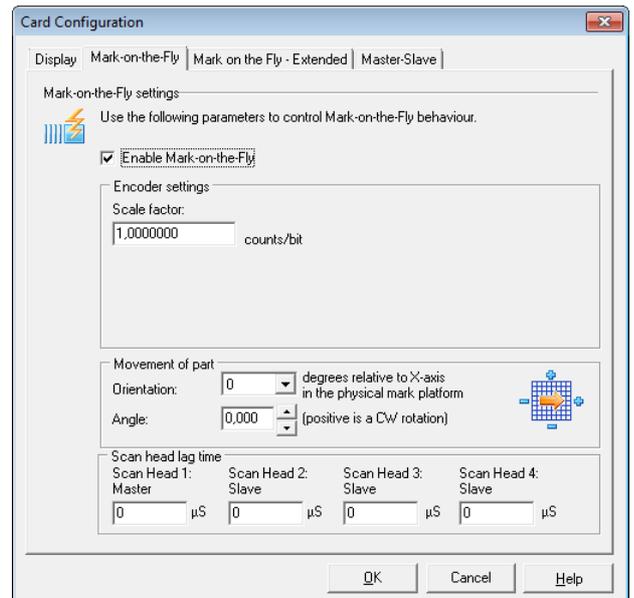

<i>Enable Mark on the Fly</i>	If this function is enabled, the following settings are available		
	<i>Scale factor</i>	This field can be used to enter the number of pulses emitted by the encoder per adjusted measuring unit.	
	<i>String orientation</i>	Rough setting for the direction of movement of the marked target. "0" corresponds to a horizontal movement from the left to the right. The orientation which is entered under <i>System > Preferences</i> , tab <i>Marker</i> is not considered. Rotation is clockwise.	If the marker is moving at a 20° angle relative to the X-axis, enter "0" in the <i>Orientation</i> field and "20" in the <i>Angle</i> field.
	<i>Angle</i>	Precise setting for the direction of movement of the marked target. You can enter an angle between -45° and +45°. Rotation is clockwise, relative to the X-axis configured under <i>System > Preferences...</i> on the <i>Marker</i> tab.	
<i>Scan head lag time</i>	Scan Head 1: Master Scan Head 2: Slave Scan Head 3: Slave Scan Head 4: Slave	The Tracking Error Kompensation can not be used, if the inertia of the Galvos is affecting the Mark-on-the-Fly-function. Therefore, it is possible to set individual lag times for each single Scan Head. The Tracking Error Kompensation is activated automatically as soon as one value bigger than zero is entered into one of the fields.	

12.4.1 Mark-on-the-Fly extended (2. channel)

<i>Activate edge following control</i>	If this function is activated, the following settings are available for the second MOTF-channel.
<i>Scale factor</i>	This field can be used to enter the number of pulses emitted by the encoder per adjusted measuring unit.
<i>String orientation</i>	Rough setting for the direction of movement of the marked target. "0" corresponds to a horizontal movement from the left to the right. The orientation entered under <i>System > Preferences</i> , tab register <i>Marker</i> will not be considered. Rotation is clockwise.
<i>Angle</i>	Precise setting for the direction of movement of the marked target. You can enter an angle between -45° and +45°. Rotation is clockwise, relative to the X-axis configured under System > Preferences, on the <i>Marker</i> tab.

12.5 Master-Slave-Operating


In a PC one SP-ICE control card can be defined as master card and up to three cards as slave cards.

In master/slave operation weldMARK™ sends the job file to the master control card. This master card controls the connected Scan Head and the laser by means of the job file – like in normal operation the SP-ICE control card. Additionally, the SP-ICE card in master mode controls the slave control cards. Thus the content of a job file can be sent to up to four SP-ICE control cards (one master and three slave cards). Slave cards can control scan heads but not the laser itself.

Information in detail about hardware configuration can be found in the hardware manual of the SP-ICE control card.

Activating „Master-Slave“ Option

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
- Select the control card for which you want to activate the mode.
- Click on *Configure...* button.
- Select *Master-Slave* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

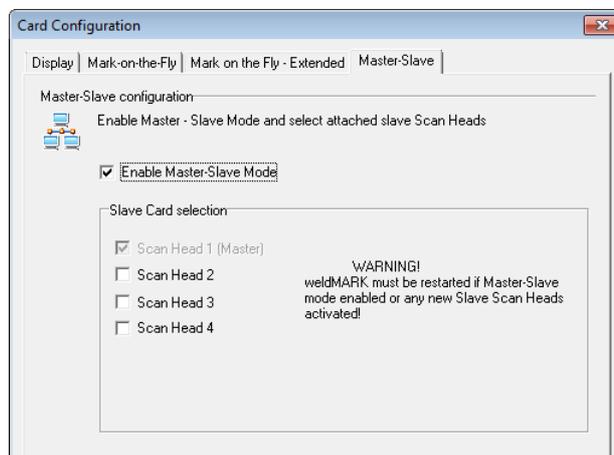

<i>Scan Head 1 (Master)</i>	This check box shows, that Scan Head „1“ is defined as master.
<i>Scan head 2</i>	Via these check boxes the built-in SP-ICE control cards can be activated for slave operation.
<i>Scan head 3</i>	
<i>Scan head 4</i>	


An individual correction file can be loaded for each slave card in the system configuration

12.6 Importing a Job

A job is a collection of objects and settings. The settings determine the actions of the scan head, the laser and the additional equipment. If a job is imported into another job, the objects and settings it contains will be added to the currently opened job.



- Select **File > Import Job**. The dialogue on the right opens. Refer to the table below for explanations.

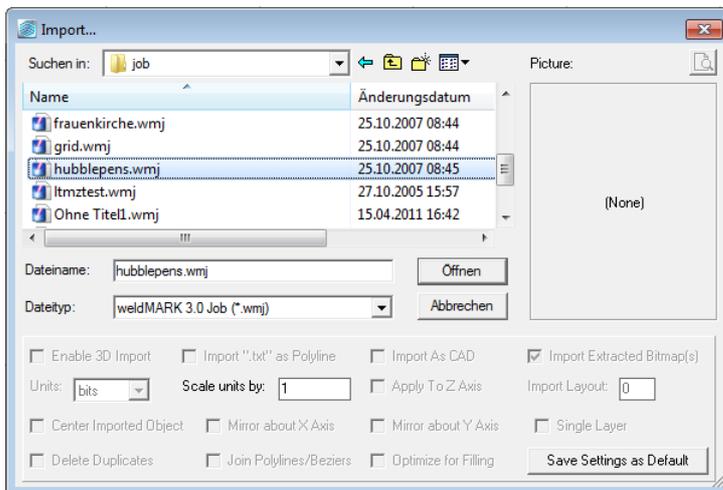


Look in	Allows you to choose the folder in which the job to be imported is saved.
File name	This text box displays the name of the currently selected file.
File type	The file type of a job file must be selected. Only files of the selected type will be displayed. The following file formats can be imported:
<i>weldMARK 3 Job (*.wmj)</i>	A weldMARK™ job file format. weldMARK™ jobs can be imported 1.x, 2.x and 3.x
<i>TruvVewJob (*.job)</i>	A file type developed by the GSI Group Inc. which is bas on the Truview® software package.
<i>WinLase Job (*.wlj)</i>	A WinLase job file format.
<i>further</i>	→ page 29, Importing Vector Graphic Files → page 41, Importing Bitmap Files

12.7 Printing a Job

The content of the workspace can be printed as described below:

- Select *File > Print Setup...* option from the menu and do the required settings (printer, paper size, orientation).
- Select *File > Print* option from the menu. The dialogue on the right opens. Refer to the table below for explanations.

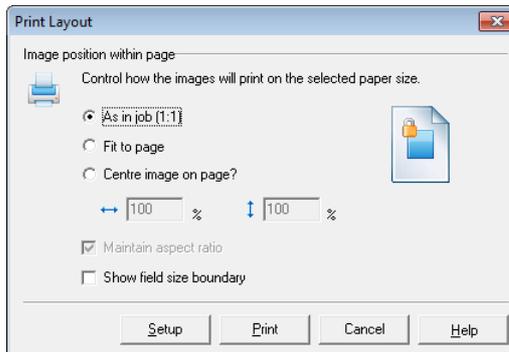

<i>As in job (1:1)</i>	The objects are printed at actual size.	
<i>Fit to page</i>	The printout is scaled to use the full size of the page.	
<i>Center image on page</i>	The printout is scaled as specified and centered on the page.	
	<i>Width</i>	The width and height of the printout can be changed as a percentage of the actual size.
	<i>Height</i>	
<i>Maintain aspect ratio</i>	If this function is enabled, the aspect ratio of the printout remains unchanged even if the print size is changed (no distortion).	
<i>Show field size boundary</i>	If this function is enabled, the boundaries of the workspace are printed as a frame.	
<i>Setup or Print</i> buttons	Clicking on these buttons calls up the printer settings.	

13 SYSTEM TOOLS


weldMARK™ provides the following system tools:

<i>Configure Tools</i>	The tool menu can be extended with options for calling up external programs.	→ page 184, Configure Tools
<i>Configure I/O Cards...</i>	This tool allows you to configure newly installed I/O cards.	→ page 186, Configure I/O Cards
<i>Laser Diagnostics Tool</i>	This tool allows you to check the positioning and power of the marking laser.	→ page 187, Laser Diagnostics Tool
<i>I/O Card diagnostics</i>		→ page 188, "I/O Card Diagnostics" Tool

13.1 Configure Tools

The weldMARK™ *Tools* menu can be extended with additional tools (external programs). These programs can then be launched from weldMARK™.

- Select *Tools >Configure Tools...* option from the menu. The dialogue on the right opens. Refer to the table below for explanations.

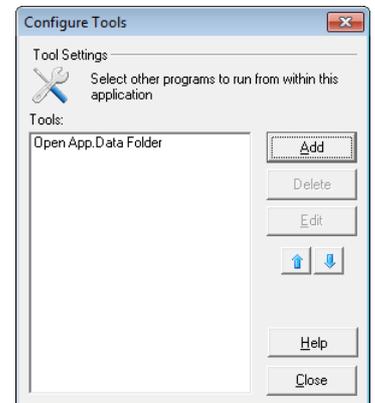

<i>Tools</i>	This section of the window lists all programs added.
<i>Add</i>	Clicking on this button allows the addition of new tools to the <i>Tools</i> list (→ page 185, Adding / editing Tools).
<i>Delete Element</i>	Clicking on this button removes the selected tool from the list.
<i>Edit</i>	Clicking on this button allows you to edit the settings for the tool selected in the <i>Tools</i> list (→ page 185, Adding / editing Tools).
	These buttons can be used to change the position of a program in the list (and also in the <i>Tools</i> menu).

Adding / editing Tools

- Select *Tools >Configure Tools...* option from the menu.
- Click on *Add* button.
The dialogue on the right opens. Refer to the table below for explanations.

<i>Title</i>	The name of the selected program file is automatically entered in this field when the <i>Browse</i> button has been used to select a program. This name can be changed as required. The entry in the <i>Title</i> field is used in the <i>Tools</i> menu.
<i>Program</i>	The location of the selected program file is automatically entered in this field when the <i>Browse</i> button has been used to select a program. The path to the selected program can also be entered manually.
<i>Parameters</i>	This field can be used to enter parameters for calling up the program. Refer to the manual of the respective program for details about the available parameters.

13.2 Configure I/O Cards

If a new standard I/O card and/or interlock I/O card (type: CIO-DIO24H card) has been installed in the computer, it must be configured using the [Configure I/O Cards...](#) tool.


Configuration must be performed again if a PCI card is removed, added or moved within the computer.



Warning

This tool is only necessary when using I/O cards with a PCI slot. Do NOT use this tool for ISA I/O cards, otherwise the communication with the ISA card may be lost.

- Select [Tools >Configure I/O Cards...](#) option from the menu.
A warning message relating to ISA I/O cards appears.
- Read and acknowledge the warning message that appears.
The *Instacal* program is opened with the adjacent window.
All installed I/O cards are displayed in the list. The cards are now set up for use with weldMARK™.
- Exit *Instacal* by selecting [File >Exit](#).

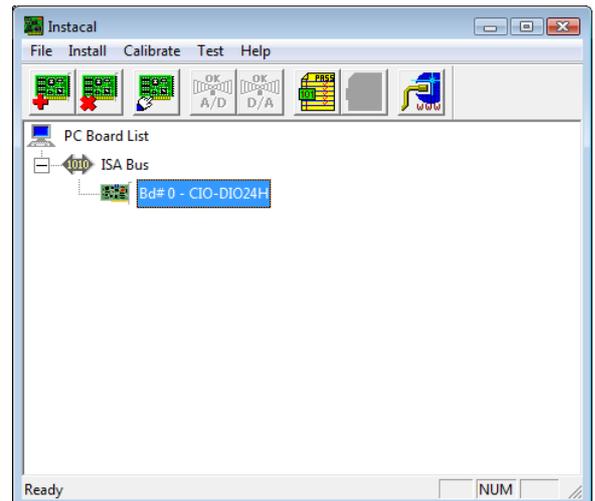

13.3 Laser Diagnostics Tool


The Laser Diagnostics tool can be used to diagnose and, if necessary, adjust the impact point and power of the marking laser you are using.



Warning

The laser beam can cause severe injury to the eyes and the skin. Make sure that there are no reflective objects in the beam path before starting a job and turning on the laser. Note that laser beams can be reflected even by apparently matt objects. All persons in the room must wear appropriate laser protection goggles, or the marking area must be covered completely. Follow the local safety regulations, which can be obtained from the person responsible for laser safety.

- Select **Tools > Laser Diagnostics...**.
The dialogue on the right opens. Refer to the table below for explanations.

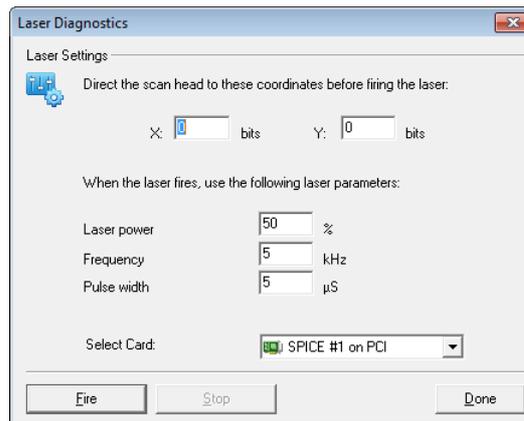

X:	The values in these input boxes determine the position to which the laser beam is directed after clicking the Fire button.
Y:	
Laser power % power	This input box determines the laser power.
Frequency	This input box determines the frequency of the laser modulation signal.
Pulse width	This input box determines the pulse width of the laser modulation signal.
Select Card	This selection field allows the user to map the control signals which are output to the laser, if more than one control card is installed.
Fire	Clicking this button turns the laser on immediately.
Stop	Clicking this button turns the laser off immediately.
Save and Exit	Clicking this button closes the Laser Diagnostics tool.


13.4 "I/O Card Diagnostics" Tool

This tool allows testing the ports of the standard I/O card and the interlock I/O card (type: CIO-DIO24H card). The tool is available only if one of these cards is installed.

Reading Inputs of the Standard I/O Card

The following function is available only if a standard I/O card is installed:

- Select *Tools > I/O Card Diagnostics...* option from the menu.
A warning message appears.
- Read and acknowledge the warning message that appears.
- Select the *Inputs* option under *Standard I/O Card*.
The dialogue on the right opens. Refer to the table below for explanations.

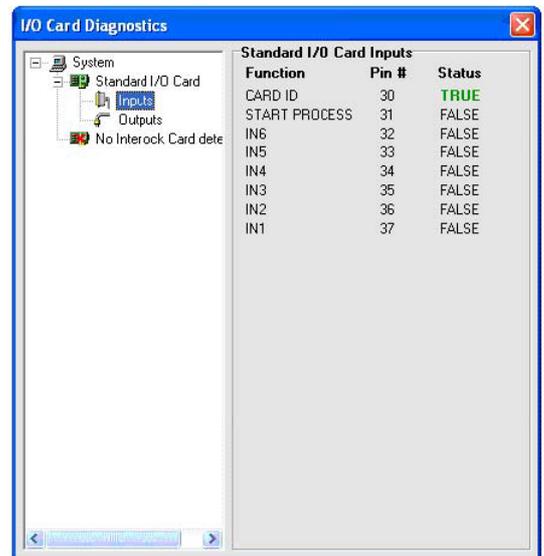


<i>Function</i>	This column lists the names used for the input ports in weldMARK™.
<i>Pin #</i>	This column lists the PIN numbers on the 37-pin connector of the I/O card.
<i>Status</i>	This column specifies the current status of the input ports. If the status is TRUE , the corresponding port is connected to GND.

Testing Outputs on the Standard I/O Card

The following function is available only if a standard I/O card is installed:

- Select *Tools > I/O Card Diagnostics...* option from the menu.
A warning message appears.
- Read and acknowledge the warning message that appears.
- Select the *Outputs* option under *Standard I/O Card*.
The dialogue on the right opens.

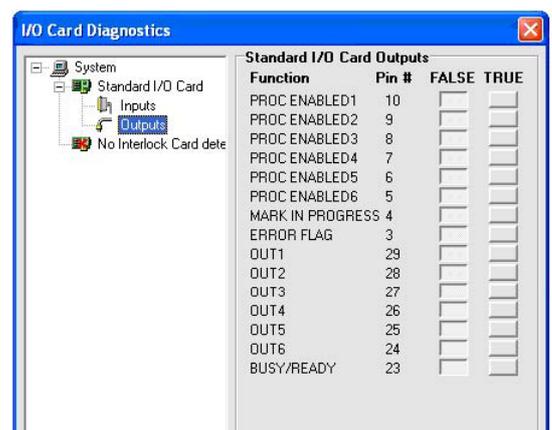


<i>Function</i>	This column lists the names used for the output ports in weldMARK™.
<i>Pin #</i>	This column lists the PIN numbers on the 37-pin connector of the I/O card.
<i>FALSE</i>	Clicking on these buttons allows you to switch the corresponding output to the status FALSE or TRUE for testing purposes. If the status is TRUE the corresponding input is connected to GND.
<i>TRUE</i>	

Reading Inputs from the Interlock I/O Card

The following function is available only if an interlock I/O card is installed:

- Select *Tools > I/O Card Diagnostics...* option from the menu.
A warning message appears.
- Read and acknowledge the warning message that appears.
- Select the *Inputs* option under *Interlock Card*.
The dialogue on the right opens.

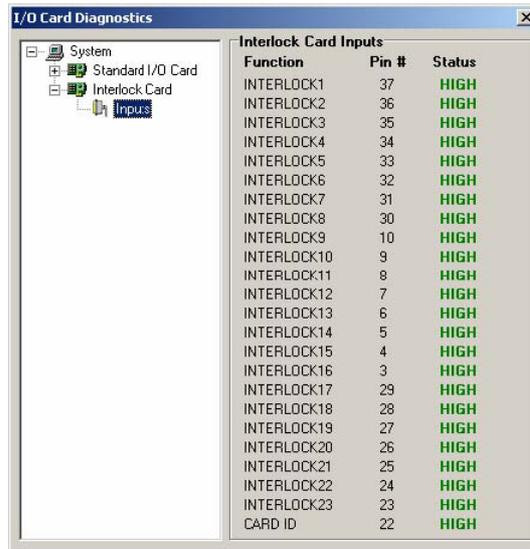

<i>Function</i>	This column lists the names used for the input ports in weldMARK™.
<i>Pin #</i>	This column lists the PIN numbers on the 37-pin connector of the I/O card.
<i>Status</i>	This column specifies the current status of the ports. Each interlock port can have the status <i>HIGH</i> or <i>LOW</i> . If the status is <i>LOW</i> , the corresponding port is connected to GND.

14 SYSTEM SETTINGS

This chapter provides an overview of the configuration of the weldMARK™ environment:

Preferences...	The settings for the weldMARK™ user interface can be changed throughout the system.	→ page 190, Preferences
Properties...	The current system properties for Windows and all of the configured hardware can be changed.	→ page 202, System Properties Displays
Globals...	The laser power, the marking speed and the position of the marking objects can be changed throughout the system.	→ page 203, Global Settings
Security	Access to weldMARK™ can be controlled using access rights and passwords.	→ page 204, System Security Settings
Backup.../ Restore...	All system settings used by weldMARK™ can be saved in a backup file and respectively loaded from a backup file.	→ page 205, Backing up System Settings


14.1 Preferences

The weldMARK™ system preferences are divided into groups and split across several tabs:

Marker	→ page 191, Settings for Marking Field	
Page Setup	→ page 191, Workspace Settings	
Hardware	weldMARK™ can be adapted to various deflection units, control cards and laser systems.	→ page 192, Hardware Configuration (without Control Card) → page 194, Hardware configuration (with control card)
Job Files	Job files can be automatically saved and loaded. In addition, you can also specify a folder in which jobs are saved to be loaded when using the Operator interface only and Touchscreen interface access levels.	→ page 198, Settings for the Job File
Host Interface	weldMARK™ can communicate with external programs using different protocols and parameters.	→ page 199, Editing the Host Interface Settings
Languages	The weldMARK™ user interface can be set to one of the supported languages.	→ page 199, Language Settings
LaserSaver	After a certain time has elapsed, the laser can be automatically blocked and/or the laser power reduced.	→ page 200, Setting the LaserSaver
Beam Home position	The scanner mirrors in the deflection unit can automatically be moved to a particular position at the end of a processing sequence.	→ page 201, Setting up the Beam Home Position
Motor control	The parameters for an installed motor control card can be adjusted.	→ page 222, Operating Stepper Motors

14.1.1 Settings for Marking Field


- Select *System > Preferences* option from the menu.
- Select *Marker* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

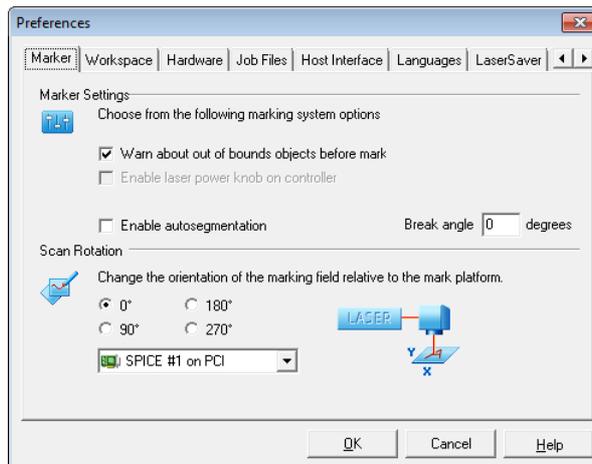

<i>Warn about out of bounds objects...</i>	If this function is enabled, a warning is displayed on the screen if one of the objects is located outside the marking field.
<i>Enable laser power knob on controller</i>	If this function is enabled, the laser power settings specified in the object profiles are ignored. The laser power can then be adjusted externally. This function can only be enabled if it has been released when installing the laser driver (→ page 213, Configuring a Laser Driver).
<i>Enable autosegmentation</i>	Activates the autosegmentation function.
<i>Break angle</i>	Indicates the critical angle between two vectors, from which the autosegmentation is used.
<i>Rotation</i>	Note the orientation of the marking field, which is represented in the figure next to the check boxes.

14.1.2 Workspace Settings

- Select *System > Preferences* option from the menu.
- Select *Workspace* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

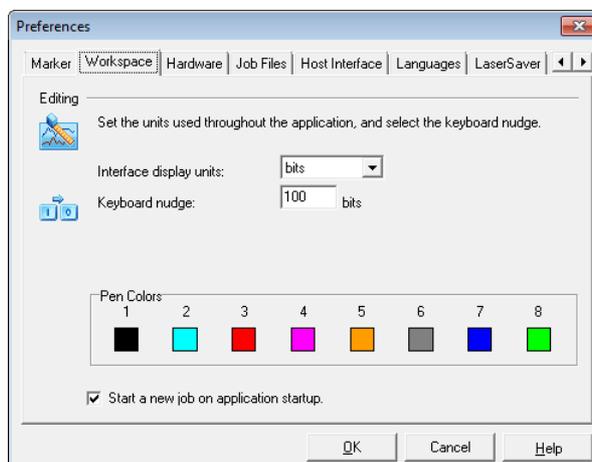


<i>Interface display units</i>	Selection box for the unit for the ruler display and for the input dialogs.
<i>Keyboard nudge</i>	This field determines how far an object is moved when it is nudged using the arrow keys (arrow + CTRL key).
<i>Start a new job on application startup</i>	If this function is enabled, a new job opens automatically when weldMARK™ is started.

14.1.3 Hardware Configuration (without Control Card)

If weldMARK™ does not find a control card when it is started for the first time, the defaults for the correction file and for the laser driver are automatically activated. If you want to create jobs without connected hardware, however, it is necessary to adjust the correction file for the deflection unit and the laser that you will use later. This means that weldMARK™ sets the correct workspace size and releases all options for the selected laser.

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab. The dialogue on the right opens. Refer to the table below for explanations.

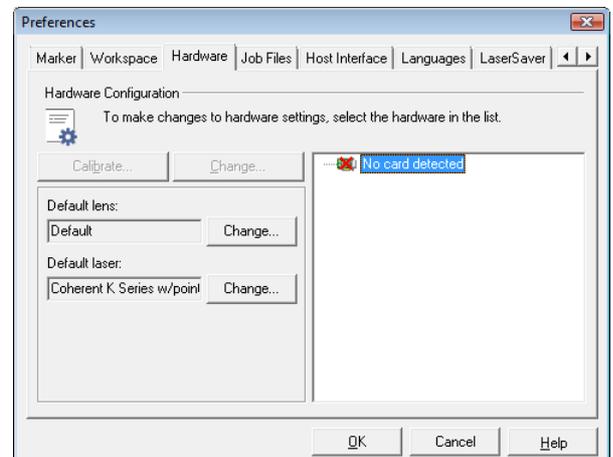


Default lens, Change... → page 192, Select Default Correction File

Default laser, Change... → page 193, Select Default Laser Driver

Select Default Correction File

This section describes how to select a correction file if no control card is installed.

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
- Click on *Change* button right to the *Default lens* list box. A warning message appears.
- Read and acknowledge the warning message that appears. The dialogue on the right opens. Refer to the table below for explanations.

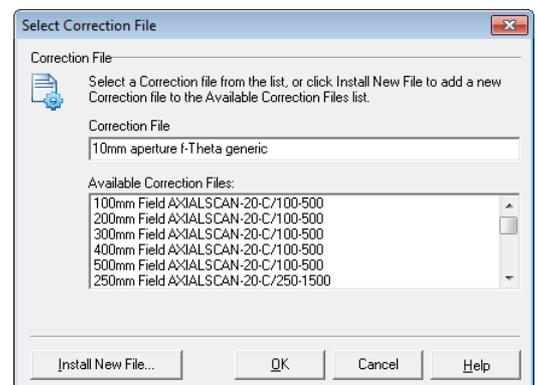

Correction File This text box displays the currently selected correction file.


Available Correction Files This list box displays all available correction files.

Install New File... Clicking on this button starts the wizard for installing a correction file that is not included in the list.

Select Default Laser Driver

This section describes how to select a laser driver if no control card is connected.

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
- Click on *Change* button right to the *Default laser* list box.
A warning message appears.
- Read and acknowledge the warning message that appears.
The dialogue on the right opens.
Refer to the table below for explanations.

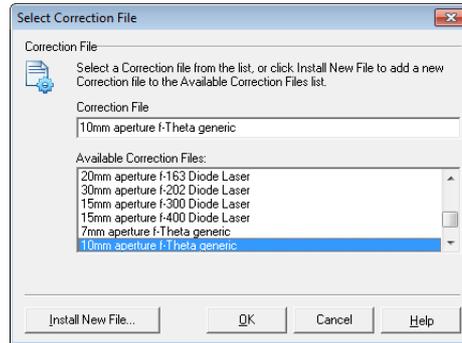


<i>Laser Driver</i>	This text box displays the currently selected laser driver file.
<i>Available Laser Drivers</i>	This list box displays all available laser driver.
<i>Install New Laser...</i>	Clicking on this button starts the wizard for installing laser driver file that is not included in the list.

14.1.4 Hardware configuration (with control card)

If a control card is installed, the currently set laser driver file and the correction file for the deflection unit can be viewed and, if necessary, changed as follows:

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
The dialogue on the right opens.
- Select the driver you want to change from the list.
Refer to the table below for explanations.

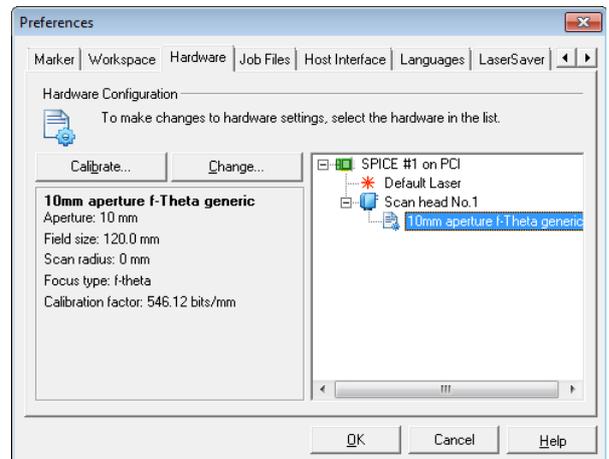


(1)	Control Card	<i>Configure...</i>	→ page 195, Configure Control Card
(2)	Laser Driver	<i>Configure...</i>	→ page 213, Configuring a Laser Driver
		<i>Change...</i>	→ page 195, Select Laser Driver
	Visible pointer	<i>Calibrate</i>	→ page 217, Calibrating the Visible Pointer
(3)	Scan Head	<i>Configure...</i>	Selectable only with a connected Dongle and after selecting a suitable scan head. → page 198, Settings for the Job File
		<i>Change...</i>	→ page 196, Select/change Type of Scan Head
(4)	Correction File	<i>Calibrate</i>	→ page 206, Calibrating the Marking Field
		<i>Change...</i>	→ page 192, Select Default Correction File

Configure Control Card

Only valid for SP-ICE control cards

- Select **System > Preferences** option from the menu.
- Select **Hardware** tab.
- Click on the required control card in the hardware list.
- Click on **Configure...** button.
- Select **Display** tab.
The dialogue on the right opens.
Refer to the table below for explanations.

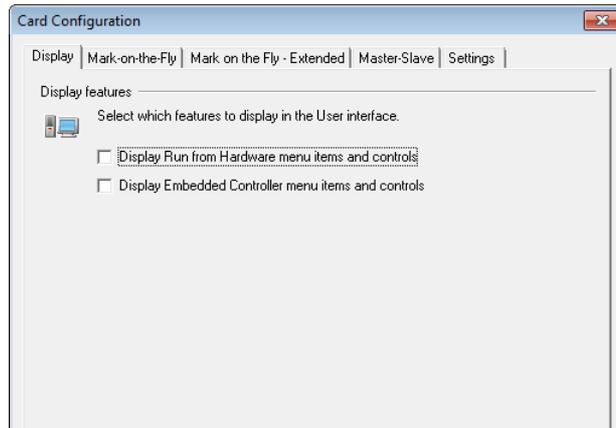


Display Run from Hardware menu items and controls	If this function is enabled, marking objects can be completely saved on the control card first and then executed directly from the card.
Display Embedded Controller menu items and controls	If this function is enabled, marking objects can be completely saved on a control card first and then executed directly from the card without a PC connection.
Mark on the Fly	→ page 180, The "Mark on the Fly" Option
Mark-on-the-Fly - Extended	→ page 181, Mark-on-the-Fly extended (2. channel)
Master-Slave	→ page 181, Master-Slave-Operating
Settings	Setting of minimum step period. <ul style="list-style-type: none"> ■ 20 µsec for RLC and SP-ICE-1 PCI PRO cards ■ 60 µsec for SP-ICE cards

Select Laser Driver

This section describes how to select a laser driver if a control card is connected:


- Select **System > Preferences** option from the menu.
- Select **Hardware** tab.
- In the hardware list, click on the laser driver file you want to change.
- Click on **Change** button.
- Read and acknowledge the security query that appears.
The dialogue on the right opens.
Refer to the table below for explanations.

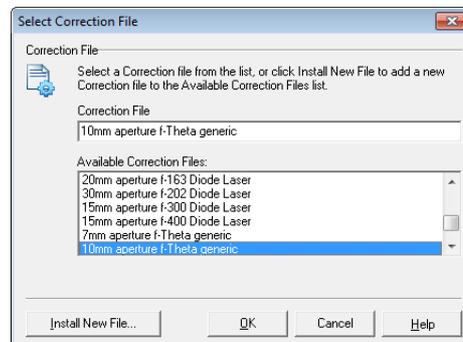

Correction File	This text box displays the currently selected laser driver file.
Available Laser Drivers	This list box displays all available laser driver files.
Install New Laser...	Clicking on this button starts the wizard for installing laser driver file that is not included in the list.

Select/change Type of Scan Head

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
- In the hardware list select the desired Scan Head.
- Click on *Change* button.
- Read and acknowledge the warning message that appears. The dialogue on the right opens. Refer to the table below for explanations.

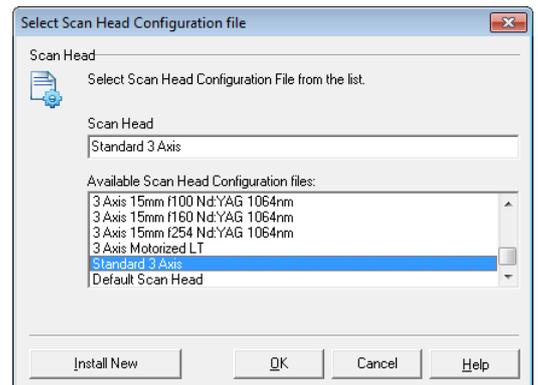


<i>Scan Head</i>	Shows the actually selected Scan Head.
<i>Available Scan Head Configuration files</i>	Selection list of all scan heads for which configuration files are installed. <i>Standard 2 Axis</i> : all standard 2-axis scan heads. <i>Standard 2 Axis galvo Calibration Sensor</i> : 2-axis scan head with auto calibration <i>Standard 3 Axis</i> : Type AXIALSCAN scan head without motor. <i>3 Axis Motorized LT</i> : Type AXIALSCAN scan head with motor. <i>3 Axis Motorized LT aperture focal length wave length</i> : Individually per FOCUSHIFTER UND F-Theta-Objektiv <i>3D field size AXIALSCAN description</i> : Individually 3D Marking
<i>OK</i>	Confirm the selection and returns to the hardware configuration. → page 194, Hardware configuration (with control card)

Configure 3-Axis Subsystem

Only valid for 3-axis subsystems with motorised linear translator

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
- In the hardware list select the desired Scan Head.
- Click on *Configure...* button. The dialogue on the right opens. Refer to the table below for explanations.

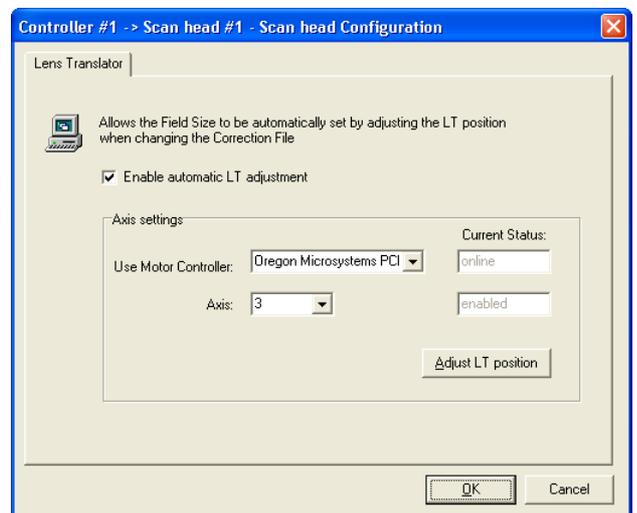

<i>Enable automatic LT Adjustment</i>	Enables the control of the linear translator.
<i>Use Motor Controller</i>	Allows selecting the motor controller.
<i>Axis</i>	Allows the mapping of the motor axis. For the linear translator, axis 3 is set as default.
<i>Adjust LT position</i>	→ page 197, Positioning of Linear Translator

Positioning of Linear Translator

Only valid for Scan Heads with motorised linear translator

The 3-axis subsystem has to be focused on the working plane manually prior to initial operation. The linear translator is gradually moves until the test pattern output from weldMARK™ is in focus


In case the working plane field size has been changed, the 3-axis subsystem has to be focused again.



Warning

The laser beam can cause severe injury to the eyes and the skin. Make sure that there are no reflective objects in the beam path before marking the test pattern and turning on the laser. Note that laser beams can be reflected even by apparently matt objects. All persons in the room must wear appropriate laser protection goggles, or the marking area must be covered completely. Follow the local safety regulations, which can be obtained from the person responsible for laser safety.

- Select **System > Preferences** option from the menu.
- Select **Hardware** tab.
- In the hardware list select the desired Scan Head.
- Click on **Configure...** button.
- Click on **Adjust LT position** button .
The dialogue on the right opens.
Refer to the table below for explanations.

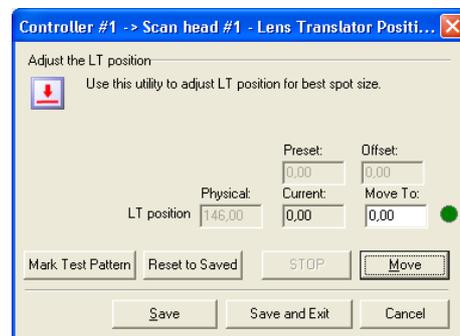


Beam Home position	Displays the linear translator's home position.
Offset	Displays the saved working position of the linear translator. It is indicated relative to the home position.
Physical	Displays the absolute position of the linear translator.
Current	Displays the actual position of the linear translator relative to the home position.
Move To	Field to enter a nominal value for the position of the linear translator.
Mark Test Pattern	Issues a test pattern for judgement of the focusing quality.
Reset	The value of Move To is reseted to the last saved position of the linear translator.
STOP	Stops the movement of the linear translator.
Move	Moves the linear translator to the position defined in field Move To .
Save	Saves the actual position of the linear translator.
Save and Exit	Saves the actual position of the linear translator and exits the adjustment window.

Select Correction File

This section describes how to select a correction file if a control card is installed:

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
- In the hardware list, click on the correction file displayed under the deflection unit you are using.
- Click on *Change* button.
- Read and acknowledge the security query that appears.
The dialogue on the right opens.
Refer to the table below for explanations.

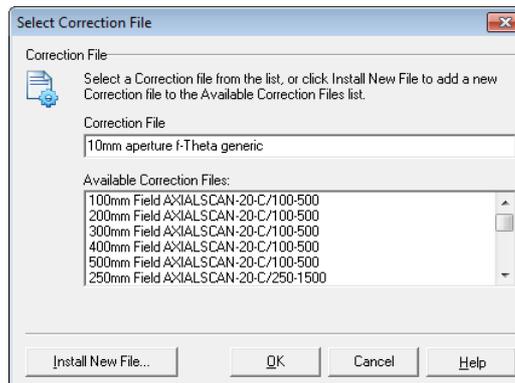


<i>Correction File</i>	This text box displays the currently selected correction file.
<i>Available Correction Files</i>	This list box displays all available correction files. <i>2-axis:</i> Name includes: Apertur, focal length and wave length. <i>3-axis:</i> Name includes: field size, description LTM.
<i>Install New File...</i>	Clicking on this button starts the wizard for installing a correction file that is not included in the list.

14.1.5 Settings for the Job File

The settings for job files are shown in the window below.

- Select *System > Preferences* option from the menu.
- Select *Job Files* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

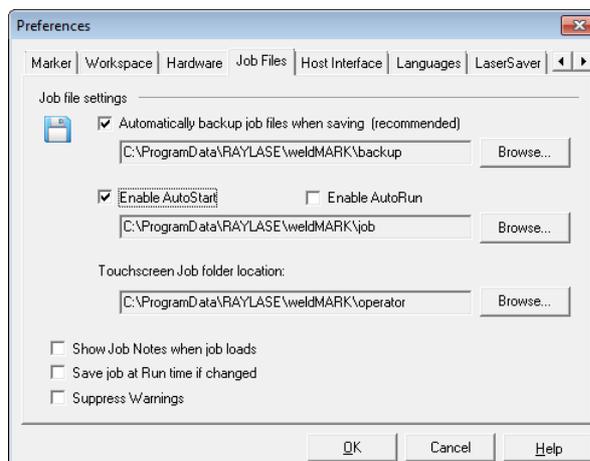


(1)	If this function is enabled, a backup file (with the extension .bak) is created automatically when saving a job file. This function is enabled by default. The backup file is saved in the specified folder. Clicking on <i>Browse</i> button allows you to select a different folder.
(2)	If this function is enabled, the job file specified in the text box will be opened automatically each time you start weldMARK™. Clicking on <i>Browse</i> button allows you to select a different job file.
(3)	When enabled, the text box specified job file is automatically executed after starting weldMARK™ (serialization).
(4)	This field specifies the location for jobs that can be loaded when working in the access levels <i>Operator interface only</i> and <i>Touchscreen interface</i> .
(5)	If this function is enabled, any job notes will be displayed automatically when a job is loaded (→ page 173, Job Settings - "Notes").
(6)	If this function is enabled, the job will be saved during execution, if it is changed during processing (serialization).
(7)	When enabled, warnings from weldMARK™ are suppressed.

14.1.6 Editing the Host Interface Settings

The host interface provides an interface that external programs can use to communicate with weldMARK™.

- Select *System > Preferences* option from the menu.
- Select *Host Interface* tab.
The dialogue on the right opens. For further information on the settings, refer to the RAYLASE Remote Interface Manual, which you will receive separately.


More details are in the "Remote" manual.

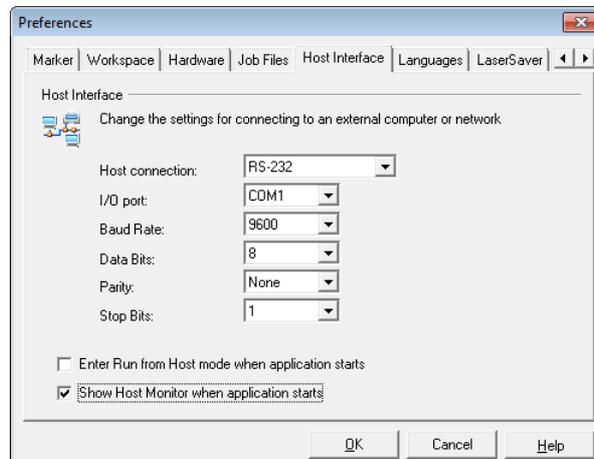

14.1.7 Language Settings

weldMARK™ supports various languages for the user interface. After installation, English (United States) is set as default language.

- Select *System > Preferences* option from the menu.
- Select *Languages* tab.
The dialogue on the right opens. Refer to the table below for explanations.

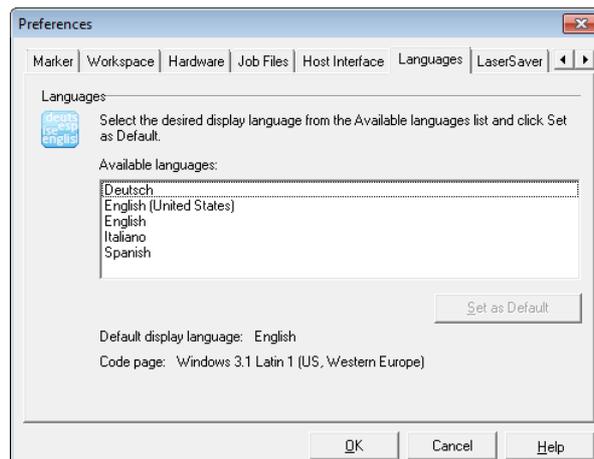


<i>Available languages</i>	This list box shows all available languages. When you change the language, you must first click on the <i>Set as Default</i> button and then restart weldMARK™. The user interface will then be available in the selected language. The selection depends on the installed language files (*.stl) and the code page selected in the operation system, in support of the language.
<i>Set as Default</i>	Clicking on this button sets the language selected in the list box as default language.

14.1.8 Setting the LaserSaver

After a certain time has elapsed, the laser can be automatically blocked and/or the laser power reduced. Furthermore, an optional error message can be set.

Note: The LaserSaver is intended for Nd:YAG lasers primarily.

- Select *System > Preferences* option from the menu.
- Select *LaserSaver* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

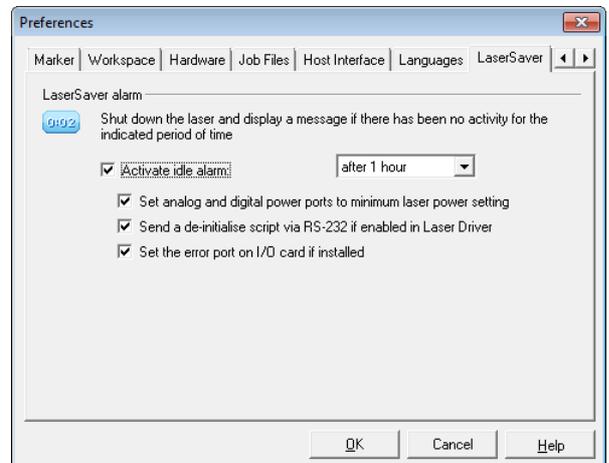


(1)	If this function is enabled, the time controlled LaserSaver is activated; options (2) to (4) are available then.
(2)	If this function is enabled, the interface that controls the laser power is set to its minimum settings when the time entered has been elapsed.
(3)	If this function is enabled, a corresponding script is sent to the laser via the RS233 port when the time entered has been elapsed. Further information on this function is available from the manufacturer.
(4)	If this function is enabled, the error port on the standard I/O card is set when the time entered has been elapsed.

14.1.9 Setting up the Beam Home Position

The scanner mirrors in the deflection unit can be moved to a particular position automatically at the end of a processing sequence. If this function is disabled, the mirrors remain at the end position of the object marked last.

- Select *System > Preferences* option from the menu.
- Select *Beam Home* tab.
The dialogue on the right opens.
Refer to the table below for explanations.

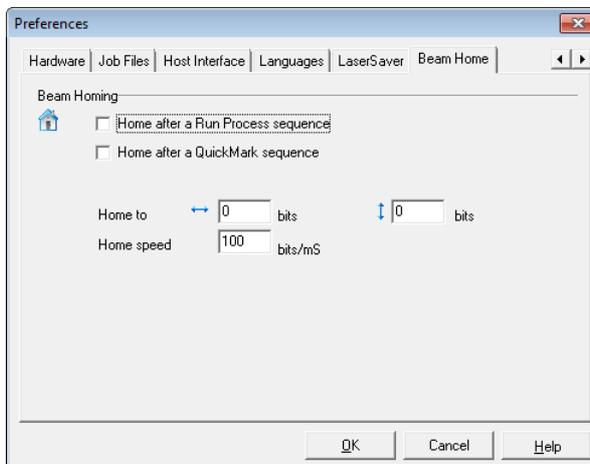

(1)	If this function is enabled, the beam moves to the home position entered at the end of a job initiated using the <i>Job > Run</i> command in the menu.	
(2)	If this function is enabled, the beam moves to the home position entered at the end of a job initiated using the <i>Job > QuickMark</i> command in the menu.	
<i>Home to</i>	These input boxes are used to define the home position.	The unit used can be changed (→ page 191, Workspace Settings).
<i>Display Speed</i>	This input box is used to specify the speed with which the beam moves to the home position.	

Note:


This option is not considered under the job setting *Run from hardware*.

14.2 System Properties Displays

You can display the software and hardware properties of weldMARK™:


Software properties

- Select *System > Properties...* option from the menu.
- Select *Windows* tab.
The dialogue on the right opens.

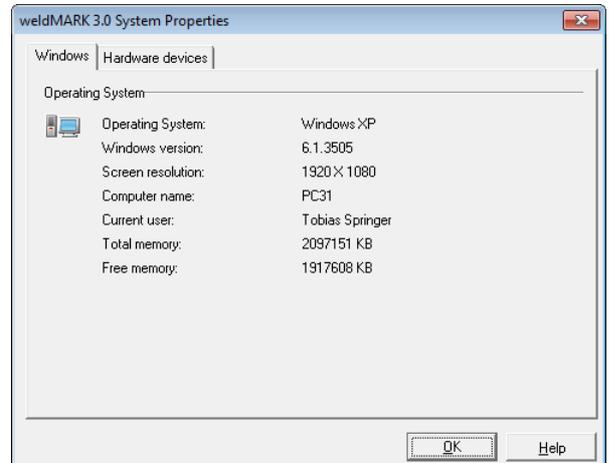

Hardware Properties

- Select *System > Properties...* option from the menu.
- Select *Hardware* tab.
The dialogue on the right opens.
You can view the respective hardware properties by opening the associated tree view.

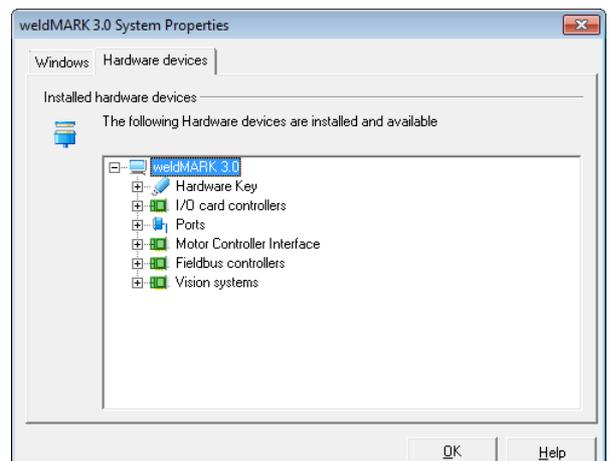


14.3 Global Settings

The "Globals..." allow weldMARK™ to be adapted to changed external conditions. For example, this can be necessary because of a slowly declining laser power or a slight change in the position of the objects to be marked. The windows to carry out these adaptations can differ in the various access levels.


Globals at the "All editing functions" access level:

- Select **System >Globals...** option from the menu.
The dialogue on the right opens.
Refer to the table below for explanations.

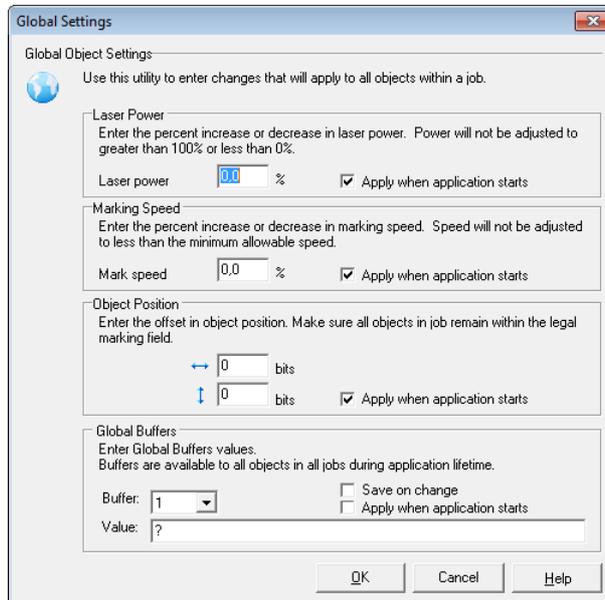

Globals at the "Touchscreen interface" access level:

- Touch the **OPTIONS** button.
- Touch the **ADJUST** button.
The dialogue on the right opens.
Refer to the table below for explanations.

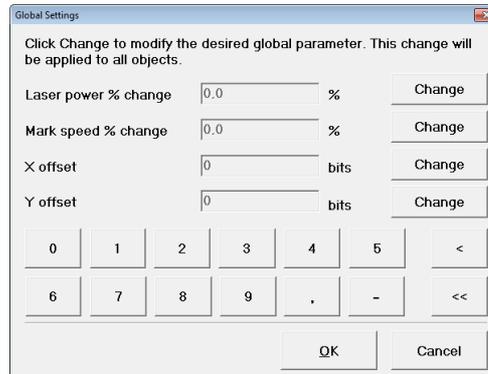

Laser power % power	Adapting the laser power or the marking speed affects all marking objects included in the job.
Mark speed % change	
X offset	All objects included in the job are marked offset by the X and Y values entered here.
Y offset	
Apply when application starts	Only available at "All editing functions" access level: If this function is enabled, the settings will be saved along with weldMARK™. Then they apply throughout the system.
Global Buffers	Usage → page 97, "Get string from memory buffer" string rule.
Buffer	Used to select the ten buffers.
Value	The buffer contents can be edited in this selection field.
Save on change	The buffer is overwritten after a change (e.g. serial number) with current value, if this option is enabled. This option applies to all ten buffers and will affect the values that are carried out via the REMOTE-Interface.
Apply when application starts	If this option is enabled, the initial values are read from the buffers each time weldMARK™ is started.


14.4 System Security Settings

14.4.1 Password Protection

weldMARK™ provides three access levels, which allow full or limited access to the program's functions (→ page 12, Access levels). Changing the access level can be protected by a password.

- Select *System >Security >Change Password* option from the menu.
If a password has been entered already, you will be prompted to enter it.

The dialogue on the right opens.
Refer to the table below for explanations.

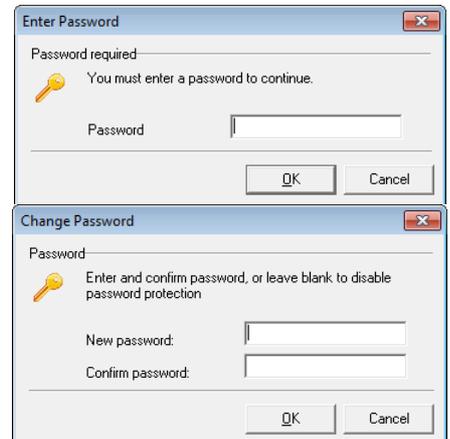

<i>New password</i>	Enter the password of your choice in the input boxes. The password can consist of any string of characters.
<i>Confirm password</i>	If you want to disable password protection, do not enter a password.

14.4.2 Job Files for restricted Access Levels

At the *Operator interface only* and *Touchscreen interface* access levels, you can only load jobs that are located in the preset folder. The folder set during installation of weldMARK™ can be changed (→ page 198, Settings for the Job File). All jobs which should be accessible at the restricted access levels must be stored in this folder.


14.5 Backing up System Settings

The entries in the operating system's registry can be saved in a backup file. This backs up the entries or allows to transfer them to a different weldMARK™ system.

14.5.1 Backing up System Settings

- Select **System >Backup...** option from the menu.
- Select the folder where you want to save the backup file.


The system settings will be saved in the file "system.rbk".

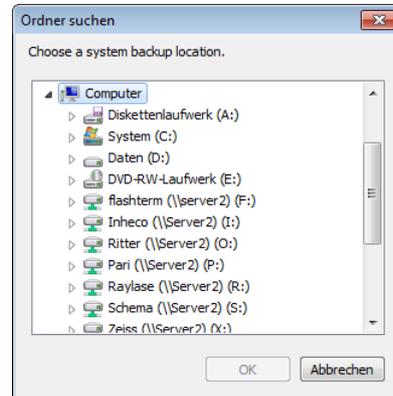

14.5.2 Restoring System Settings

Note that the following procedure overwrites all existing system settings in the weldMARK™ system!

- Select **System >Restore...** option from the menu.
- Browse to the file to be loaded - **system.rbk**.
- Select the file and click **Open**.
The system settings saved in the backup file are loaded.

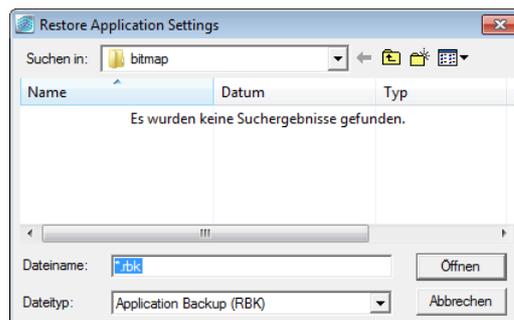

15 CALIBRATING THE MARKING FIELD

Because of the construction of the X/Y deflection units and the optical properties of F-Theta lenses, a distorted marking field is output. Therefore, a specific correction file is provided for each deflection unit, which allows the software to compensate this distortion. Further information on field distortion can be found in the application manual available by RAYLASE.

15.1 Correction of Mechanical Tolerances~

The type-specific field distortion of a deflection unit is compensated automatically when the corresponding weldMARK™ correction file has been assigned. However, because of laser divergence, optical and mechanical tolerances every deflection unit can also produce its own individual field distortion. The procedures below allow the compensation of this distortion as well.

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
- In directory tree, select the lens under the deflection unit you want to calibrate.
- Click on *Calibrate* button.




Warning

The marking is activated, if this symbol appears in the following diagram.

The laser beam can cause severe injury to the eyes and the skin. Make sure that there are no reflective objects in the beam path before starting a job and turning on the laser. Note that laser beams can be reflected even by apparently matt objects.

All persons in the room must wear appropriate laser protection goggles, or the marking area must be covered completely. Follow the local safety regulations, which can be obtained from the person responsible for laser safety.

15.2 The Correction-File Calibration Wizard

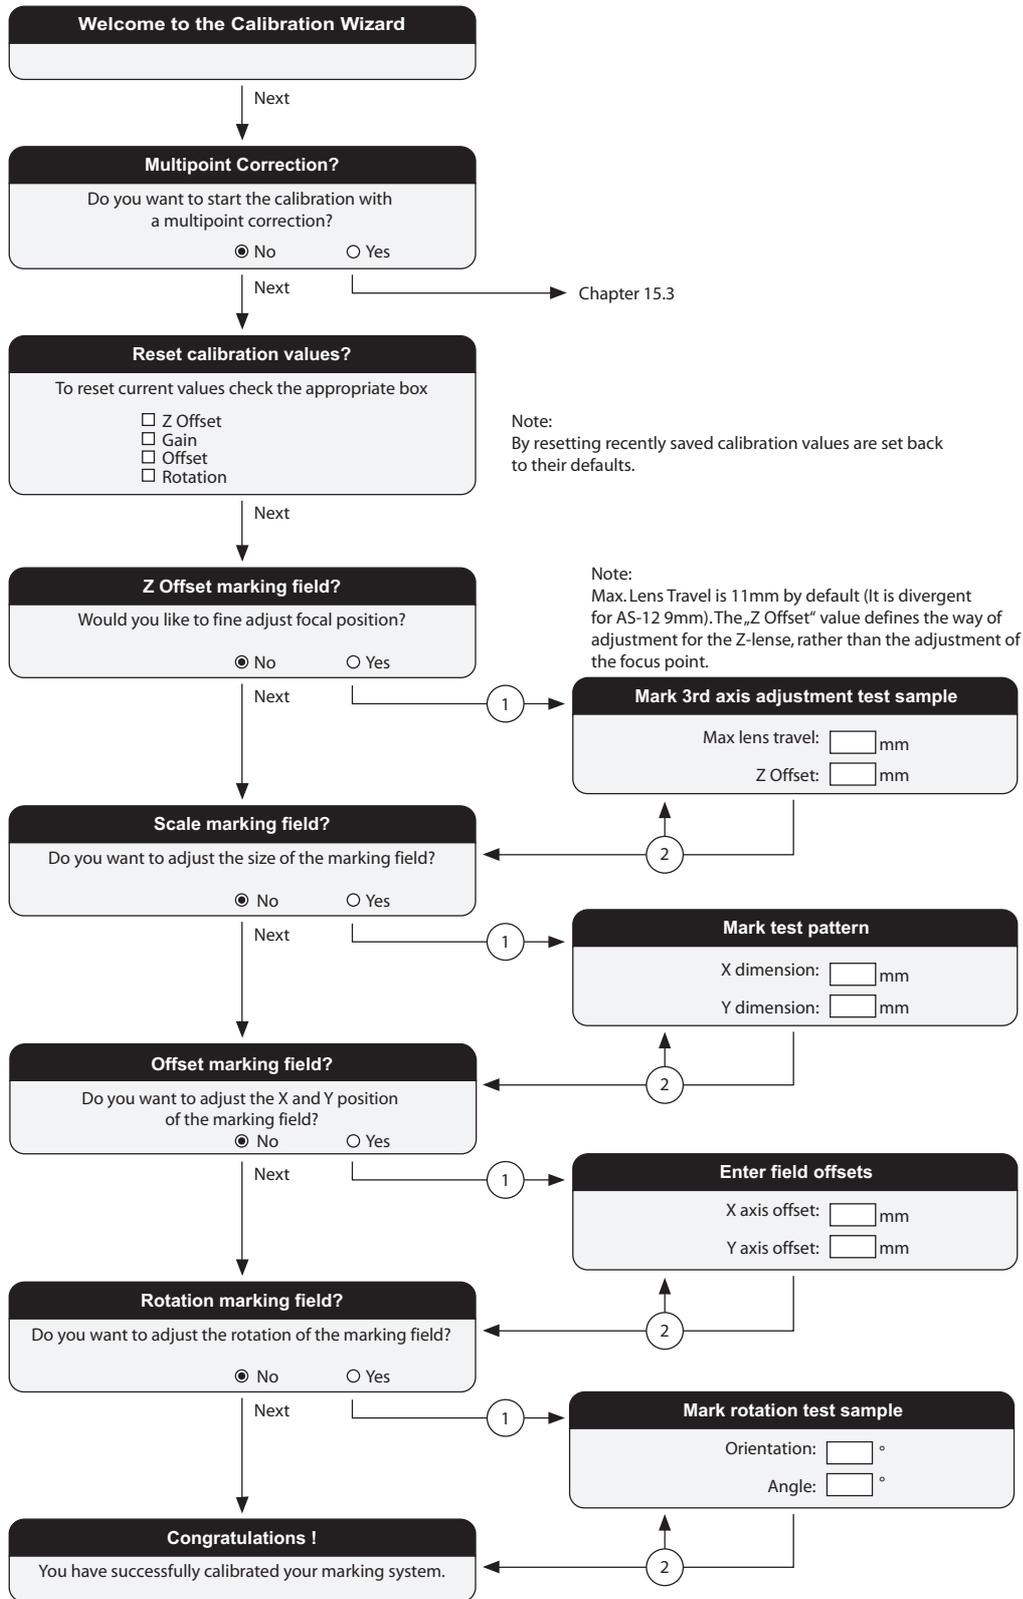

1 - place test pattern
- mark test pattern
⚠ The parameters of the „test pattern“ profile will be used for marking.

2 - mark test pattern repeatedly
- Check calibration
⚠


15.3 Multipoint Correction

The multi-point correction is a field-correction based on correction files. More points are taken into account by dividing the field with horizontal and vertical lines into squares. The points of contact can be changed in order to achieve correction of the field distortion.


Important Note:

The multipoint correction must be executed with 0 degrees field orientation!

- After starting the calibration wizard, select **Yes** for the multipoint correction and then click the **Next** button.

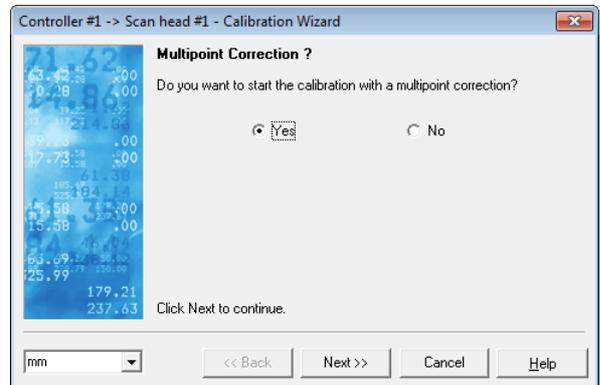


- Previous calibration values can be reset by activating the corresponding checkboxes and clicking on the **Next** button.
- It is recommended to reset the parameters **Gain**, **Offset** and **Rotation**.
- If necessary, select **Use new Correction File** to create a new correction file.

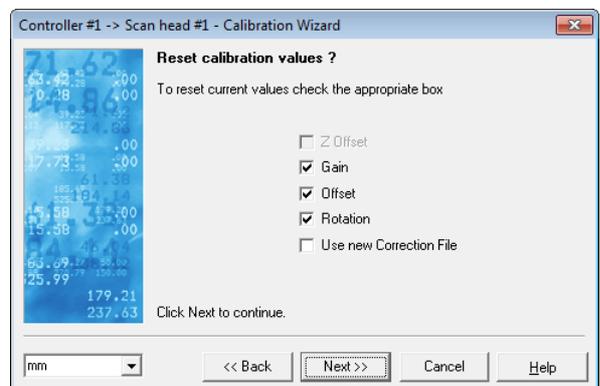


15.3.1 Creating a new Correction File



- Choose a name for the correction file.
- The specified name can not be empty and not a name of an existing file.
- Click the **Next** button to continue with the multipoint correction.

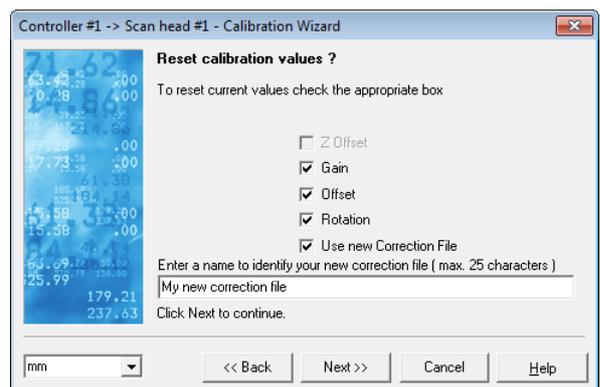

15.3.2 Performing the Multipoint Correction

- The dialogue on the right opens.
The following table shows all parameters.

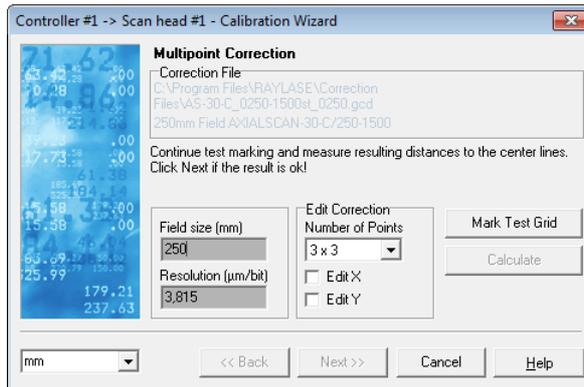

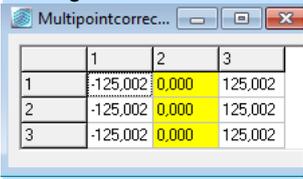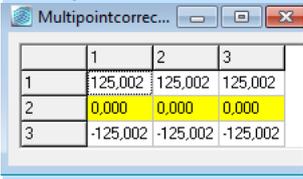
<i>Field size(mm)</i>	Setting the field size in mm
<i>Resolution (µm/bit)</i>	Setting the resolution in µm/bit
<i>Edit Correction</i>	The of the grid to be marked, and the correction for the x- and y-axis can be set here.
	<i>Number of Points</i> Number of points for the correction. Available sizes are: 3x3, 5x5, 9x9, 11x11, 17x17, 33x33, 65x65.
	<i>Edit X</i> Setting the correction on the x-axis 
<i>Edit Y</i> Setting the correction on the y-axis 	
<i>Mark Test Grid</i>	Starts the marking process. Prepare the work piece to mark the test-grid. Note that the complete marking field is used. Confirm the warning message when you are ready to mark, or cancel the operation.
<i>Calculate</i>	Verification of the changes on the x- and y-axis. An invalid area can be indicated as the case may be.


15.4 Adding a new Correction File

This wizard enables the import of correction files into the standard correction folder and if only the gcd-file is present the txt-file will be created. Information in the txt-file will be displayed in weldMARK™ while loading.

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
- In the directory tree, click on the correction file of the deflection unit you want to optimize.
- Click on *Change* button.

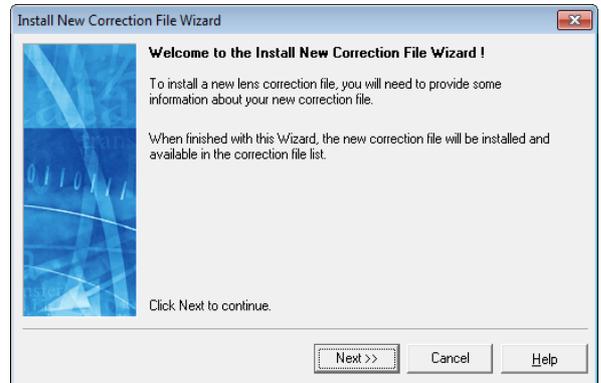


- Click on *Install New File* button. The following window is opened.

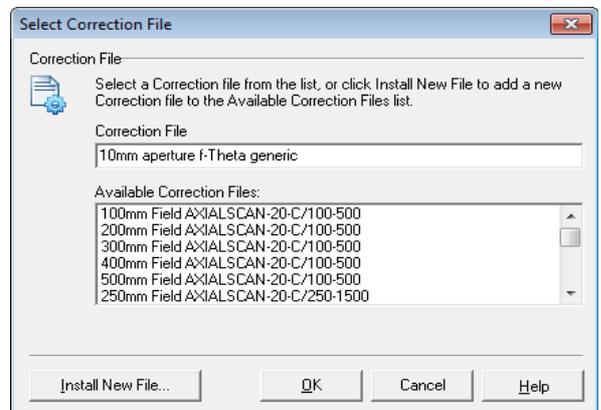


- Click on *Browse...* and select the correction file you want to add to the list.
- It will be imported in the correction-file folder, If both the gcd- and the txt-file are present Click on the *Next* button. The wizard will quit at this point.

or


- The wizard continues and creates a txt-file, if no gcd-file is present. Ist von der Korrekturdatei nur der gcd-File vorhanden, wird der Wizard weitergeführt um einen txt-File zu erstellen. Click on *Next* button to open the following window.

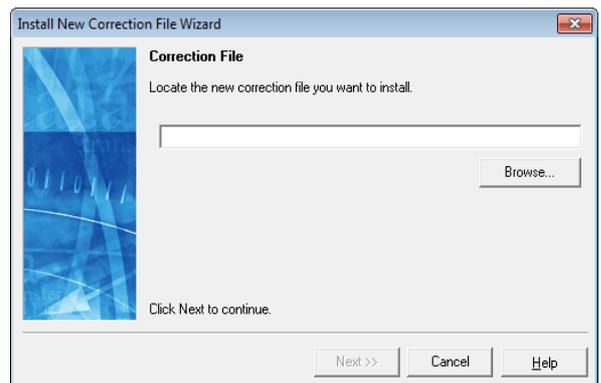


- Enter a name for the new correction file (max. 25 characters).
- Click on *Next* button.
The following window is opened.

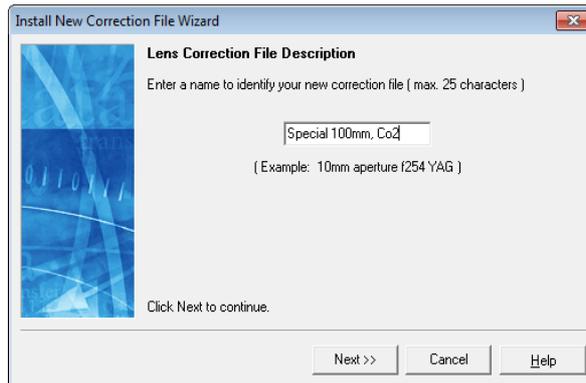


- Specify the type of focusing system used.
- Click on *Next* button.
The following window is opened.

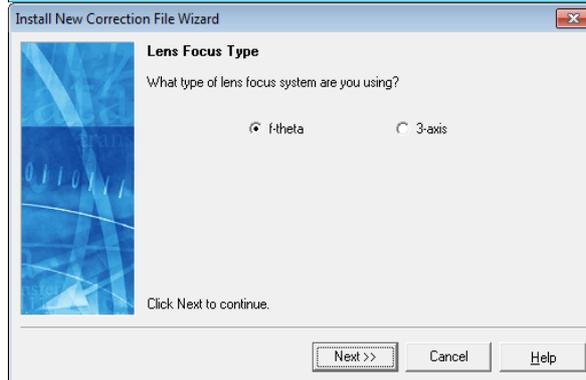

- Enter the calibration factor in bits/mm. This value can be obtained from the manufacturer of the deflection unit.
- Click on *Next* button.
The following window is opened.

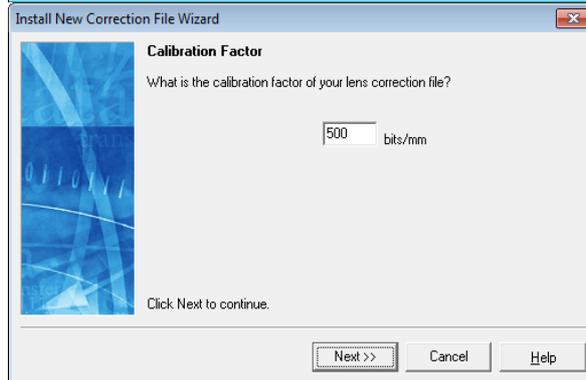


- Enter the focal distance of the lens used.
- Click on *Next* button.
The following window is opened.

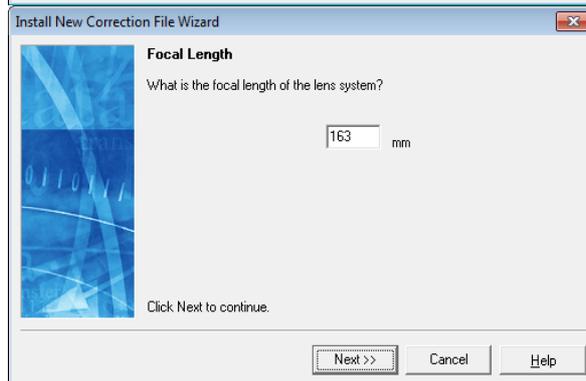

- Enter the input aperture of the deflection unit.
This value can be obtained from the manufacturer of the deflection unit.
- Click on *Next* button.
The following window is opened.

- Exit the wizard by clicking on *Done*.
The new correction file is added to the list.

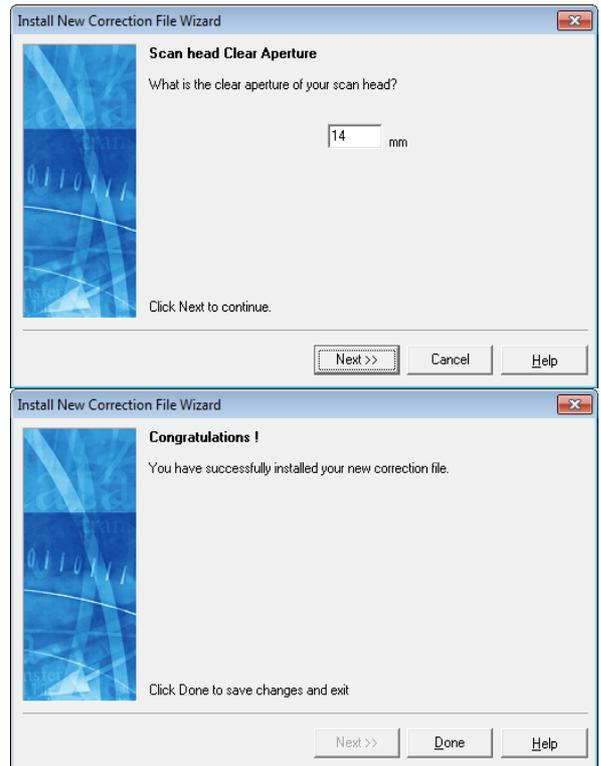


16 CONNECTING THE LASER


weldMARK™ supports SP-ICE, RLC-USB and RLC-PCI control cards. For details of how to connect a laser to the respective control card, refer to the corresponding control card manual.


16.1 Configuring a Laser Driver

weldMARK™ is supplied with drivers for various laser systems. If any changes to the settings of these drivers are necessary, the procedure is as follows:

- Select **System > Preferences** option from the menu.
- Select **Hardware** tab.
- In the directory tree, click on the laser driver file you want to configure.
Note: The directory tree is visible only if a scan head card is detected after starting the software.
- Click on **Configure...** button.
Note: The button is available only if a valid dongle is connected.
- Read and acknowledge the security query that appears.
The dialogue on the right opens.
- Click on **Next** button.
See the flow diagram on the following pages for settings.

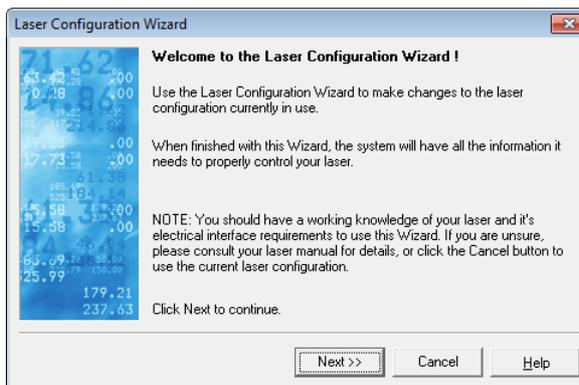

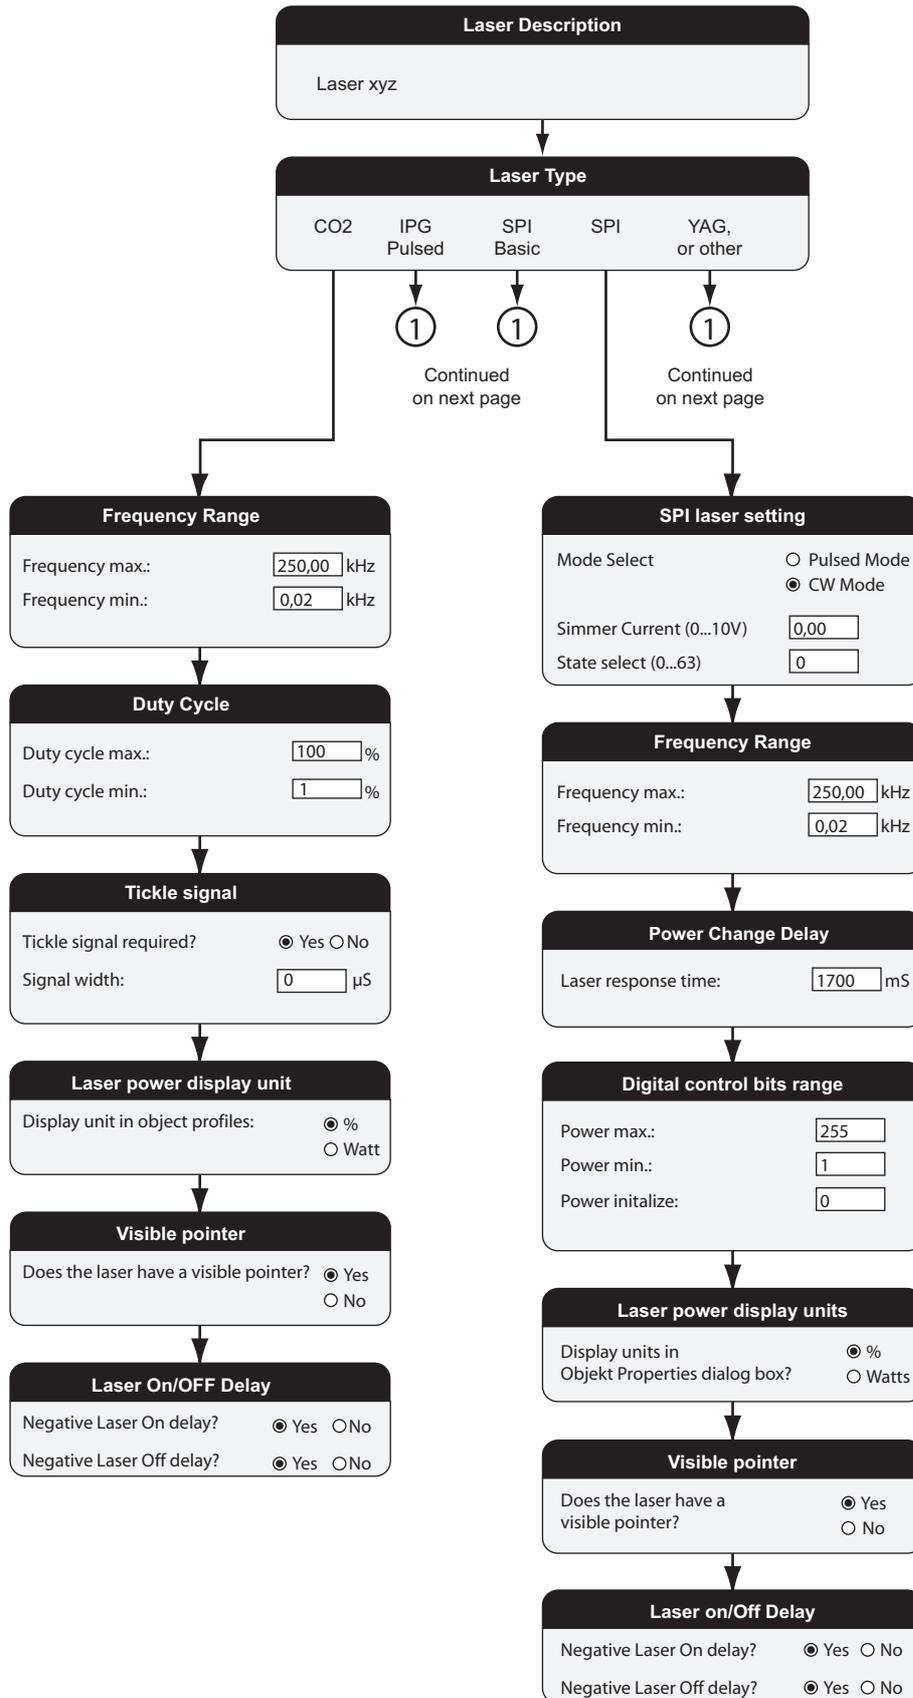

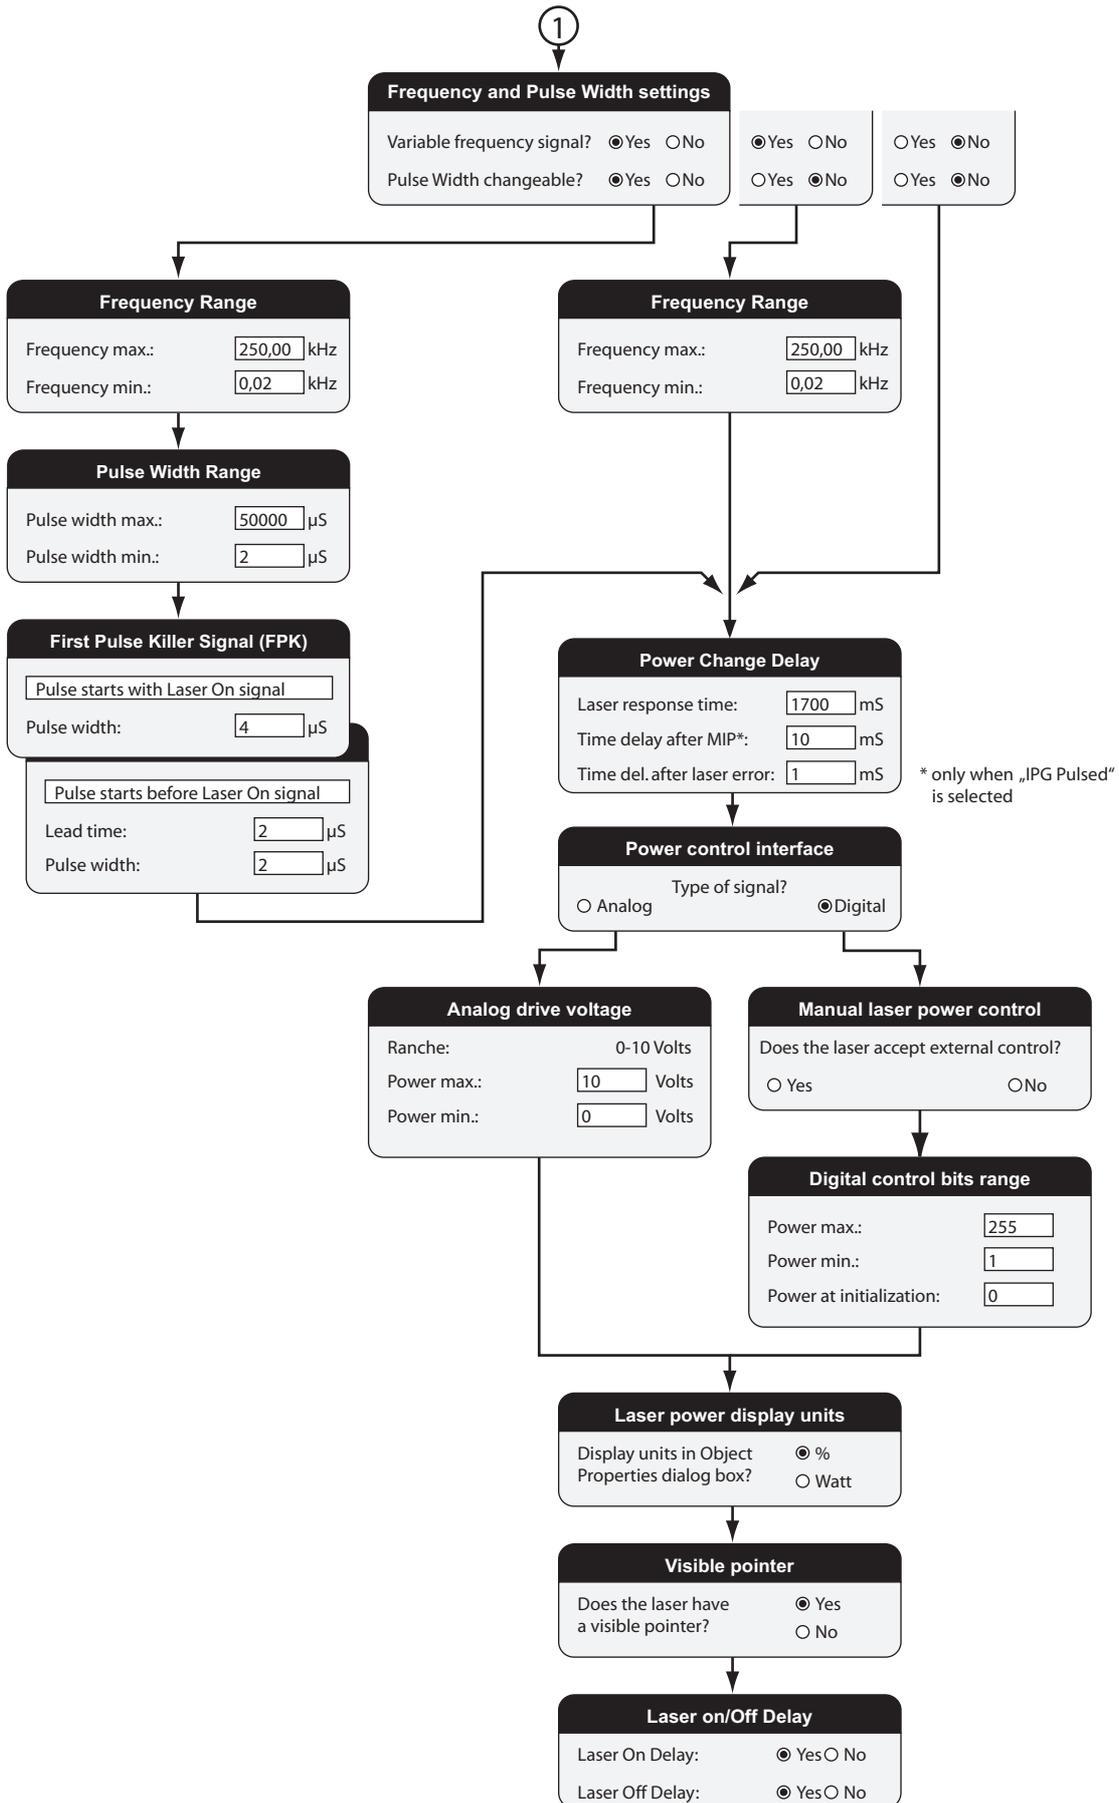

16.2 Adding a new Laser Driver

A laser driver is a file that contains the operating parameters for the laser. This file enables weldMARK™ to control the laser correctly and to display the accurate laser parameters.


weldMARK™ is supplied with various drivers for standard lasers. If the laser type you want to use is not included in the list of available laser driver files, you can add a new driver file:

- Select *System > Preferences* option from the menu.
- Select *Hardware* tab.
- In directory tree, click on the laser driver you want to configure.
Note: The directory tree is visible only if a scan head card is detected after starting the software.
- Click on *Change* button.
Note: The button is available only if a valid dongle is connected.
- Read and acknowledge the security query that appears.

- Click on *Install New Laser...* button.
The dialogue on the right opens.
- Click on *Next* button.
The following window is opened.





- Enter a name for the laser driver file in the input box.
This name will appear in the list of available laser drivers.
- Click on *Next* button.
- Continue with the procedure as described in the next section:
→ page 213, Configuring a Laser Driver

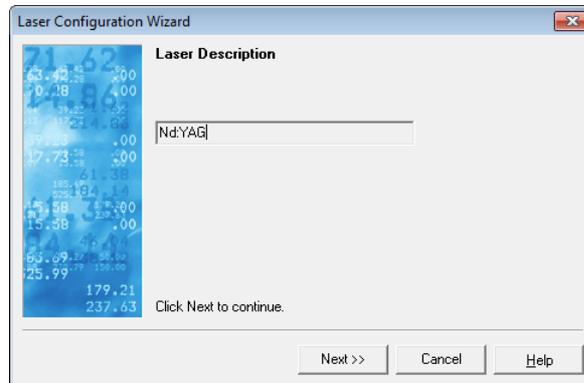

16.3 Calibrating the Visible Pointer

As a result of wavelength differences between the visible pointer and the marking laser, the position of the visible pointer in the marking field does not always correspond exactly to that of the marking laser. It is therefore necessary to calibrate the visible pointer. This chapter describes how to do this.

- If necessary, activate the visible pointer in the laser driver (→ page 213, Configuring a Laser Driver).
- Select **System > Preferences** option from the menu.
- Select **Hardware** tab.
- Click on the visible pointer in the directory tree.
- Click on **Calibrate** button.
- The dialogue on the right opens.
- Click on **Next** button.
- Place a sufficiently large sample in the center of the marking field and click on **Next**.
- The dialogue on the right opens.

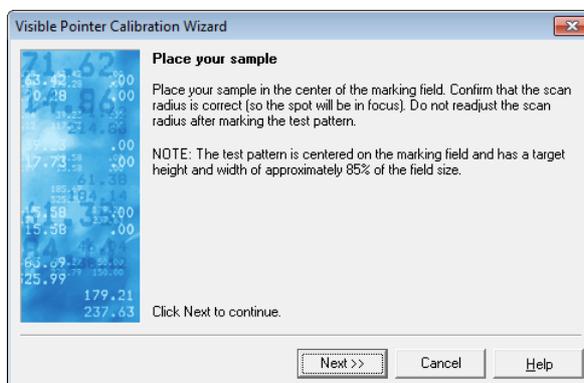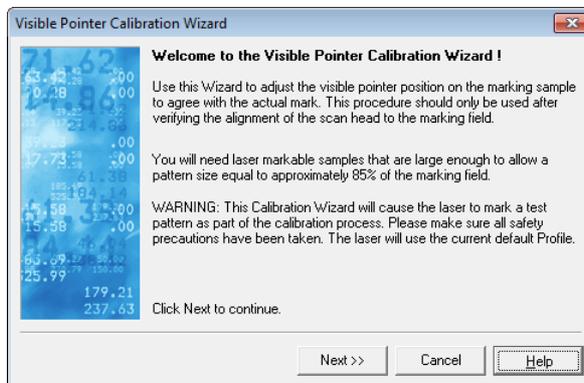


Warning

The next action activates the marking laser.


The laser beam can cause severe injury to the eyes and the skin. Make sure that there are no reflective objects in the beam path before starting a job and turning on the laser. Note that laser beams can be reflected even by apparently matt objects.

All persons in the room must wear appropriate laser protection goggles, or the marking area must be covered completely. Follow the local safety regulations, which can be obtained from the person responsible for laser safety.


- Click on **Mark test pattern** button.
- The pattern is marked using the parameters set in the test pattern profile.
- Click on **Next** button.
- The following window is opened.

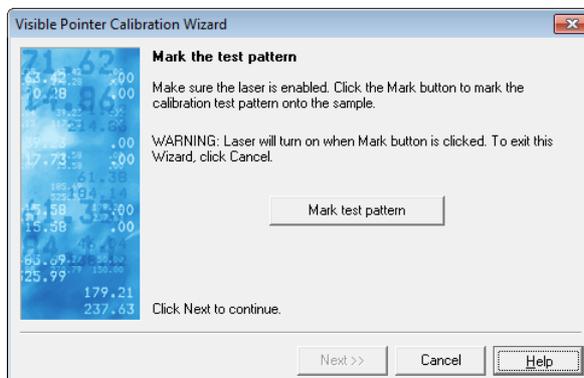

- Use the arrow keys to adjust the position and size of the test pattern shown by the visible pointer.
- Click on **Next** button.
The following window is opened.

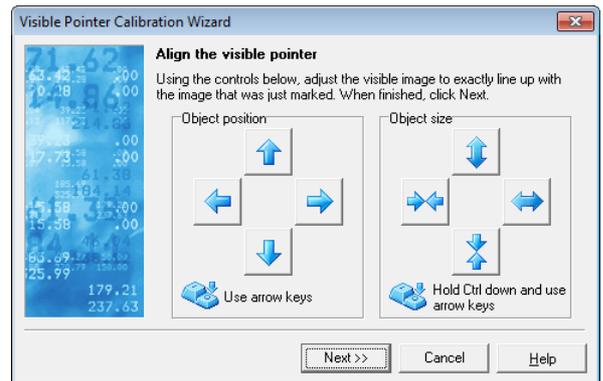

- Click on **Done** to exit the wizard.

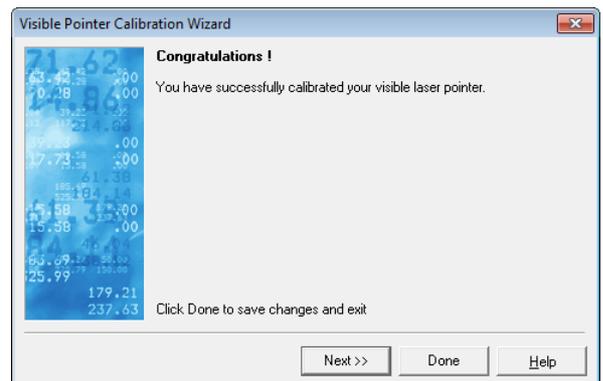

17 CONNECTING DEFLECTION UNITS

weldMARK™ uses the XY2-100 protocol to operate deflection units with RAYLASE control cards. Deflection units made by other manufacturers can also be used, provided they support this protocol. Detailed information on connecting the deflection units to the control cards can be found in the manual of the respective control card.

17.1 Connecting multiple Control Cards

weldMARK™ can operate with multiple control cards in one computer. Each card can be used to operate one laser and one deflection unit. This is only possible with control cards that have multi-card capability. With the SP-ICE control card, up to four cards can be installed in one computer.

Installation of control cards is described in the supplied manuals. Starting weldMARK™ after installation of control cards, the program detects the new cards and shows them in Job Manager.

17.2 Connecting multiple Deflection Units to a Control Card


If the SP-ICE control card is used, multiple deflection units and a laser can be connected to a single SP-ICE card. Output of the vectors to the individual deflection units is synchronized. For details, refer to the SP-ICE card manual.

18 CONNECTING TO EXTERNAL DEVICES

weldMARK™ supports various I/O interfaces for the communication with external devices. In addition, weldMARK™ can be operated with up to four stepper motor controls.

18.1 Standard I/O Card / Interlock Card

weldMARK™ uses the same card type as the standard I/O card and the interlock card. The mode is set by a bridge from GND to the corresponding pin (CARD ID). Depending on the mode, it results in one of the following pin assignments:

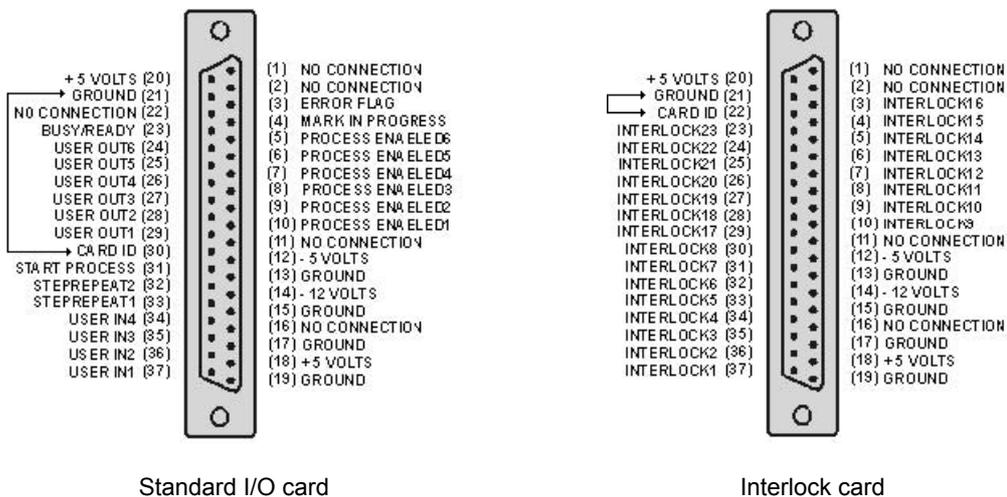

Signal		Explanation
User1-4	I	Trigger (>50mS LOW)
STEPREPEAT1-2	I	
START PROCESS	I	
PROCESS ENABLED1-6	O	
MARK IN PROGRESS	O	LOW during mark
ERROR FLAG	O	LOW on error
USEROUT1-6	O	programmable
BUSY/READY	O	programmable
INTERLOCK1-23	I	Trigger (>50mS LOW)

I = Input, O = Output

All inputs and outputs are TTL connected and have a pull-up resistance of 2.2kΩ. The ports must be electrically isolated from the connected hardware. Electrical interference pulses must be prevented as far as possible. When using a relay a recovery diode has to be used. The connecting cables must be shielded and kept as short as possible. Moreover the shield must be connected to the computer housing.

I/O card

The optional standard I/O card allows job sequences to be controlled by external signals using automation objects. In addition, weldMARK™ can use automation objects to output control signals to operate external components.

Interlock Card

The optional interlock card enables weldMARK™ to respond to interlock signals from external components. Each interlock input (INTERLOCK1 to INTERLOCK23) can be configured as HIGH or LOW when active. This configuration is carried out in the file "\Program Files\ray-lase\weldmark\bin\intmsg.txt", as shown below.

Interlock Messages	AssertLevel22=0
[ASSERTION]	[MESSAGE]
AssertLevel0=0	Msg0=Interlock 1 error !
AssertLevel1=0	Msg1=Interlock 2 error !
AssertLevel2=0	Msg2=Interlock 3 error !
AssertLevel3=0	Msg3=Interlock 4 error !
AssertLevel4=0	Msg4=Interlock 5 error !
AssertLevel5=0	Msg5=Interlock 6 error !
AssertLevel6=0	Msg6=Interlock 7 error !
AssertLevel7=0	Msg7=Interlock 8 error !
AssertLevel8=0	Msg8=Interlock 9 error !
AssertLevel9=0	Msg9=Interlock 10 error !
AssertLevel10=0	Msg10=Interlock 11 error !
AssertLevel11=0	Msg11=Interlock 12 error !
AssertLevel12=0	Msg12=Interlock 13 error !
AssertLevel13=0	Msg13=Interlock 14 error !
AssertLevel14=0	Msg14=Interlock 15 error !
AssertLevel15=0	Msg15=Interlock 16 error !
AssertLevel16=0	Msg16=Interlock 17 error !
AssertLevel17=0	Msg17=Interlock 18 error !
AssertLevel18=0	Msg18=Interlock 19 error !
AssertLevel19=0	Msg19=Interlock 20 error !
AssertLevel20=0	Msg20=Interlock 21 error !
AssertLevel21=0	Msg21=Interlock 22 error !
AssertLevel22=0	Msg22=Interlock 23 error !

In the lines [AssertLEVEL0](#) to [AssertLEVEL22](#), the active status of each interlock input can be set to "0" or "1".

A name using the lines [Msg0-Msg22](#) is assigned to each interlock input. This name is displayed by weldMARK™ if there is a corresponding interlock event.

In some situations, it may be necessary to use different interlock names and AssertLevels for different laser types. weldMARK™ supports this function by linking the interlock configuration file with the laser driver file. Please contact RAYLASE for further details.

18.2 Operating Stepper Motors


weldMARK™ can be operated with up to four stepper motor controls. For example, this allows the control of an XY table, a Z axis and a rotary axis.

Note: RAYLASE provides the OMS-Motor-Control-Card PCIx04 for activation. This cards allows activation only for stepper motors.

18.2.1 Installing the Plug&Play Drivers in Windows


The card for operating stepper motors must be installed in your computer.

- Start the computer.
Windows detects the new hardware and starts the wizard for installing the driver files.
- Click on *Browse* button.
- Select the directory ...\Program Files\raylase\weld-mark\oms.
- Click on the *Next* button.
Windows installs the OMS driver.

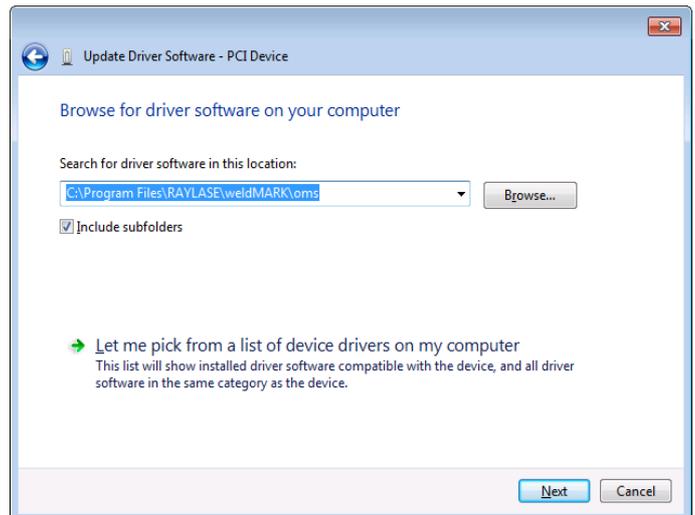

18.2.2 Configuring the Motor Control Settings


- Select *System > Preferences* option from the menu.
- Select *Motor Control* tab.
The dialogue on the right opens.
- Edit the settings as described in the next section.

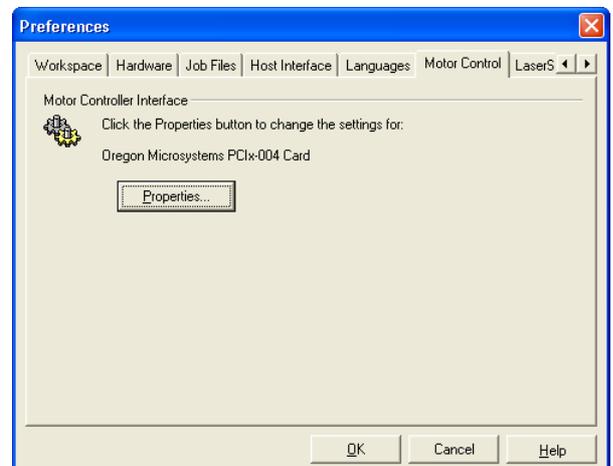

Editing the Motor Settings

The settings for the stepper motor control determine the default speed, the default acceleration and the functions for moving the individual axes and moving to the home position.


- Select *System > Preferences* option from the menu.
- Select *Motor Control* tab.
- Click on *Properties* button.
- Select *Controller Settings* tab.
The dialogue on the right opens.
The displayed values are default settings used with motorized linear translators.

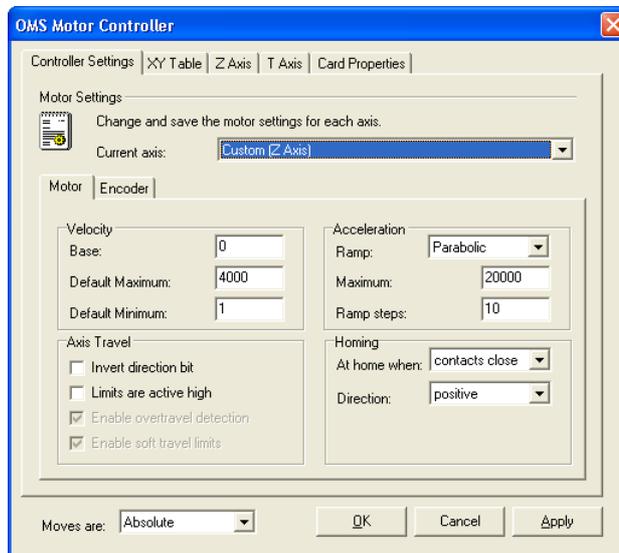

<i>Current axis</i>		This list box can be used to select the required axis.
<i>Velocity</i>	<i>Base</i>	These input boxes can be used to determine the basic, maximum and minimum speed of the stepper motor.
	<i>Default Maximum</i>	
	<i>Default Minimum</i>	
<i>Acceleration</i>	<i>Ramp</i>	These input boxes can be used to determine the acceleration characteristics, the maximum acceleration and the number of acceleration steps.
	<i>Maximum</i>	
	<i>Ramp steps</i>	
<i>Axis Travel</i>	<i>Invert direction bit</i>	If this function is enabled, the direction of movement is inverted.
	<i>Limits are active high</i>	If this function is enabled, the status of the limit switch is set from active LOW to active HIGH.
	<i>Enable overtravel detection</i>	If this function is enabled, the limit switches are monitored during movement.
	<i>Enable soft travel limits</i>	If both, the <i>Enable overtravel detection</i> function and this function, are enabled the control card stops the axis when a limit switch is detected.
<i>Homing</i>	<i>At home when</i>	Status of the limit switch when the home position is reached.
	<i>Direction</i>	Driving direction of the movement unit when searching for the home position.
<i>Moves are</i>	<i>Absolute</i>	For destinations, the coordinates to which the movement unit should move are specified.
	<i>Relative</i>	For destinations, the distances by which the movement unit should move are specified.

Editing the Settings for the XY Table

- Select *System > Preferences* option from the menu.
- Select *Motor Control* tab.
- Click on *Properties* button.
- Select *XY Table* tab.
- Carry out the required changes. The dialogue on the right opens. Refer to the table below for explanations.

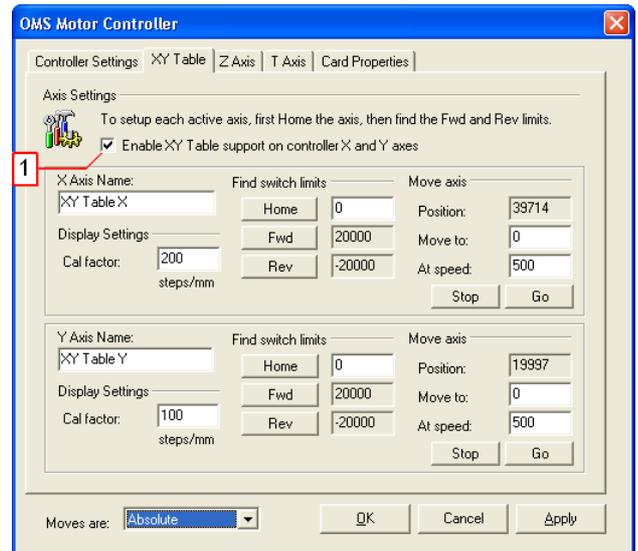

(1)	This check box can be used to activate the movement unit. Then, the corresponding functions in the program interface are available.	
	<i>Axis Name</i>	These text boxes can be used to specify the names of the movement unit X- and Y-axes. The names are used in the corresponding dialogs of the program interface then.
	<i>Cal factor</i>	Calibration factor for the axes in steps per millimeter.
	<i>Home</i>	Clicking on this button returns the movement unit to its home position. The home position is defined in the field right to the <i>Home</i> button.
	<i>Fwd</i>	Clicking on these buttons determines the limit switch position. As soon as the movement unit arrives at the limit switch, the position is saved and displayed. This information advises the user of the physical boundaries in the program sequence.
	<i>Rev</i>	
	<i>Timeout</i>	A time value can be entered in this field. If no limit switch is found before this time has elapsed, the movement unit stops as a precaution.
	<i>Go</i>	Clicking on this button moves the movement unit with the following parameters for testing purposes:
	<i>Move to</i>	This field can be used to specify the position to which the XY table moves when clicking on the <i>GO</i> button.
	<i>At speed</i>	This field can be used to specify the speed at which the XY table moves when clicking on the <i>GO</i> button.
	<i>Stop</i>	Clicking on this button stops movement of the motor immediately.
<i>Moves are</i>	<i>Absolute</i>	For destinations, the coordinates to which the movement unit should move are specified.
	<i>Relative</i>	For destinations, the distances by which the movement unit should move are specified.

Editing the Settings for the Z-axis (Laser Lift or Linear Translator)


- Select *System > Preferences* option from the menu.
- Select *Motor Control* tab.
- Click on *Properties* button.
- Select *Custom Axis* tab.
- The dialogue on the right opens. The displayed values are default settings used with motorized linear translators.



(1)	This check box can be used to activate the movement unit. Then, the corresponding functions in the program interface are available.		
<i>Z Axis Name</i>	This text box can be used to specify the name of the movement unit's Z-axis. The name is then used in the corresponding dialogs in the program interface.		
	<i>Display Settings</i>	<i>Rotary</i>	These check boxes specify whether you want to operate a rotary or a linear axis.
		<i>Linear</i>	
	<i>Cal factor</i>	Calibration factor for the axis in steps per millimeter.	
	<i>Home</i>	Clicking on this button returns the movement unit to its home position. The home position is defined in the field right to the <i>Home</i> button.	
	<i>Fwd</i>	Clicking on these buttons determines the limit switch position. As soon as the movement unit arrives at the limit switch, the position is saved and displayed. This information advises the user of the physical boundaries in the program sequence.	
	<i>Rev</i>		
	<i>Timeout</i>	A time value can be entered in this field. If no limit switch is found before this time has elapsed, the movement unit stops as a precaution.	
	<i>Go</i>	Clicking on this button moves the movement unit with the following parameters for testing purposes:	
		<i>Move to</i>	This field can be used to specify the position to which the Z table moves when clicking on the <i>GO</i> button.
<i>At speed</i>		This field can be used to specify the speed at which the Z table moves when clicking on the <i>GO</i> button.	
<i>Stop</i>	Clicking on this button stops movement of the motor immediately.		
<i>Moves are</i>	<i>Absolute</i>	For destinations, the coordinates to which the movement unit should move are specified.	
	<i>Relative</i>	For destinations, the distances by which the movement unit should move are specified.	

Editing the Settings for the Rotary Axis (Indexer)


- Select *System > Preferences* option from the menu.
- Select *Motor Control* tab.
- Click on *Properties* button.
- Select *Rotary* tab.
- The dialogue on the right opens. Refer to the table below for explanations.

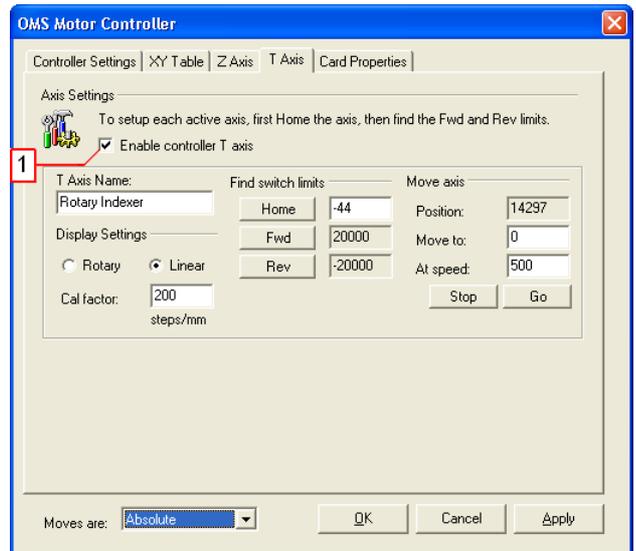

(1)	This check box can be used to activate the movement unit. Then, the corresponding functions in the program interface are available.	
	<i>T Axis Name</i>	This text box can be used to specify the name of the movement unit's rotary axis. The name is then used in the corresponding dialogs in the program interface.
	<i>Display Settings</i>	<i>Cal factor</i> Calibration factor for the axis in steps per millimeter.
	<i>Home</i>	Clicking on this button returns the movement unit to its home position. The home position is defined in the field right to the <i>Home</i> button.
	<i>Fwd</i>	Clicking on these buttons determines the limit switch position. As soon as the movement unit arrives at the limit switch, the position is saved and displayed. This information advises the user of the physical boundaries in the program sequence.
	<i>Rev</i>	
	<i>Timeout</i>	A time value can be entered in this field. If no limit switch is found before this time has elapsed, the movement unit stops as a precaution.
	<i>Go</i>	Clicking on this button moves the movement unit with the following parameters for testing purposes:
<i>Move to</i>		In this field, you can specify the position to which the movement unit moves when clicking on the <i>GO</i> button.
<i>At speed</i>		In this field, you can specify the speed at which the movement unit moves when clicking on the <i>GO</i> button.
<i>Moves are</i>	<i>Stop</i>	Clicking on this button stops movement of the motor immediately.
	<i>Absolute</i>	For destinations, the coordinates to which the movement unit should move are specified.
	<i>Relative</i>	For destinations, the distances by which the movement unit should move are specified.

Stepper Motor Control Properties


- Select *System > Preferences* option from the menu.
- Select *Motor Control* tab.
- Click on *Properties* button.
- Select *Card Properties* tab.
The dialogue on the right opens.
This window shows the stepper motor control properties.

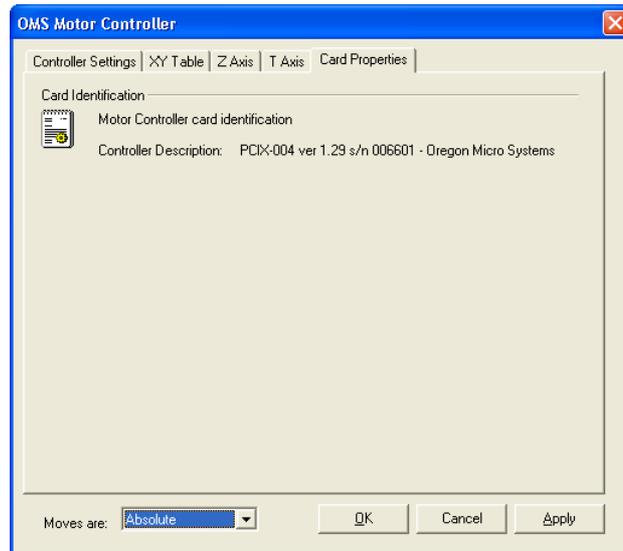

19 PROGRAMMABLE INTERFACES

19.1 Remote Interface

- Enter the following command lines (with variations on meaning), and send each line with the button *Send>>>*. weldMARK™ acknowledges each accepted command line with „ACK“.
 - SET,control,host
 - OPEN,file,c:\Ts00t.wmj
 - RUN
 - MODIFY,filed,01,123456
 - OFFLINE
 - SET,control,local

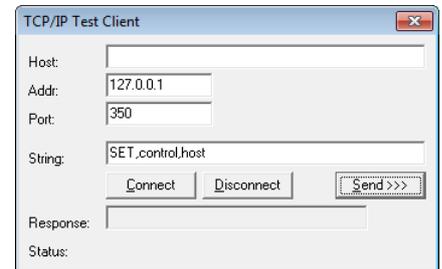

The remote interface enables the control of weldMARK™ by using a remote program. The external program can run jobs, dynamically change the content of marking objects and execute jobs. After each command executing, weldMARK™ sends a response to the remote program.

While weldMARK™ is being controlled by the remote program, the normal weldMARK™ user interface is blocked to prevent the user from intervening in processes that are in progress.


Detailed information about the remote interface can be found in the weldMARK™ Remote Interface manual.

19.1.1 TCP/IP Test Client

The TCP/IP test client is a tool for testing the weldMARK™ remote interface functionality. For further information about the remote interface refer to the corresponding manual. This is available separately from RAYLASE.

Starting the TCP/IP test client

- Start the program `tcpctestclient.exe`, located in the directory `...\Program Files\raylase \weldmark\bin`.
- If the TCP/IP test client is running on the same computer as weldMARK™, enter the IP address "127.0.0.1".
If the TCP/IP test client is running on a different (remote) computer, you must enter the IP address of the computer on which weldMARK™ is running in the *Addr.* field.
- Enter the value "350" in the *Port* field.
- Make sure that weldMARK™ is running on the local computer or on the remote computer.
- Click on the *Connect* button.
The TCP/IP test client connects to the weldMARK™ instance and is ready to exchange data with weldMARK™.

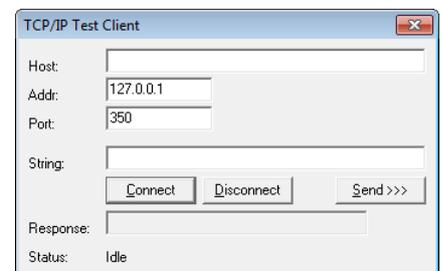

Note: For this example, weldMARK™ must be configured in such a way that the program will accept commands from the TCP/IP port. Detailed information can be found in the remote interface manual.

19.2 COMserver Interface

The COMserver Interface allows weldMARK functions to be used with an ActiveX Interface, to customize different user specific Automations. The wmCOM.exe is started instead of the wmgui.exe. Refer to the COMserver manual for more detailed information.

INDEX

Numerics

1D Barcode object	69
Defaults	69
Settings	70
2D Barcode object	73
Defaults	73
Settings	75
3-axis subsystem	137

A

Access Level	12
All Editing Functions	12
Change	24
Operator interface only	22
Touchscreen interface	23

Add

Barcode object	79
Bezier object	56
Drill object	82
Line object	47
Polygon object	51
Polyline object	53
Rectangle object	49
Text object	60

Automation Object

Custom Axis	131
Insert time delay	124
Rotary indexer	129
Serial Output	133
Set I/O Port	122
Show Messagebox	125
Wait for External Signal	120
XY Table	127

B

Backing up	
System settings	205
Barcode object	
Add	79
Settings	79
String	80
Tuner values	81
Beam Home position	201
Bezier object	
Add	56
Settings	56, 57
Bitmap graphic	
Importing	41
Source	45
Bitmap mode	44
Bitmap objects	
Defaults	46

C

CAD settings	
vector graphic object	39
Character Map	68
Character string rules	88
COM Automation Server	7
Configure Tools	184
Configuring	
I/O card	186
Control card	
Configuring	195
Correction file	
Adding	210
Selecting	198
Correction file - Select default	192
Customer Service	8

D

Deep processing applications	148
Deep Cutting	148
Deep Engraving	153
Trepanning	151
Default	145
Default profile	145
Modifying	145
Defaults	
1D Barcode object	69
2D Barcode object	73
Automation Object	120, 122, 125
Bitmap objects	46
Objects	27
Polygon object	51
Text object	59
Deflection Units	
Connecting	219
Dimensions	101
Dongle	9
Dongle variations	9
Dot Matrix Fonts	63
Drill objects	
Add	82
Settings	83

E

Entering a string	176
Events during a job	176
Export	
Profiles	147
Vector graphic object	40
Ext. Control	28
External Start	169

F

Fill spacing	86
--------------------	----

Focal plane	137
FOCUSSHIFTER	137
Full view	117
Function overview	7
G	
Global settings	203
Grid correction	210
Grid lines	114
Hiding	114
Settings	114
Showing	114
Guidelines	114
Hiding	114
Loading presets	116
Modify	114
Organizing presets	116
Saving presets	115
Showing	114
H	
Hardware	
Properties	202
Hardware Configuration	192, 194
Hardware requirements	9
Host interface	
Settings	199
I	
I/O card	221
Configuring	186
Diagnostics	188
Import	
Bitmap graphic	41
Job	182
Profiles	146
Vector graphic object	29
Interlock card	220, 221
Interlocks	174
J	
Job	
Printing	183
Running from Hardware	178
Stopping	175
Job file	
Settings	198
Job files	204
Job Initialize	168
Job Manager	13
Hiding	164
Showing	164
Job Notes	173
Job settings	164
Editing	164
External Start	169
Interlocks	174
Job Initialize	168
Notes	173
Page Setup	165
Repeat Process	166
Scan Head Offsets	172
Step & Repeat	167
Stop Mark	171
L	
Language settings	199
Laser	
Connecting	213
Laser Diagnostics Tool	187
Laser driver	
Adding	216
Configuring	213
Select default	195
Laser driver - Select default	193
Laser lift	225
Laser Safety	8
Laser Saver - Setting	200
Layers	39
Line object	
Add	47
Settings	47, 48
Linear translator	
Adjusting position	197
default settings	225
Linear Translator (motorised)	196, 197
M	
Manufacturer	8
Mark on the Fly	180
Enable	180
Tiling	109
Tracking Error Compensation	180
Marking field	
Calibrating	156, 206
Setting	191
Marking object	
Profile	136
Master-Slave-Operating	181
Meander	86
Menu	
File	13
Help	17
Job	16
Objects	15
Profiles	15
System	17
Tools	16
View	14
Menu bar	13
Motor control	222
Motor settings	223

N

Notes27

O

Object Fill

Set85

Object types26

Object-Manager20

Objects

Align100

Defaults27

Deselecting25

Fill84

Importing29

Locking26

Mirroring102

Moving26, 106

Nudging106

Positioning101

Properties27

Rotating106

Scaling102

Selecting25

Size changing103

Skewing107

Unlocking26

P

Page Setup20, 165

Password Protection204

Pens39

Polygon object

Add51

Defaults51

Settings51, 52

Polyline object

Add53

Settings53, 54

Setup55

Popup Menu21

Preferences190

Preview163

Print183

Profile

Marking object136

Profile Manager19

Hiding141

Showing141

Profiles135

Applying143

Copying143

Creating141

Exporting147

Importing146

Modifying144

Modifying the default145

organizing142

Properties

Hardware202

Objects27

Software202

Vector graphic object36

Q

QuickMark162

R

Radial text66

Rectangle object

Add49

Settings49, 50

Remote interface228

Repeat Process166

Restoring

System settings205

Rotary axis226

Rulers19

Run from Hardware176

Run Job175

S

Scan Head

Changing196

Configuring196

Selecting196

Scan Head Offsets172

Settings

1D Barcode object70

2D Barcode object75

Barcode object79

Beam Home position201

Bezier object56, 57

Drill objects83

Host interface199

Job files198

Language199

LaserSaver200

Line object47, 48

Marking field191

Polygon object51, 52

Polyline object53, 54

Rectangle object49, 50

System security204

Text object60, 61

Vector graphic object37

Workspace191

Skewing

Objects107

Skywriting138

Preview140

Software properties202

Source

Bitmap graphic45

Source file

Vector graphic object	38	CAD settings	39
Stand alone control card	179	Exporting	40
Stand alone operation	179	Importing	29
Standard-I/O card	220	Properties	36
Start	175	Settings	37
Step & Repeat	167	Source file	38
Stepper motors	222	Vector Graphic Designer	32
Stop Mark	171	Visible pointer	
String		Calibrating	217
Barcode object	80	W	
String rule		weldMARK	
Custom string	92, 98	Exiting	11
Get string from memory buffer ...	96, 97	Starting	11
Serialize w/current start value	95	Workspace	
Supply string at start	93	Setting	191
Supply string every mark	94	X	
TextMerge (multi-line objects)	90	XY Table	224
TextMerge (one line objects)	89	Z	
Use AutoDate	91	Z position	137
System properties	202	Zoom in	117
System security	204	Zoom out	117
System settings	190	Zoom tool	117
Backing up	205		
Restoring	205		
System tools	184		
T			
Tabs	20		
TCP/IP Test Client	7, 228		
Template	118		
Converting into a Marking Object ..	118		
Creating	118		
Text object			
Add	60		
Defaults	59		
Settings	60, 61		
String	63		
TextMerge			
Parameter	176		
Tiling	108		
Tiling before Marking	109		
Tiling before marking	111		
Title bar	13		
Tolerance correction	156, 206, 208		
Toolbars	18		
Tools			
Adding	185		
Editing	185		
Tracking Error Compensation	180		
Tuner values			
Barcode object	81		
U			
Unicode Character Map	68		
V			
Vector graphic object			